

# ***BOSE***<sup>®</sup>



---

 Lifestyle<sup>®</sup> 535/525 series III  
home entertainment systems

 Lifestyle<sup>®</sup> 235/135 series III  
home entertainment systems

---

Operating Guide | Betjeningsvejledning | Bedienungsanleitung | Bedieningshandleiding  
Guía de usuario | Käyttöohje | Notice d'utilisation | Manuale d'uso | Kezelési útmutató  
Instrukcijski priručnik | Operação Guia | Bruksanvisning

# Wichtige Sicherheitshinweise

---

## Wichtige Sicherheitshinweise entnehmen Sie der Setup-Anleitung des Systems.

### Wichtige Einhaltungsinformationen für die USA und Kanada

- Dieses Gerät erfüllt die Bestimmungen in Teil 15 der FCC-Vorschriften und die lizenzfreien Standards von Industry Canada. Der Betrieb unterliegt den beiden folgenden Bedingungen: (1) dieses Gerät darf keine Störungen verursachen und (2) dieses Gerät muss jegliche Störungen dulden, einschließlich von Störungen, die zu einem unerwünschten Betrieb führen.
- Dieses Gerät erfüllt die HF-Strahlungsexpositionsgrenzwerte der FCC und von Industry Canada für die allgemeine Bevölkerung.
- Dieses Gerät darf nicht zusammen mit anderen Antennen oder Sendern aufgestellt oder betrieben werden.

### Für SoundTouch-Drahtlosadapter:

- Dieses Gerät sollte mit einem Mindestabstand von 20 cm zwischen dem Gerät und Ihrem Körper aufgestellt und betrieben werden.

### • CAN ICES-3 (B) / NMB-3 (B)

Dieses Gerät der Klasse B entspricht den Anforderungen der kanadischen Richtlinie ICES-003.

### Informationen über Produkte, die elektrische Störgeräusche erzeugen

Dieses Gerät wurde getestet und erfüllt die Grenzwerte für digitale Geräte der Klasse B gemäß Abschnitt 15 der FCC-Vorschriften. Diese Grenzwerte wurden festgelegt, um einen angemessenen Schutz gegen elektromagnetische Störungen bei einer Installation in Wohngebieten zu gewährleisten. Dieses Gerät erzeugt und verwendet Hochfrequenzstrahlung und kann sie auch aussenden. Daher verursacht das Gerät bei nicht ordnungsgemäßer Installation und Benutzung möglicherweise Störungen des Funkverkehrs. Es wird jedoch keine Garantie dafür gegeben, dass bei einer bestimmten Installation keine Störstrahlungen auftreten. Sollte dieses Gerät den Radio- oder Fernsehempfang stören (Sie können dies überprüfen, indem Sie das Gerät aus und wieder einschalten), so ist der Benutzer dazu angehalten, die Störungen durch eine der folgenden Maßnahmen zu beheben:

- Richten Sie die Antenne neu aus.
- Vergrößern Sie den Abstand zwischen dem Gerät und einem Radio- oder Fernsehempfänger.
- Schließen Sie das Gerät an eine Steckdose in einem anderen Stromkreis als den Empfänger an.


Wenden Sie sich an einen Händler oder einen erfahrenen Radio-/Fernsehtechniker.

### Gilt für:

#### • Lifestyle® 535 und 525 Serie III Home-Entertainment-Systeme



Informationen über DTS-Patente finden Sie auf <http://patents.dts.com>. Hergestellt unter Lizenz von DTS Licensing Limited. DTS, das Symbol DTS und das Symbol zusammen sind eingetragene Marken und DTS Digital Surround ist eine Marke von DTS, Inc. © DTS, Inc. Alle Rechte vorbehalten.

 **DOLBY TRUEHD** Hergestellt unter Lizenz von Dolby Laboratories. Dolby und das Dolby Digital-Symbol sind Marken von Dolby Laboratories.

Entwickelt mit UEI Technology™ unter Lizenz von Universal Electronics Inc. © UEI 2000-2011.

Der Begriff HDMI und das HDMI-Logo sind Marken oder eingetragene Marken von HDMI Licensing, LLC in den Vereinigten Staaten und anderen Ländern.

iPhone und iPod sind Marken von Apple Inc., die in den USA und anderen Ländern eingetragen sind. Die Marke „iPhone“ wird mit einer Lizenz von Aiphone K.K. verwendet.

Xbox ist eine Marke der Microsoft Corporation.

TiVo ist eine Marke von Tivo, Inc. oder seinen Tochtergesellschaften.

Andere Marken sind das Eigentum der jeweiligen Inhaber.

©2014 Bose Corporation. Dieses Dokument darf ohne schriftliche Genehmigung weder ganz noch teilweise reproduziert, verändert, vertrieben oder auf andere Weise verwendet werden.

## Einführung

Über das Lifestyle®-System .....	5
Systemfunktionen .....	5
Wenn Sie Hilfe benötigen .....	5

## Bedienelemente und Anzeigen

Fernbedienung .....	6
Fernbedienung verwenden .....	6
Bedienelemente für die Navigation .....	7
Bedienelemente für Wiedergabe .....	7
Informationsanzeige .....	8
Leuchttaste auf der Fernbedienung .....	8
MORE-Tasten .....	9
Eine MORE-Tastenfunktion aktivieren .....	9
Definition der Tastenfunktionen .....	9
Bedienkonsole .....	11
Lautsprecher-Array (nur 135 Serie III-Systeme) .....	12
Acoustimass®-Modul (nur 135 Serie II-Systeme) .....	12

## Ein- und ausschalten

Ihr System starten .....	13
Fernsehgerät einschalten .....	13
Ihr System ausschalten .....	13

## Betrieb Ihrer Systemquellen

Eine Quelle auswählen .....	14
Fernsehen .....	15
Eine Set-Top-Box verwenden .....	15
Den Tuner im Fernsehgerät verwenden .....	15
Sendereinstellung .....	15
Audio-/Videogeräte wiedergeben .....	16
SoundTouch™ verwenden .....	16
Radio auswählen .....	17
Sendereinstellung .....	17
Voreingestellten Sender speichern .....	17
Voreingestellten Sender erneut aufrufen .....	17
Voreingestellten Sender löschen .....	17
Optionale Radiotunereinstellungen .....	17

Inhalte von einem iPod oder iPhone wiedergeben .....	18
Konsoleneingänge an der Vorderseite verwenden .....	19
USB-Eingang an der Vorderseite.....	19
Analoger A/V-Eingang an der Vorderseite.....	20
HDMI-Eingang an der Vorderseite .....	20
Bildanzeige ändern .....	20

## Systemoptionen ändern

OPTIONEN-Menü des Systems verwenden .....	21
OPTIONEN-Menü .....	21

## Ändern der Systemeinstellung

UNIFY®-Systemübersicht.....	24
UNIFY-Menü verwenden .....	24

## Pflege und Wartung

Fehlerbehebung.....	25
System zurücksetzen.....	28
Fernbedienung mit der Konsole abstimmen.....	28
Systemsoftwareaktualisierung durchführen .....	29
Kundendienst.....	29
Batterien austauschen.....	29
Reinigung.....	30
Eingeschränkte Garantie.....	30
Technische Daten.....	31
Lizenzierungsinformationen.....	32

### Bitte füllen Sie Folgendes aus und bewahren Sie es für Ihre Unterlagen auf:

Die Serien- und Modellnummer finden Sie an der Unterseite des Produkts.

LIFESTYLE®-Modell: \_\_\_\_\_

Seriennummer der Bedienkonsole: \_\_\_\_\_

Acoustimass®-Seriennummer: \_\_\_\_\_

Seriennummer des Lautsprecher-Arrays (135 Serie III-Systeme): \_\_\_\_\_

Bewahren Sie die Quittung zusammen mit dieser Bedienungsanleitung auf.

## Über das Lifestyle®-System

Vielen Dank, dass Sie sich für ein Bose® Lifestyle® -System entschieden haben. Dieses elegante und leicht zu bedienende System liefert eine herausragende Performance für Musik und Video.

Sie sollten das System jetzt mithilfe des intelligenten UNIFY®-Integrationsystems erfolgreich eingerichtet und den Ton für Ihren Raum mithilfe des ADAPTiQ®-Audiokalibrierungssystems kalibriert haben.

Diese Anleitung beschreibt Ihre neue Fernbedienung und zeigt Ihnen, wie Sie das System und die daran angeschlossenen Geräte betreiben.

### Systemfunktionen

- Intelligentes UNIFY-Integrationsystem zum problemlosen Hinzufügen von Geräten zum System.
- Der SoundTouch™-Drahtlosadapter ermöglicht SoundTouch™ auf Ihrem System.
- 3D-Video (es muss ein 3D-fähiges Fernsehgerät und ein 3D-fähiger Blu-ray Disc™-Player, eine Spielkonsole, eine Kabelanlage oder ein anderes Quellgerät an Ihr Lifestyle®-System angeschlossen sein).
- ADAPTiQ-Audiokalibrierungssystem optimiert die Systemperformance für Ihren Raum.
- HF-Fernbedienung
- HDMI™-Konnektivität
- Video-Aufwärtskonvertierung bis 1080p
- Fotoanzeige mithilfe eines USB-Flash-Laufwerks.
- MW/UKW-Radio
- Anschluss an der Rückseite für ein 30-Pin-Zubehördock (nicht mitgeliefert), das mit den meisten iPod- und iPhone-Geräten kompatibel ist.
- Die Bedienkonsole und angeschlossene Komponenten können ganz einfach versteckt aufgestellt werden.

### Wenn Sie Hilfe benötigen

Wenn Probleme beim Betrieb auftreten, sehen Sie unter „Fehlerbehebung“ auf Seite 25 nach. Sie können die häufigsten Probleme mit den dort angegebenen hilfreichen Tipps lösen. Falls Sie zusätzliche Hilfe oder Service für Ihr Produkt benötigen, sehen Sie bitte in der beigefügten Adressliste nach.

### WICHTIG! – Bitte registrieren Sie Ihr Produkt!

Wenn Sie Ihr Produkt registrieren, erhalten Sie Benachrichtigungen über Systemaktualisierungen, die dafür sorgen, dass Ihr Produkt optimal funktioniert. Zusätzlich können Sie auf diese Weise Informationen zu neuen Produkten und Sonderangeboten von Bose erhalten.

Bitte befolgen Sie zum Registrieren die Anweisungen auf der Produktregistrierungskarte. Eine Nichtregistrierung beeinflusst Ihre Rechte unter der eingeschränkten Garantie oder Ihren Anspruch auf den Erhalt von Systemsoftwareaktualisierungen nicht.

# Bedienelemente und Anzeigen

## Fernbedienung

### Fernbedienung verwenden

Diese fortschrittliche Funkfrequenzfernbedienung funktioniert im ganzen Raum. Sie müssen sie nicht auf die Bedienkonsole richten.

**SOURCE** – Anzeige und Auswahl angeschlossener Geräte von der Liste der Quellen auf Ihrem Fernsehgerät

**Power** – Ein- oder Ausschalten des Systems

**Farbfunktionen** – Aktivieren von mit der Farbe verbundenen Funktionen an angeschlossenen Quellen wie <sup>TM</sup>-Playern, Set-Top-Boxen und für Teletext

**Internet** – Aktivieren des Internetzugangs auf Geräten von Fremdanbietern wie Blu-ray Disc<sup>TM</sup>-Playern und Set-Top-Boxen

**Lautstärke höher/niedriger** – Erhöhen (+) oder Verringern (-) der Systemlautstärke

**Stumm** – Stummschalten/ Aufheben der Stummschaltung der Systemlautsprecher

**Bildanzeige** – Ändern der Videoanzeige

**Zifferntasten** – Manuelle Eingabe von Kanälen und Einstellungen



**Informationsanzeige** – Siehe Seite 8

**TV Power** – Ein- oder Ausschalten des Fernsehgeräts

**Teletext** – Ein-/ Ausschalten des Bildschirmtextes

**Bedienelemente für die Navigation** – Siehe Seite 7

**MORE** – Anzeige zusätzlicher gerätespezifischer Bedienelemente und Informationen über das Fernsehgerät Siehe Seite 9.


**Kanal nach oben/nach unten** – Zum nächsten oder vorherigen Kanal oder zur Voreinstellung

**Letzter Kanal** – Zurück zum letzten Kanal oder zur Voreinstellung

**Bedienelemente für die Wiedergabe** – Siehe Seite 7


**TV Input** – Wechseln des Eingangs am Fernsehgerät

## Bedienelemente für die Navigation

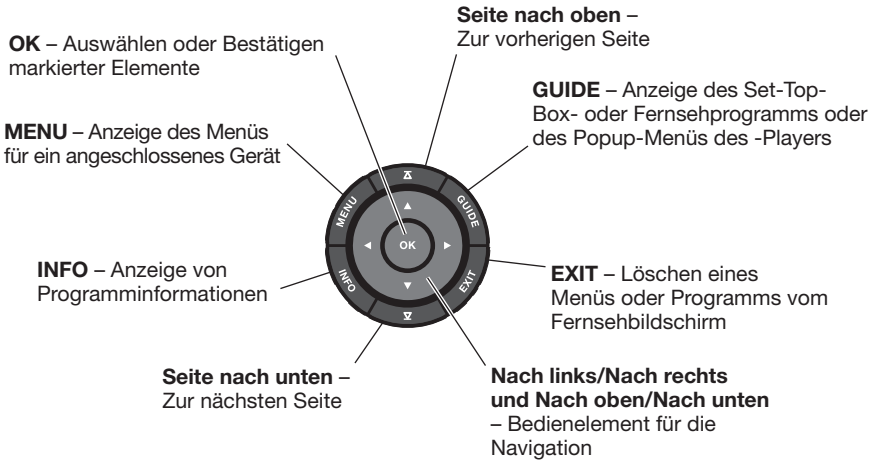

**Hinweis:** Nähere Informationen zur Verwendung der Bedienelemente für die Navigation und die Wiedergabe bei ausgewählten Quellen finden Sie unter „Betrieb Ihrer Systemquellen“ auf Seite 14.

## Bedienelemente für Wiedergabe

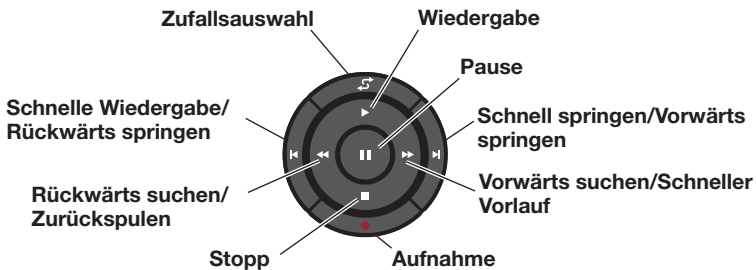

# Bedienelemente und Anzeigen

## Informationsanzeige

Die Anzeige liefert Informationen zum Betriebs- und Systemstatus.

Beispiele:

Identifizierung der Quelle

Kabel

Lautstärke

Kabel  
43

Radiotuner

FM P1  
90,9 - WBUR90,9

iPod

iPod  
Album


Bedienungsanweisung

Zum Einstellen eines Presets  
die Zifferntaste gedrückt halten

SoundTouch™







SoundTouch  
Presets


## Leuchttaste auf der Fernbedienung

Wenn Sie die Leuchttaste  an der Rückseite der Fernbedienung drücken, leuchten die Fernbedienungstasten und die Anzeige. Das Licht schaltet sich nach einigen Sekunden aus, um die Batterielebensdauer zu verlängern.

**So stellen Sie den Beleuchtungspegel auf der Anzeige ein:**

**Hinweis:** Wenn die zurzeit ausgewählte Quelle MW oder UKW ist, schalten Sie zu einer anderen Quelle um, bevor Sie Einstellungen vornehmen. Dies verhindert, dass Sie versehentlich Radiovoreinstellungen löschen.

1. Halten Sie die  und **OK**-Taste gleichzeitig 5 Sekunden lang gedrückt.
2. Drücken Sie die Navigationstaste nach oben  oder nach unten , um die Helligkeit oder den Kontrast einzustellen.
3. Drücken Sie die Navigationstaste nach links  oder nach rechts , um den Beleuchtungspegel zu verringern oder zu erhöhen.
4. Drücken Sie entweder **OK** oder , um zum normalen Betrieb zurückzukehren.

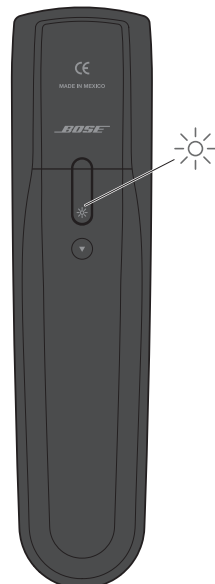




## MORE-Tasten



Drücken Sie die **MORE**-Taste, um zusätzliche Tastenfunktionen für die aktuelle Quelle oben auf dem Fernsehbildschirm anzuzeigen. Die angezeigten Funktionen hängen von der ausgewählten Quelle ab. Es können nur 13 der verfügbaren Tasten angezeigt werden. Ein Pfeil rechts oder links von den Tasten gibt an, ob zusätzliche Tasten verfügbar sind.

Wenn es mehr als 13 Tasten gibt, erscheint ein Pfeil rechts oder links von den angezeigten Tasten, mit dem Sie nach links oder nach rechts blättern können, um weitere Tasten anzuzeigen.

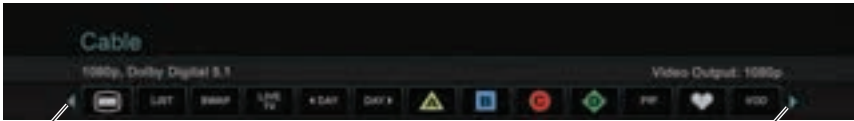

Weist auf weitere Tasten links hin. Markierung nach links verschieben.

Weist auf weitere Tasten rechts hin. Markierung nach rechts verschieben.

## Eine MORE-Tastenfunktion aktivieren

1. Drücken Sie die **MORE**-Taste auf der Fernbedienung.
2. Drücken Sie die linke ◀ oder rechte ▶ Navigationstaste, um die Funktion zu markieren, die Sie aktivieren möchten.
3. Drücken Sie die **OK**-Taste auf der Fernbedienung.

## Definition der Tastenfunktionen



Schaltet das Gerät ein/aus.



Schaltet das Fernsehgerät zu Live-Programmierung um.



Zeigt eine Liste der bevorzugten Kanäle an.



Schaltet zwischen den Hauptfunktionen (zum Beispiel von DVD zu VCR) auf einem Combo-Gerät um.



Zeigt das Fernsehprogramm für den nächsten Tag an.



Geht zum Startzustand des Geräts.



Zeigt das Fernsehprogramm für den vorherigen Tag an.



Wählt eine Wiederholungsoption bei der aktuellen Quelle.



Zeigt eine Wiedergabeliste der aufgezeichneten Programme an.



Schaltet bei einem Gerät mit mehreren Tunern zwischen Tunern um.



Bild-in-Bild-Modus.



Schaltet bei einer Set-Top-Box, die beides bietet, zwischen Fernseher und Radio um.



Video on Demand.




Schaltet bei einem Gerät mit mehreren Tunern zwischen Tunern um.

# Bedienelemente und Anzeigen

## Definition der Tastenfunktionen (Fortsetzung)

	Ermöglicht Ihnen die Eingabe einer dreistelligen Nummer (nur Japan).
	Zeigt das OPTIONEN-Menü an. Siehe „Systemoptionen ändern“ auf Seite 21.
	Ruft das Systemmenü für die Set-Top-Box auf.
	Ruft das oberste Menü (oder Titelmény) auf Blu-ray Disc™-Playern auf.
   	Ruft die Funktionen A, B, C oder D in einem interaktiven Fernsehprogramm auf.
    	Ruft Xbox®-Funktionen auf.
	Ruft die Datenübertragung auf einem Tunergerät auf (nur Japan).
   	Ruft PlayStation®-Funktionen auf.
	Wählt verschiedene Arten von Videoübertragung (nur EU).
 	Ermöglicht Ihnen die Einstufung bestimmter Inhalte, zum Beispiel eines TiVo®-Programms.
	Ruft spezifische „Tools“ auf Blu-ray Disc™-Playern oder Set-Top-Boxen auf.

## Bedienkonsole

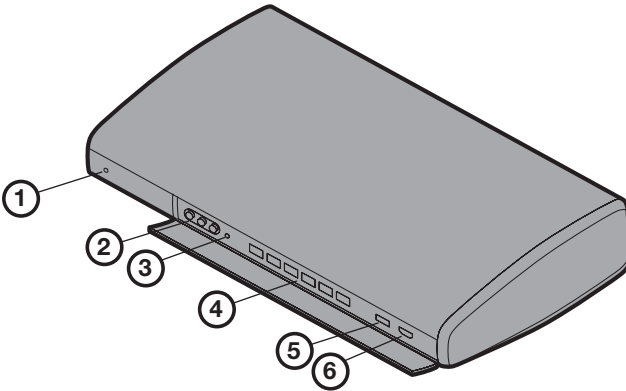

### 1 Systemstatusanzeige

- Aus .....System ist aus
- Rot.....Netzwerk-Standby
- Grünes Blinken.....System wird gestartet
- Grünes Leuchten.....System ist ein und betriebsbereit
- Gelb.....System ist ausgeschaltet oder wird gerade ausgeschaltet oder beim Laden des iPod oder iPhone im optionalen Zubehördock (von Bose erhältlich)

### 2 A/V-Eingänge an der Vorderseite


Werden für das vorübergehende Anschließen eines Audio-/Videogeräts, zum Beispiel eines Camcorders, verwendet.

### 3 Kopfhörerausgang

Für Stereo-Kopfhörer mit einem 3,5-mm-Stereostecker. Die Lautstärke wird mit den Lautstärkereglern eingestellt.

### 4 Steuertasten



- |   |                     |   |   |   |                               |
|---|---------------------|---|---|---|-------------------------------|
|  | <b>Source</b>       |  |  |  | <b>Setup</b>                  |
| Ein-/Aus-<br>schalten   | Quellenaus-<br>wahl | Stummschal-<br>tung/Stumm-<br>schaltung<br>aufheben                                 | Lautstärke<br>verringern  | Lautstärke<br>erhöhen   | UNIFY®-<br>Menü<br>(Seite 24) |

### 5 USB-Eingang an der Vorderseite

 
Wird für die Anzeige von Fotodateien von einem USB-Gerät, zum Beispiel einer Digitalkamera, verwendet. Wird auch für die Aktualisierung der Systemsoftware verwendet.

### 6 HDMI-Eingang an der Vorderseite

Wird für das vorübergehende Anschließen eines HDMI-Geräts, zum Beispiel eine Videokamera, verwendet.

# Bedienelemente und Anzeigen


## Lautsprecher-Array (nur 135 Serie III-Systeme)



### Statusanzeige:

- Aus ..... Lautsprecher-Array und Acoustimass®-Modul sind verbunden
- Langsames orangefarbenes Blinken... Lautsprecher-Array ist für die drahtlose Verbindung bereit
- Schnelles orangefarbenes Blinken.... Lautsprecher-Array ist getrennt und versucht, sich zu verbinden
- Rotes Leuchten ..... Systemfehler (wenden Sie sich an den Bose-Kundendienst)

## Acoustimass®-Modul (nur 135 Serie II-Systeme)

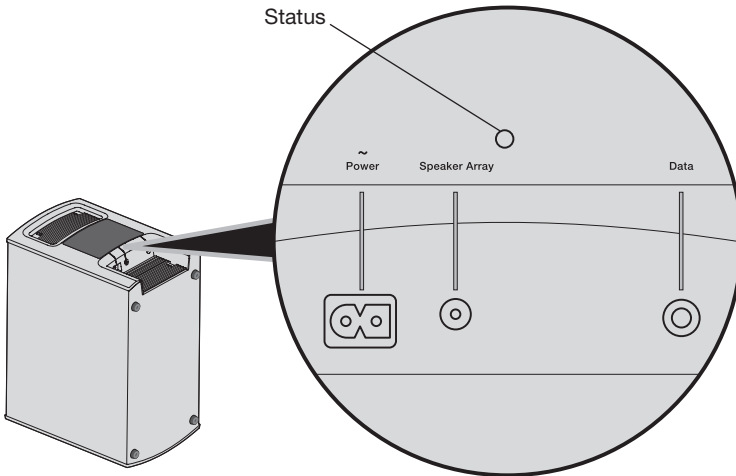

### Statusanzeige:

- Orangefarbenes Leuchten..... Lautsprecher-Array und Acoustimass-Modul sind verbunden
- Blinkt alle 3 Sek..... Acoustimass-Modul ist nicht mehr mit dem Lautsprecher-Array verbunden oder Lautsprecher-Array ist ausgeschaltet (Standby-Betrieb des Acoustimass-Moduls)
- Langsames orangefarbenes Blinken... Acoustimass-Modul ist für die drahtlose Verbindung bereit
- Rotes Leuchten ..... Systemfehler (wenden Sie sich an den Bose-Kundendienst)

## Ihr System starten

---

So starten Sie Ihr System:



Drücken Sie die **Power**-Taste auf der Fernbedienung oder an der Konsole. Innerhalb von mehreren Sekunden wechselt die Systemstatusanzeige an der Konsole von Blinken zu durchgehend grün. Das System ist jetzt einsatzbereit.

So starten Sie Ihr System und gehen direkt zum SOURCE-Menü:

**SOURCE**

Drücken Sie die **SOURCE**-Taste auf der Fernbedienung. Dadurch wird Ihr System gestartet und das SOURCE-Menü wird auf dem Fernsehbildschirm angezeigt.

So starten Sie Ihr System und gehen direkt zum UNIFY®-Menü:

**Setup**

Drücken Sie die Setup-Taste an der Bedienkonsole. Dadurch wird Ihr System gestartet und das UNIFY®-Menü wird auf dem Fernsehbildschirm angezeigt.

**Hinweis:** Um den Energieverbrauch zu verringern, wird das System im Energiesparmodus betrieben, wenn es ausgeschaltet ist. Deshalb benötigt das System mehrere Sekunden zum Starten.

## Fernsehgerät einschalten

---

**TV**

Wenn Sie die Fernbedienung während des Einrichtens mithilfe von UNIFY programmiert haben, drücken Sie die **TV Power**-Taste auf der Fernbedienung, um das Fernsehgerät einzuschalten. Verwenden Sie sonst die mit dem Fernsehgerät mitgelieferte Fernbedienung.

## Ihr System ausschalten

---



Drücken Sie die **Power**-Taste auf der Fernbedienung oder an der Bedienkonsole.

Das System fährt nach ein paar Sekunden automatisch herunter.


**Hinweis:** Wenn Sie auf die Power-Bedienelemente für angeschlossene Geräte zugreifen, wird das automatische Herunterfahren gestoppt und Sie müssen das Herunterfahren mithilfe der Bedienelemente auf dem Bildschirm abschließen.

# Betrieb Ihrer Systemquellen

## Eine Quelle auswählen

Mit dem SOURCE-Menü können Sie die Quellen und angeschlossenen Geräte auswählen. Das Menü kann maximal 10 Auswahlmöglichkeiten anzeigen. Wenn es mehr als 10 Auswahlmöglichkeiten gibt, wird ein Pfeil oben oder unten im Menü angezeigt, mit dem Sie nach oben oder unten blättern können, um die anderen Elemente anzuzeigen.

1. Drücken Sie die **SOURCE**-Taste auf der Fernbedienung, um die Liste der angeschlossenen Geräte auf Ihrem Fernsehgerät anzuzeigen.

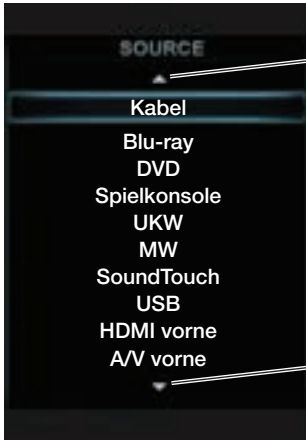

Weist auf weitere Auswahlmöglichkeiten weiter oben hin. Markierung nach oben verschieben.

Weist auf weitere Auswahlmöglichkeiten weiter unten hin. Markierung nach unten verschieben.

2. Halten Sie **SOURCE** weiterhin gedrückt, um die Markierung in der Liste nach unten zu verschieben und die gewünschte Quelle auszuwählen.
  - Sie können auch die Navigationstasten nach oben ▲ oder nach unten ▼ verwenden, um eine Quelle auszuwählen.
  - Wenn Sie während des Einrichtungsvorgangs ein Gerät benannt haben, wird der zugewiesene Name in der Liste angezeigt. Nicht benannte Geräte werden als generische Eingänge angezeigt, zum Beispiel „Input 1 (HDMI)“ und „Input 2 (HDMI)“.
  - Wenn Sie eine Quelle auswählen, die ausgeschaltet ist, wird eine Meldung auf dem Bildschirm angezeigt, die Sie daran erinnert, die Quelle einzuschalten.

**Hinweis:** Beim Anhören von Audioquellen geht das System automatisch in den Bildschirmschonermodus, um die Gefahr eines Einbrennens des Bildschirms zu verhindern. Drücken Sie eine beliebige Taste auf der Lifestyle-Fernbedienung, um das Bild wiederherzustellen. Informationen zur Deaktivierung des Bildschirmschoners finden Sie unter „Systemoptionen ändern“ auf Seite 21.

**Hinweis:** Das intelligente UNIFY®-Integrationssystem stellt die Lifestyle®-Fernbedienung so ein, dass Sie damit alle Ihre Geräte steuern können. Sollten eines oder mehrere dieser Geräte nicht auf die -Fernbedienung reagieren, sehen Sie unter „Fehlerbehebung“ auf Seite 25 nach.

## Fernsehen

Ihr Fernsehgerät erhält seinen Programminhalt möglicherweise über eine Set-Top-Box oder einen im Fernsehgerät integrierten Tuner.

**Hinweis:** Da die meisten Fernsehgeräte eine IR-Fernbedienung haben, müssen Sie die Bose®-Fernbedienung möglicherweise auf das Fernsehgerät richten, um es zu steuern.


### Eine Set-Top-Box verwenden


Wenn Sie eine Kabel- oder Satellitenanlage oder eine andere Set-Top-Box an das Fernsehgerät angeschlossen haben, wird sie unter dem Namen, den Sie dem Gerät während des Einrichtungsvorgangs zugewiesen haben, im SOURCE-Menü angezeigt.

1. Drücken Sie die **SOURCE**-Taste auf der Fernbedienung und wählen Sie das Gerät, das die Fernsehprogramme liefert.
2. Stellen Sie einen Sender ein. Siehe „Sendereinstellung“ weiter unten.

### Den Tuner im Fernsehgerät verwenden

Wenn Sie den Tuner im Fernsehgerät zum Empfangen von Fernsehprogrammen verwenden:

1. Drücken Sie die **SOURCE**-Taste auf der Fernbedienung und wählen Sie „TV“.
2. Drücken Sie die **TV Input**-Taste , um den internen Tuner in Ihrem Fernsehgerät auszuwählen.
3. Stellen Sie einen Sender ein. Siehe „Sendereinstellung“ weiter unten.

**Wenn Sie zur Verwendung anderer Quellen zurückkehren möchten,** verwenden Sie die **TV Input**-Taste , um zuerst den Eingang für das Bose®-System auszuwählen, und drücken Sie dann die **SOURCE**-Taste, um eine andere Quelle auszuwählen.

### Sendereinstellung


Sie können einen Fernsehsender auf folgende Arten einstellen:



Geben Sie eine Kanalnummer auf der Tastatur ein und drücken Sie **OK**. Verwenden Sie die Strich-Taste für Kanalnummern, die einen Strich oder Punkt enthalten.



Drücken Sie **▲** (Kanal nach oben) oder **▼** (Kanal nach unten), um die Kanäle zu wechseln.

Drücken Sie die **Last**-Taste , um den zuletzt ausgewählten Kanal einzustellen.





Drücken Sie die **GUIDE**-Taste. Verwenden Sie die Navigations-, Seite nach unten/nach oben- und **OK**-Tasten, um einen Sender aus dem Fernsehprogramm auszuwählen.

# Betrieb Ihrer Systemquellen

## Audio-/Videogeräte wiedergeben

Während des interaktiven Einrichtungsvorgangs haben Sie möglicherweise einen CD-, DVD-, DVR-, Blu-ray Disc™-Player oder ein ähnliches Gerät angeschlossen. Diese sind normalerweise an die Eingänge 1 bis 5 angeschlossen.

Wenn Sie die Lifestyle®-Fernbedienung für das Gerät programmiert haben, können Sie die folgenden Bedienelemente verwenden, um das ausgewählte Gerät zu betreiben.

	<b>MENU</b>	Gerätemenü (falls verfügbar) oder des Setup-Menü des Systems
	<b>GUIDE</b>	Popup-Menü des Blu-ray Disc-Players
	<b>INFO</b>	Geräteinformationen
	<b>EXIT</b>	Beenden des Menüs
	▲	Ein Element nach oben
	▼	Ein Element nach unten
	◀	Nach links
	▶	Nach rechts
	OK	Auswählen
	Δ	Nächste(r) Seite, Kanal oder Disc
▽	Vorherige(r) Seite, Kanal oder Disc	
	▶	Wiedergabe
	⏸	Pause
	■	Stop
	●	Aufnahme
	⏩	Schneller Vorlauf oder vorwärts suchen
	⏪	Schneller Rücklauf oder rückwärts suchen
	⏭	Schnell springen oder vorwärts springen
	⏮	Schnelle Wiedergabe oder rückwärts springen
↺	Zufallswiedergabe	

## SoundTouch™ verwenden

Wenn Sie Informationen zur Verwendung von SoundTouch™ erhalten möchten, laden Sie die SoundTouch™-Bedienungsanleitung für Ihr Lifestyle®-System von der Bose-Website herunter.



## Radio auswählen

1. Drücken Sie die **SOURCE**-Taste.
2. Halten Sie die **SOURCE**-Taste gedrückt, um UKW oder MW in SOURCE-Menü auszuwählen.

## Sendereinstellung

 


- Drücken Sie **▶** (erhöhen) oder **◀** (verringern), um im Frequenzband nach oben oder nach unten zu suchen.
- Oder,
- Drücken Sie **▶▶** (nächstes suchen) oder **◀◀** (vorheriges suchen), um den nächsten/vorherigen starken Sender zu finden.

## Voreingestellten Sender speichern

Der integrierte Radiotuner kann jeweils bis zu 25 voreingestellte UKW- und MW-Sender speichern.

1. Stellen Sie einen Radiosender ein.
2. Halten Sie für die Presets 1 bis 9 die Zifferntasten gedrückt. Halten Sie für 10 bis 25 die **OK**-Taste gedrückt, um den Sender als nächstes verfügbares Preset zu speichern.



## Voreingestellten Sender erneut aufrufen




Drücken Sie **▲** (Kanal nach oben) oder **▼** (Kanal nach unten), um zum nächsten oder vorherigen Preset zu gehen.

- Um schnell auf die Presets 1 bis 9 zuzugreifen, drücken Sie die Zifferntaste des Presets.

## Voreingestellten Sender löschen

1. Rufen Sie den voreingestellten Sender auf, den Sie löschen möchten.
2. Halten Sie die **OK**-Taste gedrückt, bis die Voreinstellungsnummer nicht mehr angezeigt wird.

## Optionale Radiotunereinstellungen


1. Drücken Sie die **MORE**-Taste  und wählen Sie OPTIONEN.
2. Im OPTIONEN-Menü (siehe Seite 21) haben Sie folgende Auswahlmöglichkeiten:
  - Aktueller Sender: Stereo erlauben, Stereo aus
  - RDS: Ein, Aus

# Betrieb Ihrer Systemquellen

## Inhalte von einem iPod oder iPhone wiedergeben

Ihr Lifestyle®-System kann Audio und Video von einem iPod oder iPhone mithilfe des 30-Pin-Zubehördocks (nicht mitgeliefert) wiedergeben, das von Bose® erhältlich ist.

Die iPod oder iPhone-Menüs und -Inhalte werden auf der linken Seite des Bildschirms angezeigt, wie im folgenden Beispiel dargestellt. Der aktuell wiedergegebene Titel wird rechts angezeigt.

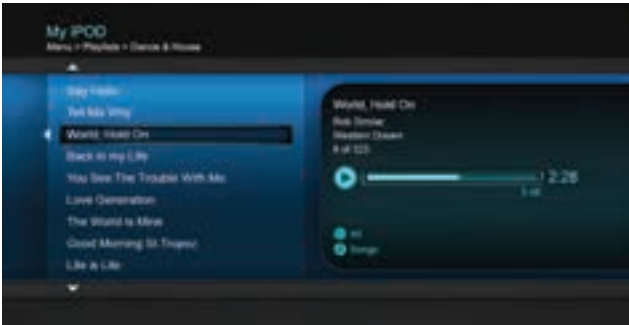

Die folgenden Bedienelemente stehen zur Bedienung des angeschlossenen iPod zur Verfügung.

	<b>MENU</b>	Eine Menüebene nach oben (gedrückt halten, um zur obersten Menüebene zu gehen) Bei Videowiedergabe: Pause und zurück zum Menü
		Eine Seite nach oben
		Eine Seite nach unten
		Ein Menüelement nach oben (gedrückt halten, um schnell zu blättern)
		Ein Menüelement nach unten (gedrückt halten, um schnell zu blättern)
		Eine Menüebene nach oben. Bei Videowiedergabe: Pause und zurück zum Menü
		Eine Menüebene nach unten
		Wiedergabe
		Pause
		Stop
		Nächster Titel oder Audio-Lesezeichen
		Vorheriger Titel oder Audio-Lesezeichen
		Schneller Vorlauf
		Schneller Rücklauf
		Zufallswiedergabe


## Konsoleneingänge an der Vorderseite verwenden

Die Vorderseite der Konsole bietet analoge A/V-Eingänge sowie einen USB- und einen HDMI™-Eingang. Diese Eingänge werden im SOURCE-Menü nur dann als A/V (Front) USB und HDMI (Front) angezeigt, wenn ein Gerät angeschlossen ist. Diese Eingänge stehen für das vorübergehende Anschließen von Geräten wie Digitalkameras und Videokameras zur Verfügung.

### USB-Eingang an der Vorderseite

Das Lifestyle®-System kann Fotodateien (nur .jpg- oder .jpeg-Format) von einem USB-Speichergerät anzeigen.

Wenn die USB-Quelle ausgewählt ist, werden Ordner oben in der Liste links angezeigt, gefolgt von einzelnen Bilddateien. Wenn Sie einen Ordner auswählen, wird sein Inhalt angezeigt.

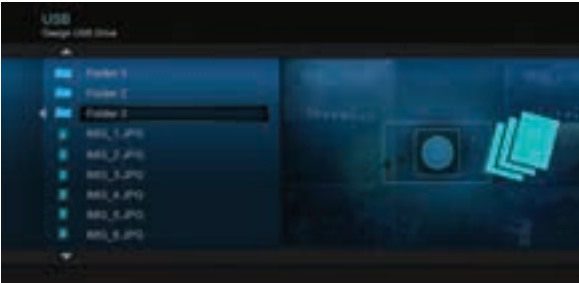

Verwenden Sie die folgenden Bildelemente, um Digitalfotos anzuzeigen.

	▲	Ein Menüelement nach oben (zum Wiederholen gedrückt halten)
	▼	Ein Menüelement nach unten (zum Wiederholen gedrückt halten)
	◀	Eine Ordner Ebene nach oben oder beenden und zu den durchsuchten Ordnern zurückkehren (bei der Anzeige einer Diashow)
	<b>MENU</b>	Eine Ordner Ebene nach oben oder beenden und zu den durchsuchten Ordnern zurückkehren (bei der Anzeige einer Diashow)
	▶	Eine Ordner Ebene nach unten
	OK	Eine Ordner Ebene nach unten (wenn ein Ordner markiert ist) oder Diashow wiedergeben (wenn eine Fotodatei markiert ist)
	△	Neun Elemente nach oben
	▽	Neun Elemente nach unten
	<b>EXIT</b>	Diashow beenden und zu den durchsuchten Ordnern zurück
	▶	Diashow des markierten Ordners abspielen
	⏸	Diashow anhalten
	■	Diashow beenden und zu den durchsuchten Ordnern zurück
	▶	Nächstes Bild
	◀	Vorheriges Bild

# Betrieb Ihrer Systemquellen

---

## Analoger A/V-Eingang an der Vorderseite

Sie können diesen Eingang für Geräte mit Composite-Video- und linken/rechten Audio-Ausgängen verwenden. Die Bose®-Fernbedienung steuert keine Geräte, die an diesem Eingang angeschlossen sind. Sie müssen die Bedienelemente am Gerät selbst oder die mit dem Gerät mitgelieferte Fernbedienung verwenden.

## HDMI-Eingang an der Vorderseite

Sie können diesen Eingang für Geräte mit einem HDMI-Ausgang verwenden. Die Bose-Fernbedienung steuert keine Geräte, die an diesem Eingang angeschlossen sind. Sie müssen die Bedienelemente am Gerät selbst oder die mit dem Gerät mitgelieferte Fernbedienung verwenden.

## Bildanzeige ändern

---



Drücken Sie die Bildanzeige-Taste, um ein Menü mit der Videoformatierungsauswahl anzuzeigen. Drücken Sie diese Taste weiterhin, um Ihre Auswahl zu markieren.

Das Fernsehbild ändert sich sofort nach Auswahl eines Formats.

**Hinweis:** Bei der Anzeige von 3D-Videos zeigt die Bildanzeigetaste kein Menü der Videoformatierungsauswahl an. Die Form des Videos kann beim Ansehen von 3D-Videos nicht geändert werden.



**Normal**

Lässt das ursprüngliche Videobild unverändert.



**Automatische Breite**

Füllt die Breite des Bildschirms, ohne Inhalte abzuschneiden.



**Strecken 1**

Streckt das Videobild gleichmäßig von der Mitte aus.



**Strecken 2**

Streckt die Ränder des Videobilds mehr als den mittleren Teil des Bildes.



**Zoom**

Vergrößert das Videobild (Navigationstasten nach oben/nach unten drücken, um das Bild senkrecht auf dem Bildschirm zu verschieben)




**Graue Balken**

Platziert senkrechte graue Balken links und rechts von einem Videobild mit Standardauflösung.

## OPTIONEN-Menü des Systems verwenden

Die Anzahl der Elemente, die im OPTIONEN-Menü angezeigt werden, hängt davon ab, welche Quelle zurzeit ausgewählt ist.

1. Drücken Sie auf der Fernbedienung .
2. Drücken Sie die Navigationstaste ◀ oder ▶ und markieren Sie OPTIONEN.
3. Drücken Sie **OK** auf der Fernbedienung, um das OPTIONEN-Menü für die aktuelle Quelle anzuzeigen, wie im folgenden Beispiel dargestellt.



4. Drücken Sie ▲ oder ▼, um die Option zu markieren, die Sie ändern möchten.
5. Drücken Sie ◀ oder ▶, um die Einstellung auszuwählen.
6. Drücken Sie **EXIT** auf der Fernbedienung, wenn Sie fertig sind.

## OPTIONEN-Menü

Werkseitige Einstellungen sind fett gedruckt.

Option	Verfügbare Einstellungen
Ton (Nicht verfügbar bei 235/135 Serie III-Systemen)	Original ..... Gibt Stereoton wieder, wenn Stereoton von der Quelle empfangen wird
	<b>Empfohlen</b> ..... Gibt 5-Kanal-Ton wieder, ganz gleich, ob 2-Kanal- oder 5-Kanal-Ton von der Quelle empfangen wird
	Alternativ ..... Gibt 5-Kanal-Ton wieder, wenn Stereo- oder 5-Kanal-Ton von der Quelle empfangen wird
	Verbessertes Mono .... Gibt simulierten Surround-Sound wieder, wenn Monoton von der Quelle empfangen wird
Aktueller Sender	<b>Stereo erlauben</b> ..... Erlaubt Stereoton vom aktuellen UKW-Stereo-Radiosender
	Stereo aus ..... Ändert den aktuellen Sender zu Mono, was beim Einstellen eines schwachen Radiosenders helfen kann

# Systemoptionen ändern

Option	Verfügbare Einstellungen
RDS	<p><b>Ein</b> ..... Zeigt RDS-Informationen auf der Fernbedienung an</p> <p><b>Aus</b> ..... Keine RDS-Informationen auf der Fernbedienung</p>
Spielermodus	<p><b>Ein</b>.....Verringert die Videoverarbeitung und Verzögerung</p> <p><b>Aus</b>.....Normale Leistung</p>
Audiokomprimierung	<p><b>Aus</b> ..... Keine Änderung am Audio-Track</p> <p><b>Sprache verbessern</b> .. Verbessert die Tonausgabe, damit Sie Filmdialoge besser hören können</p> <p>Intelligente Lautstärke.. Verringert den Bereich der Lautstärkepegel in einem Film-Soundtrack, damit der Unterschied zwischen lauten Stellen und leisen Tönen weniger auffällig ist</p>
Audio-Track	<p><b>Track 1</b> ..... Wählt Track 1 von einem externen Audio-Stream mit mehreren Audio-Tracks</p> <p>Track 2 ..... Wählt Track 2 von einem externen Audio-Stream mit mehreren Audio-Tracks</p> <p>Beide Tracks..... Wählt Track 1 und 2 von einem externen Audio-Stream</p> <p>Nicht verfügbar ..... Wird automatisch ausgewählt, wenn nur ein Track empfangen wird</p>
Lautstärke-Offset	Erhöht den Lautstärkepegel der ausgewählte Quelle in Bezug auf andere Quellen (0 bis 10)
Quellen-Overscan (nur 2D)	<p><b>Ein</b>..... Wendet Video-Overscan auf die aktuelle Videoquelle an</p> <p><b>Aus</b> ..... Videoquellen unverändert</p> <p><b>Hinweis:</b> Wenn eine 3D-Quelle abgespielt wird, wird „Nicht verfügbar“ statt einem Overscan-Wert angezeigt.</p>
Systembass	<p>Passt den Basspegel an: -9 bis <b>Normal</b> bis +6 (nach der ADAPTiQ®-Kalibrierung)</p> <p>-14 bis <b>Normal</b> bis +14 (ohne ADAPTiQ-Kalibrierung)</p>
Systemhöhen	<p>Passt den Höhenpegel an: -9 bis <b>Normal</b> bis +6 (nach der ADAPTiQ®-Kalibrierung)</p> <p>-14 bis <b>Normal</b> bis +14 (ohne ADAPTiQ-Kalibrierung)</p>
2D A/V Sync (nur 2D)	<p>Passt die Audioverzögerung für die Synchronisierung des Tons mit dem 2D-Video an:</p> <p>-2 bis <b>Normal</b> bis +5</p>
3D (nur 3D)	<p>Stellt das 3D-Bild so ein, dass es mit einer geeigneten 3D-Brille richtig angezeigt wird</p> <p><b>Automatisch</b> ..... Stellt das richtige 3D-Bildformat automatisch ein</p> <p>Nebeneinander ..... Wählt das Side-by-Side-Format</p> <p>Übereinander ..... Wähle das Top/Bottom-Format</p>
3D A/V Sync (nur 3D)	<p>Passt die Audioverzögerung für die Synchronisierung des Tons mit dem 3D-Video an -2 bis <b>Normal</b> bis +10</p>

# Systemoptionen ändern

Option	Verfügbare Einstellungen
Herunterfahren	<b>Normal</b> ..... System schaltet sich aus, ohne das Menü „Herunterfahren“ anzuzeigen Menü „Herunterfahren“ .. System zeigt das Menü „Herunterfahren“ beim Ausschalten an
Bildschirmschoner	<b>Ein</b> ..... Zeigt bei der Wiedergabe von reinen Audioquellen nach 20 Minuten ohne Benutzeraktivität einen Bildschirmschoner an Aus ..... Deaktiviert den Bildschirmschonermodus
Rückwärtige Lautsprecher (Nicht verfügbar bei 235/135 Serie III-Systemen)	Passt den Lautstärkepegel der rückwärtigen Lautsprecher in Bezug auf die vorderen Lautsprecher an: (-10 bis <b>Normal</b> bis +6) <b>Hinweis:</b> Diese Option ist nicht verfügbar, wenn die Lautsprecheroption auf Stereo (2) oder Front (3) eingestellt ist.
Center-Lautsprecher (Nicht verfügbar bei 235/135 Serie III-Systemen)	Passt den Lautstärkepegel des vorderen Center-Lautsprechers in Bezug auf die anderen Lautsprecher: -8 bis <b>Normal</b> bis +8 <b>Hinweis:</b> Diese Option ist nicht verfügbar, wenn die Lautsprecheroption auf Stereo (2) eingestellt ist
Lautsprecher (Nicht verfügbar bei 235/135 Serie III-Systemen)	Stereo (2) ..... Aktiviert nur die vorderen linken und rechten Lautsprecher Vorne (3) ..... Aktiviert nur die vorderen linken, mittleren und rechten Lautsprecher <b>Surround (5)</b> ..... Aktiviert alle vorderen und rückwärtigen Lautsprecher
Lautstärke des Fernsehgeräts	<b>Ein</b> ..... Ermöglicht dem System die Anzeige des Lautstärkepegels und der Stummschaltungsanzeige auf dem Fernsehgerät Aus ..... Verhindert die Anzeige des Lautstärkepegels und der Stummschaltungsanzeige
TV-Lautsprecher	<b>Ein</b> ..... Sendet HDMI™-Ton zum Fernsehgerät (Ton vom Fernsehgerät wird durch das Anschließen von Kopfhörern an die Bedienkonsole oder durch Drücken von Mute oder Volume auf der Fernbedienung nicht beeinflusst) <b>Off</b> ..... Sendet HDMI-Ton zu den Lautsprechern des Lifestyle®-Systems
Videoausgang (nur 2D)	Ändert die Auflösung (Standardauflösung/720p/1080i/1080p) des Videosignals, das zum Fernsehgerät gesendet wird (nur Einstellungen, die vom Fernsehgerät unterstützt werden, werden als Optionen angezeigt) <b>Hinweis:</b> Wenn eine 3D-Quelle abgespielt wird, stimmt die Ausgabeauflösung immer mit der Auflösung der angeschlossenen 3D-Quelle überein. Die Videoausgabe zeigt dann die automatisch eingestellte Ausgabeauflösung an und Sie können die Auflösung nicht ändern, während eine 3D-Quelle abgespielt wird.
Automatische Abschaltung	Aktiviert..... Das System schaltet sich automatisch ab. <ul style="list-style-type: none"> <li>• Nach vier Stunden Inaktivität einschließlich der zweiten Bose® Link-Zone (keine Benutzerinteraktion).</li> <li>• Nach 15 Minuten ohne Ton oder Bild von einer Videoquelle oder ohne Ton von einer Audioquelle.</li> <li>• Nach 25 Minuten Inaktivität der iPod-Quelle.</li> </ul> Deaktiviert ..... Das System schaltet sich nicht automatisch ab

# Ändern der Systemeinrichtung

## UNIFY®-Systemübersicht

Das intelligente UNIFY-Integrationssystem führt Sie durch das anfängliche Einrichten und Konfigurieren Ihres Systems. Es hilft Ihnen, die richtigen Kabel und Eingänge auszuwählen und die Lifestyle®-Fernbedienung für die Steuerung der angeschlossenen Geräte zu programmieren.

Nach Abschluss der Einrichtung können Sie das UNIFY-System jederzeit verwenden, um Ihre Systemeinrichtung und -konfiguration zu ändern.

## UNIFY-Menü verwenden

Drücken Sie zum Anzeigen des UNIFY-Menüs auf dem Fernsehgerät die **Setup-Taste** an der Vorderseite der Bedienkonsole. Wählen Sie mithilfe der Navigationstasten auf der Fernbedienung die gewünschte Funktion und befolgen Sie die Anweisungen auf dem Bildschirm.

Menüelement	Vorgang
Einrichtung fortsetzen	Wenn die Einrichtung nicht abgeschlossen wurde, können Sie zum zuletzt abgeschlossenen Ereignis des UNIFY-Einrichtungsvorgang zurückkehren.
Einrichten erneut starten	Wenn die anfängliche Einrichtung nicht abgeschlossen wurde, können Sie den UNIFY-Einrichtungsvorgang von vorne beginnen.
Acoustimass® erneut anschließen (nur 135 Serie III-Systeme)	Befolgen Sie die Anweisungen auf dem Bildschirm, um das Lautsprecher-Array wieder an das Acoustimass-Modul anzuschließen.
Sprache	Ändern der Sprache der Bildschirmanzeige.
ADAPTiq®	Starten des ADAPTiq-Audiokalibrierungsprozesses. Nach Ausführung von ADAPTiq ermöglicht Ihnen dieses Menüelement die Deaktivierung oder Aktivierung von ADAPTiq.
Fernseh-Setup	Nach Anschließen des Fernsehgeräts an die Konsole können Sie: <ul style="list-style-type: none"><li>• Die Lifestyle®-Fernbedienung für die Steuerung Ihres Fernsehgeräts programmieren</li><li>• IR-Gerätecodes der Fernbedienung manuell eingeben</li><li>• Ihr Fernsehgerät ersetzen</li><li>• Audioanschlüsse am Fernsehgerät hinzufügen, ändern oder entfernen</li></ul>
Quellen einrichten	Für Quellen, die an Eingang 1 - 5 der Bedienkonsole angeschlossen sind, können Sie: <ul style="list-style-type: none"><li>• Den Namen des Geräts ändern</li><li>• Die Fernbedienung zur Steuerung eines Geräts programmieren und den IR-Sender bei Bedarf hinzufügen</li><li>• IR-Gerätecodes der Fernbedienung manuell eingeben</li><li>• Das Gerät entfernen</li><li>• Einen Audio- oder Videoanschluss hinzufügen oder die Art des Anschlusses ändern</li></ul>
Neues Gerät hinzufügen	Nach Abschluss der Einrichtung können Sie ein weiteres Gerät oder Zubehör zu Ihrem System hinzufügen.
Netzwerk-Setup	Schließen Sie den SoundTouch™-Drahtlosadapter an Ihr System an.
Aktualisieren	Führen Sie einer Systemsoftwareaktualisierung durch (weitere Informationen siehe „Systemsoftwareaktualisierung durchführen“ auf Seite 29).
Lernmodus	Senden Sie IR-Codes zum Programmieren einer lernenden Fernbedienung.
UNIFY beenden	UNIFY-Menü schließen



## Fehlerbehebung

Problem	Lösung
Das System reagiert nicht auf die anfängliche Betätigung der Bose®-Fernbedienung	<ul style="list-style-type: none"> <li>• Vergewissern Sie sich, dass die Bedienkonsole eingeschaltet ist.</li> <li>• Überprüfen Sie, ob die Fernbedienungsbatterien richtig eingelegt sind oder ausgetauscht werden müssen. Siehe „Batterien austauschen“ auf Seite 29.</li> <li>• Setzen Sie das System zurück. Siehe „System zurücksetzen“ auf Seite 28.</li> <li>• Drücken Sie eine Taste auf der Fernbedienung und beobachten Sie die Systemstatusanzeige an der Bedienkonsole. Sie sollte bei jedem Drücken blinken. Falls nicht, sehen Sie unter „Fernbedienung mit der Konsole abstimmen“ auf Seite 28 nach und befolgen Sie die Vorgehensweise.</li> </ul>
Die Bose-Fernbedienung steuert ein Gerät nicht, das ich während des Einrichtens hinzugefügt habe	<ul style="list-style-type: none"> <li>• Versuchen Sie, das Gerät erneut einzurichten. Drücken Sie die Setup-Taste an der Bedienkonsole. Wählen Sie die Geräteoptionen und befolgen Sie die Anweisungen auf dem Bildschirm, um das Gerät erneut einzurichten.</li> <li>• Ihr System benötigt möglicherweise eine Softwareaktualisierung. Siehe „Systemsoftwareaktualisierung durchführen“ auf Seite 29.</li> </ul>
Die Videoverbindung von einer angeschlossenen Quelle ist nicht optimal	Um den Videoanschluss zu wechseln, drücken Sie die Setup-Taste an der Bedienkonsole und wählen Sie die Geräteeinrichtungsoptionen. Befolgen Sie die Anweisungen auf dem Bildschirm.
System reagiert nicht	<ul style="list-style-type: none"> <li>• Vergewissern Sie sich, dass das Netzkabel fest am Netzteil angeschlossen ist.</li> <li>• Vergewissern Sie sich, dass das Acoustimass®-Modul und das Netzteil richtig an einer stromführenden Netzsteckdose angeschlossen sind.</li> <li>• (nur 135 Serie III-Systeme) Vergewissern Sie sich, dass das Lautsprecher-Array an eine stromführende Netzsteckdose angeschlossen ist.</li> <li>• Wählen Sie ein angeschlossenes Gerät aus dem SOURCE-Menü.</li> <li>• Setzen Sie das System zurück. Siehe „System zurücksetzen“ auf Seite 28.</li> </ul>
Kein Ton	<ul style="list-style-type: none"> <li>• Vergewissern Sie sich, dass das Acoustimass-Modul an eine stromführende Netzsteckdose angeschlossen ist.</li> <li>• (nur 135 Serie III-Systeme) Vergewissern Sie sich, dass das Lautsprecher-Array an eine stromführende Netzsteckdose angeschlossen ist.</li> <li>• Erhöhen Sie die Lautstärke.</li> <li>• Drücken Sie die Mute-Taste und vergewissern Sie sich, dass das System nicht stummgeschaltet ist.</li> <li>• Überprüfen Sie die Eingangsanschlüsse an der Bedienkonsole. Vergewissern Sie sich, dass Sie die richtige Quelle ausgewählt haben.</li> <li>• Vergewissern Sie sich, dass das Audioeingangskabel richtig an den Audio Out-Anschluss (nicht Bose Link) an der Bedienkonsole und das andere Ende richtig an den Media Center-Anschluss am Acoustimass-Modul angeschlossen ist.</li> <li>• (nur 135 Serie III-Systeme) Vergewissern Sie sich, dass das Audioeingangskabel richtig an den Audio Out-Anschluss (nicht Bose Link) an der Bedienkonsole und das andere Ende richtig an den Konsolenanschluss am Audio In-Anschluss angeschlossen ist.</li> <li>• (nur 135 Serie III-Systeme) Versuchen Sie mögliche Funkstörquellen, wie drahtlose Computernetzwerk-Router, SoundTouch™-Drahtlosadapter, andere drahtlose Geräte oder Mikrowellenöfen, weiter vom System weg zu stellen.</li> <li>• Schließen Sie für den Radiobetrieb die UKW- und MW-Antennen an.</li> <li>• Setzen Sie das System zurück. Siehe „System zurücksetzen“ auf Seite 28.</li> </ul>

# Pflege und Wartung

Problem	Lösung
Die Tonqualität hat sich verändert und die Statusanzeige des Lautsprecher-Arrays blinkt orange (135 Serie III-Systeme).	Drücken Sie die Setup-Taste an der Bedienkonsole und wählen Sie den Menüpunkt „Acoustimass neu anschließen“. Befolgen Sie die Anweisungen auf dem Bildschirm.
Fernsehgerät reagiert nicht auf Fernbedienungsbeefhle (135 Serie III-Systeme)	<ul style="list-style-type: none"> <li>• Vergewissern Sie sich, dass das Lautsprecher-Array den IR-Sensor am Fernsehgerät nicht blockiert. Ändern Sie die Position des Fernsehgeräts und des Lautsprecher-Arrays so, dass der IR-Sensor nicht blockiert ist.</li> <li>• Nähere Informationen zum Ort des IR-Sensors des Fernsehgeräts finden Sie in der Bedienungsanleitung, die mit dem Fernsehgerät mitgeliefert wurde.</li> </ul>
Unterbrochener Bass (135 Serie III-Systeme)	<ul style="list-style-type: none"> <li>• Überprüfen Sie, ob die Statusanzeige am Acoustimass®-Modul orange leuchtet und nicht blinkt.</li> <li>• Wenn die Statusanzeige des Lautsprecher-Arrays orange blinkt: <ul style="list-style-type: none"> <li>– Überprüfen Sie, ob das Acoustimass-Modul an eine stromführende Netzsteckdose angeschlossen ist und die Statusanzeige orange leuchtet.</li> <li>– Drücken Sie die Setup-Taste an der Bedienkonsole und wählen Sie den Menüpunkt „Acoustimass neu anschließen“. Befolgen Sie die Anweisungen auf dem Bildschirm.</li> <li>– Versuchen Sie, mögliche Funkstörquellen, wie drahtlose Computernetzwerk-Router, andere drahtlose Geräte oder Mikrowellenöfen, weiter vom System weg zu stellen.</li> </ul> </li> </ul>
Der Ton wird durch ein lautes Summen gestört, das durch elektromagnetische Störungen verursacht wird	Wenden Sie sich an den Bose®-Kundendienst, um herauszufinden, ob andere Elektrogeräte im Raum unerwünschte Signale senden, und zu erfahren, wie Sie dieses Problem beseitigen können.
Kein Radio-Empfang	<ul style="list-style-type: none"> <li>• Überprüfen Sie den korrekten Anschluss der Antennen.</li> <li>• Stellen Sie die MW-Antenne mindestens 50 cm von der Bedienkonsole und dem Acoustimass-Modul entfernt auf.</li> <li>• Ändern Sie die Position der Antenne, um den Empfang zu verbessern.</li> <li>• Vergewissern Sie sich, dass die MW-Antenne aufrecht ausgerichtet ist.</li> <li>• Stellen Sie die Antennen weiter von der Bedienkonsole, dem Fernsehgerät oder anderen elektronischen Geräten entfernt auf.</li> <li>• Wechseln Sie den eingestellten Sender. Führen Sie eine Sendersuche durch, und stellen Sie einen Sender mit klarem Empfang ein.</li> </ul>
UKW-Ton ist verzerrt	<ul style="list-style-type: none"> <li>• Ändern Sie die Position der Antenne, um den Empfang zu verbessern.</li> <li>• Ziehen Sie die UKW-Antenne ganz aus.</li> </ul>
Bild ist beim Ansehen von 3D-Inhalten verschwommen	<ul style="list-style-type: none"> <li>• Wenn Sie eine 3D-Brille des aktiven Typs haben, vergewissern Sie sich, dass sie eingeschaltet ist.</li> <li>• Versuchen Sie, die Einstellung der 3D-Systemoption zu ändern.</li> <li>• Sollte das Problem weiterhin bestehen, vergewissern Sie sich, dass das Lautsprecher-Array den IR-Sensor am Fernsehgerät nicht blockiert. Ändern Sie die Position des Fernsehgeräts und des Lautsprecher-Arrays so, dass der IR-Sensor nicht blockiert ist.</li> <li>• Nähere Informationen zum Ort des IR-Sensors des Fernsehgeräts finden Sie in der Bedienungsanleitung, die mit dem Fernsehgerät mitgeliefert wurde.</li> </ul>



# Pflege und Wartung

Problem	Lösung
Ton ist verzerrt	<ul style="list-style-type: none"><li>• Vergewissern Sie sich, dass das Audioeingangskabel nicht beschädigt und die Anschlüsse an beiden Enden fest sind.</li><li>• Verringern Sie die Lautstärke externer Geräte, die an die Bedienkonsole angeschlossen sind.</li><li>• (nur 135 Serie III-Systeme) Entfernen Sie die Schutzfolie von den Zierleisten und vom Gitter des Lautsprecher-Array und von der Vorderseite des Acoustimass-Moduls.</li></ul>
Kein Ton aus einem angeschlossenen Gerät	<ul style="list-style-type: none"><li>• Prüfen Sie die Anschlüsse.</li><li>• Wenn Sie eine koaxiale oder optische Audioverbindung verwenden, vergewissern Sie sich, dass Sie nicht beide Arten von Anschlüssen am selben Eingang an der Bedienkonsole vorgenommen haben.</li><li>• Vergewissern Sie sich, dass das Gerät eingeschaltet ist.</li><li>• Sehen Sie in der mit dem Gerät mitgelieferten Bedienungsanleitung nach.</li></ul>
Netzwerkeinrichtung kann nicht abgeschlossen werden	<ul style="list-style-type: none"><li>• Vergewissern Sie sich, dass der Computer und das SoundTouch™-System mit demselben Wi-Fi-Netzwerk verbunden sind.</li><li>• Vergewissern Sie sich, ob der Netzwerkname und das Passwort richtig sind.</li><li>• Vergewissern Sie sich, dass sich das System innerhalb der Reichweite des Routers befindet.</li><li>• Schließen Sie alle offenen Anwendungen.</li><li>• Prüfen Sie die Firewall-Einstellungen des Computers, um sicherzustellen, dass die SoundTouch™-App und SoundTouch™ Music Server erlaubte Programme sind.</li><li>• Starten Sie den Computer neu.</li><li>• Starten Sie das SoundTouch™-System neu (sehen Sie im Hilfesystem der App nach).</li><li>• Starten Sie Ihren Router neu.</li><li>• Deinstallieren Sie die App, stellen Sie das System auf die werkseitigen Voreinstellungen zurück und starten Sie den Einrichtungsvorgang erneut. Um das System auf die werkseitigen Voreinstellungen zurückzusetzen, trennen Sie das Bose® Link-Kabel und halten Sie dann die Steuertaste gedrückt, während Sie das Kabel wieder anschließen.</li><li>• Wenn der Netzwerkname nicht erscheint, da er ausgeblendet ist, blenden Sie Ihr Netzwerk ein, um die Einrichtung abzuschließen.</li><li>• Weitere Informationen erhalten Sie im SoundTouch™ Online-Forum oder wenden sie sich an den Bose-Support (siehe im Karton mitgelieferte Kontaktliste). Weitere Hinweise zur Fehlerbehebung finden Sie im Hilfesystem in der SoundTouch™-App.</li></ul>
Kein Fernsehbild, aber Ton	<ul style="list-style-type: none"><li>• Überprüfen Sie die Einstellung für den TV-Videoeingang. Dieser muss auf die richtige Videoquelle eingestellt sein.</li><li>• Vergewissern Sie sich, dass die Videokabel richtig angeschlossen sind.</li></ul>
Ein angeschlossenes Gerät reagiert nicht konsistent auf die Fernbedienungsbe-fehle	Versuchen Sie, den mitgelieferten externen IR-Sender an die Bedienkonsole anzuschließen. Drücken Sie die Setup-Taste an der Bedienkonsole, um Hilfe zu erhalten. Wählen Sie die Geräteoptionen und befolgen Sie die Anweisungen auf dem Bildschirm.
Tonunterbrechungen an koaxialen digitalen Audioeingängen	Wenden Sie sich an den Bose-Kundendienst, um ein Composite-Video-Kabel anzufordern, das für die koaxiale digitale Audioverbindung verwendet werden kann.

# Pflege und Wartung



---

## System zurücksetzen

1. Halten Sie die **Power**-Taste  an der Bedienkonsole 5 Sekunden oder so lange gedrückt, bis die Systemstatusanzeige an der Bedienkonsole rot leuchtet. Die Systemstatusanzeige an der Bedienkonsole leuchtet rot, wenn das System heruntergefahren wird.
2. Lassen Sie die **Power**-Taste  an der Bedienkonsole los, um das System neu zu starten. Die Systemstatusanzeige blinkt zuerst grün und leuchtet grün, wenn das System eingeschaltet und betriebsbereit ist.
3. Wenn Sie das System immer noch nicht mit der Fernbedienung steuern können, versuchen Sie die nächste Vorgehensweise, um die Fernbedienung mit der Bedienkonsole abzustimmen.

## Fernbedienung mit der Konsole abstimmen

Sie müssen diesen Vorgang möglicherweise durchführen, wenn Sie eine Fernbedienung ersetzen oder die Fehlerbehebungshinweise dies empfehlen.

1. Vergewissern Sie sich, dass das System eingeschaltet ist. Falls nicht, drücken Sie die **Power**-Taste  an der Bedienkonsole.
2. Halten Sie die Fernbedienung in die Nähe der Bedienkonsole.
3. Halten Sie sowohl die **Mute**-Taste  an der Bedienkonsole als auch die **OK**-Taste auf der Fernbedienung fünf Sekunden lang gleichzeitig gedrückt. Die Systemstatusanzeige blinkt, wenn die Abstimmung abgeschlossen ist.
4. Drücken Sie eine beliebige Taste auf der Fernbedienung und überprüfen Sie, ob die Systemstatusanzeige an der Bedienkonsole bei jedem Tastendruck blinkt.

## Systemsoftwareaktualisierung durchführen

Systemsoftwareaktualisierungen sind u. U. regelmäßig von Bose verfügbar und können über das Internet auf das mit dem System mitgelieferte USB-Laufwerk heruntergeladen werden.

1. Drücken Sie die **Setup**-Taste an der Vorderseite der Bedienkonsole, um das UNIFY®-Menü anzuzeigen.
2. Wählen Sie mithilfe der Navigationsdaten auf der Fernbedienung **Aktualisieren**.
3. Folgen Sie den Anweisungen auf dem Bildschirm.


**Hinweis:** Um sicherzustellen, dass die Bose-Fernbedienung aktualisiert wird, halten Sie die Fernbedienung während der Aktualisierung in die Nähe der Vorderseite der Bedienkonsole.

## Kundendienst


Weitere Hilfe zur Problembehandlung erhalten Sie beim Bose-Kundendienst. Eine Liste mit Kontaktinformationen finden Sie im Versandkarton.

## Batterien austauschen

Tauschen Sie alle vier Batterien aus, wenn Sie eine merkliche Verringerung des Bereichs oder der Reaktion der Fernbedienung feststellen oder wenn das Symbol für schwache Batterie auf dem Display der Fernbedienung erscheint.

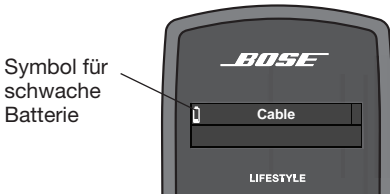

1. Öffnen Sie die Batteriefachabdeckung auf der Rückseite der Fernbedienung.  
AA-Batterien (IEC-LR6) (4)

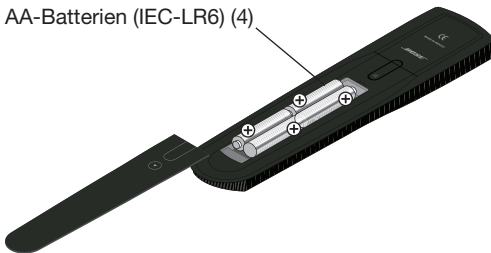

2. Nehmen Sie die alten Batterien heraus.
3. Legen Sie vier 1,5-V-AA-Batterien (IEC-LR6) ein und achten Sie dabei auf die Markierungen für die Plus- und Minuspole im Batteriefach.
4. Schließen Sie die Batteriefachabdeckung wieder.

# Pflege und Wartung

---

## Reinigung

---

Sie können die Außenseite mit einem weichen trockenen Tuch abwischen. Die Lautsprechergitter können Sie vorsichtig mit einem Staubsauger reinigen.

### **ACHTUNG:**

- Verwenden Sie KEINE Lösungsmittel, andere Chemikalien oder Sprays zu Reinigen.
- Auf KEINEN Fall dürfen Feuchtigkeit oder Gegenstände ins Innere gelangen.

## Eingeschränkte Garantie

---

Für das Lifestyle®-System gilt eine eingeschränkte Garantie. Weitere Informationen entnehmen Sie der Produktregistrierungskarte. Füllen Sie bitte den Informationsteil der Karte aus, und schicken Sie ihn an Bose. Ihre eingeschränkte Garantie ist jedoch unabhängig davon gültig.

Die mit diesem Produkt angegebenen Garantieinformationen gelten nicht in Australien und Neuseeland. Nähere Informationen zu unserer Garantie in Australien und Neuseeland finden Sie auf unserer Website unter [www.bose.com.au/warranty](http://www.bose.com.au/warranty) oder [www.bose.co.nz/warranty](http://www.bose.co.nz/warranty).



## Technische Daten

---

### **Fernbedienung**

Frequenz: 2,4 GHz

Bereich: 10 m

### **Nennleistung des Bedienkonsolen-Netzteils**

Wechselstromeingang: 100 - 240 V $\sim$  50/60 Hz, 1,0 A

Gleichstromausgang: 12 V $\text{---}$  35 W max.

### **Nennleistung des Acoustimass®-Moduls für Lifestyle® 535, 525 und 235 Serie III-Systeme**

USA/Kanada: 100 - 120 V $\sim$  50/60 Hz 350 W

International: 220 - 240 V $\sim$  50/60 Hz 350 W

Zwei Betriebsspannungen: 100 - 120/220 - 240 V $\sim$  50/60 Hz, 350 W

### **Nennleistung des Acoustimass®-Moduls nur für Lifestyle® 135 Serie III-Systeme**

Wechselstromeingang: 100 - 240 V $\sim$  50/60 Hz, 150 W

### **Nennleistung des Lautsprecher-Arrays nur für Lifestyle® 135 Serie III-Systeme**

Wechselstromeingang: 100 - 240 V $\sim$  50/60 Hz, 60 W

### **Nennleistung der drahtlosen Verbindung nur für Lifestyle® 135 Serie III-Systeme**

Ausgangsleistung: 5 mW bei 2400 - 2480 MHz

Bereich: 6,1 m



## Lizenzierungsinformationen

---

Dieses Produkt enthält ein oder mehrere kostenlose oder Open Source-Softwareprogramme, die von Fremdfirmen stammen und als Teil des STLinux-Softwarepakets verteilt werden. Unter [www.stlinux.com/download](http://www.stlinux.com/download) finden Sie nähere Informationen. Diese kostenlose und Open Source-Software unterliegt den Bedingungen der GNU General Public License, GNU Library/Lesser General Public License oder anderen verschiedenen und/oder zusätzlichen Copyright-Lizenzen, Hinweisen und Haftungsausschlüssen. Wenn Sie Ihre Rechte unter diesen Lizenzen wissen möchten, sehen Sie bitte in den spezifischen Bedingungen der Lizenzen, Hinweise und Haftungsausschlüsse nach, die Ihnen in einer elektronischen Datei namens „licenses.pdf“ in der Bedienkonsole des Produkts bereitgestellt werden. Um diese Datei zu lesen, benötigen Sie einen Computer mit einem USB-Anschluss und ein Softwareprogramm, das .pdf-Dateien anzeigen kann.

So laden Sie „licenses.pdf“ von der Bedienkonsole Ihres Produkts herunter:

1. Halten Sie die Setup-Taste an der Vorderseite der Bedienkonsole gedrückt, um den Systeminformationsbildschirm anzuzeigen.
2. Stecken Sie ein USB-Laufwerk (es sollte eines mit Ihrem Systempaket mitgeliefert worden sein) an den USB-Anschluss an der Vorderseite der Bedienkonsole.
3. Drücken Sie die OK-Taste auf der Fernbedienung, um die Datei auf das USB-Laufwerk zu kopieren. Dieser Downloadvorgang sollte ungefähr 30 Sekunden dauern. Sie können das USB-Laufwerk anschließend entfernen.
4. Um die Datei „licenses.pdf“ zu lesen, schließen Sie das USB-Laufwerk an einen Computer mit einem USB-Anschluss an, gehen Sie zum USB-Rootverzeichnis und öffnen Sie „licenses.pdf“ mit einem Softwareprogramm, das .pdf-Dateien anzeigen kann.

Wenn Sie eine Kopie des Quellcodes für die Open Source-Softwareprogramme erhalten möchten, die in diesem Produkt enthalten sind, senden Sie bitte eine schriftliche Anfrage an: Licensing Manager, Mailstop 6A2, Bose Corporation, The Mountain, Framingham, MA 01701-9168. Die Bose Corporation sendet Ihnen diesen Quellcode gegen eine Gebühr, die die Kosten abdeckt (zum Beispiel für die Medien, den Versand und die Bearbeitung), zu. Alle oben erwähnten Lizenzen, Hinweise und Haftungsausschlüsse sind in diesem Quellcode reproduziert und verfügbar. Dieses Angebot gilt für eine Zeitdauer von drei (3) Jahren nach dem Datum des Vertriebs dieses Produkts durch die Bose Corporation.







720422-0010

***BOSE***<sup>®</sup>  
*Better sound through research*<sup>®</sup>

©2014 Bose Corporation, The Mountain,  
Framingham, MA 01701-9168 USA  
AM720422 Rev. 00

BD-H6500

# Blu-ray™ Disc Player

## user manual

imagine the possibilities

Thank you for purchasing this Samsung product.  
To receive more complete service,  
please register your product at  
[www.samsung.com/register](http://www.samsung.com/register)



# Safety Information

## Warning

### CAUTION

#### RISK OF ELECTRIC SHOCK DO NOT OPEN

CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK). THERE ARE NO USER SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO QUALIFIED PERSONNEL.




This symbol indicates that high voltage is present inside. It is dangerous to make any kind of contact with any internal part of this product.



This symbol indicates that important literature concerning operation and maintenance has been included with this product.

- The slots and openings in the cabinet and in the back or bottom are provided for necessary ventilation. To ensure reliable operation of this apparatus, and to protect it from overheating, these slots and openings must never be blocked or covered.
  - Do not place this apparatus in a confined space, such as a bookcase, or built-in cabinet, unless proper ventilation is provided.
  - Do not place this apparatus near or over a radiator or heat register, or where it is exposed to direct sunlight.
  - Do not place vessels (vases etc.) containing water on this apparatus. A water spill can cause a fire or electric shock.
- Do not expose this apparatus to rain or place it near water (near a bathtub, washbowl, kitchen sink, or pool, etc.). If this apparatus accidentally gets wet, unplug it and contact an authorized dealer immediately.
- This apparatus uses batteries. In your community, there might be environmental regulations that require you to dispose of these batteries properly. Please contact your local authorities for disposal or recycling information.
- Do not overload wall outlets, extension cords or adaptors beyond their capacity, since this can result in fire or electric shock.
- Route power-supply cords so that they are not likely to be walked on or pinched by items placed on or against them. Pay particular attention to cords at the plug end, at wall outlets, and the point where they exit from the apparatus.
- To protect this apparatus from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the set due to lightning and power line surges.
- Before connecting the AC power cord to the DC adaptor outlet, make sure the voltage designation of the DC adaptor corresponds to the local electrical supply.
- Never insert anything metallic into the open parts of this apparatus. Doing so may create a danger of electric shock.
- To avoid electric shock, never touch the inside of this apparatus. Only a qualified technician should open this apparatus.
- Make sure to plug the power cord in until it is firmly seated. When unplugging the power cord from a wall outlet, always pull on the power cord's plug. Never unplug by pulling on the power cord. Do not touch the power cord with wet hands.
- If this apparatus does not operate normally - in particular, if there are any unusual sounds or smells coming from it - unplug it immediately and contact an authorized dealer or service center.

- Maintenance of Cabinet.
  - Before connecting other components to this product, be sure to turn them off.
  - If you move your product suddenly from a cold place to a warm place, condensation may occur on the operating parts and lens and cause abnormal disc playback. If this occurs, unplug the product, wait for two hours, and then connect the plug to the power outlet. Then, insert the disc, and try to play back again.
- Be sure to pull the power plug out of the outlet if the product is to remain unused or if you are leaving the house for an extended period of time (especially when children, elderly, or disabled people will be left alone in the house).
  - Accumulated dust can cause an electric shock, an electric leakage, or a fire by causing the power cord to generate sparks and heat or the insulation to deteriorate.
- Contact an authorized service center for information if you intend to install your product in a location with heavy dust, high or low temperatures, high humidity, chemical substances, or where it will operate 24 hours a day such as in an airport, a train station, etc. Failing to do so may lead to serious damage of your product.
- Use only a properly grounded plug and wall outlet.
  - An improper ground may cause electric shock or equipment damage. (Class I Equipment only.)
- To turn this apparatus off completely, you must disconnect it from the wall outlet. Consequently, the wall outlet and power plug must be readily accessible at all times.
- Do not allow children to hang on the product.
- Store the accessories (battery, etc.) in a location safely out of the reach of children.
- Do not install the product in an unstable location such as a shaky self, a slanted floor, or a location exposed to vibration.
- Do not drop or strike the product. If the product is damaged, disconnect the power cord and contact a service center.
- To clean this apparatus, unplug the power cord from the wall outlet and wipe the product using a soft, dry cloth. Do not use any chemicals such as wax, benzene, alcohol, thinners, insecticide, air fresheners, lubricants, or detergent. These chemicals can damage the appearance of the product or erase the printing on the product.
- Do not expose this apparatus to dripping or splashing. Do not put objects filled with liquids, such as vases on the apparatus.
- Do not dispose of batteries in a fire.
- Do not plug multiple electric devices into the same wall socket. Overloading a socket can cause it to overheat, resulting in a fire.
- There is danger of an explosion if you replace the batteries used in the remote with the wrong type of battery. Replace only with the same or equivalent type.
- **WARNING - TO PREVENT THE SPREAD OF FIRE, KEEP CANDLES AND OTHER ITEMS WITH OPEN FLAMES AWAY FROM THIS PRODUCT AT ALL TIMES.** 
- **WARNING - This product contains chemicals known to the State of California to cause cancer and reproductive toxicity.**

### FCC NOTE (for U.S.A)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on.

The user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

# Safety Information

- Connect this equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- This class B digital product meets all requirements of the Canadian Interference - Causing Equipment Regulations.

## Note to CATV system installer

This reminder is provided to call CATV system installer's attention to Article 820-40 of the National Electrical Code (Section 54 of Canadian Electrical Code, Part I) that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

## CLASS 1 LASER product

This Compact Disc player is classified as a CLASS 1 LASER product. Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Complies with 21CFR 1040.10 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007.

### DANGER :

- VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. AVOID DIRECT EXPOSURE TO BEAM. (FDA 21 CFR)

### CAUTION :

- CLASS 3B VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO THE BEAM. (IEC 60825-1)
- This product UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN THE COVER. DO NOT REPAIR THE PRODUCT YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

CLASS 1	LASER PRODUCT
KLASSE 1	LASER PRODUKT
LUOKAN 1	LASER LAITE
KLASS 1	LASER APPARAT
PRODUCTO	L SER CLASS 1

### NOTE I

- ▶ If the Region number of a Blu-ray Disc/DVDs does not correspond to the Region number of this product, the product cannot play the disc.


## Precautions

### Important Safety Instructions

Read these operating instructions carefully before using the unit. Follow all the safety instructions listed below.

Keep these operating instructions handy for future reference.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including AV receivers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where it exits the apparatus.
  11. Only use attachments/accessories specified by the manufacturer.
  12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. 
  13. Unplug this apparatus during lightning storms or when unused for long periods of time.
  14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as when the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Do not use the 3D Active Glasses for other purposes (such as general eyeglasses, sunglasses, protective goggles, etc.).
  - Do not use the 3D function or 3D Active Glasses while walking or moving around. Using the 3D function or 3D Active Glasses while moving around may cause you to bump into objects, trip, and/or fall, and cause serious injury.
  - If you want to enjoy 3D content, connect a 3D device (3D compliant AV receiver or TV) to the player's HDMI OUT port using a high-speed HDMI cable. Put on 3D glasses before playing the 3D content.
  - The player outputs 3D signals only through HDMI cable connected to the HDMI OUT port.
  - The video resolution in 3D play mode is determined by the resolution of the original 3D video. You can not change the resolution.
  - Some functions such as BD Wise, screen size adjustment, and resolution adjustment may not operate properly in 3D play mode.
  - You must use a high-speed HDMI cable for proper output of the 3D signal.
  - Stay at least three times the width of the screen from the TV when watching 3D images. For example, if you have a 46-inch screen, stay 138 inches (11.5 feet) from the screen.
  - Place the 3D video screen at eye level for the best 3D picture.
  - When the player is connected to some 3D devices, the 3D effect may not function properly.
  - This player does not convert 2D content into 3D.
  - "Blu-ray 3D" and "Blu-ray 3D" logo are trademarks of the Blu-ray Disc Association.

## Using the 3D function

### IMPORTANT HEALTH AND SAFETY INFORMATION FOR 3D PICTURES.

Read and understand the following safety information before using the 3D function.

- Some viewers may experience discomfort while viewing 3D TV such as dizziness, nausea, and headaches. If you experience any such symptom, stop viewing 3D TV, remove the 3D Active Glasses, and rest.
- Watching 3D images for an extended period of time may cause eye strain. If you feel eye strain, stop viewing 3D TV, remove your 3D Active Glasses, and rest.
- A responsible adult should frequently check on children who are using the 3D function. If there are any reports of tired eyes, headaches, dizziness, or nausea, have the child stop viewing 3D TV and rest.

# Contents

## SAFETY INFORMATION

- 2 **Warning**
- 4 **Precautions**
- 4     Important Safety Instructions
- 5 **Using the 3D function**

## GETTING STARTED

- 8 **Accessories**
- 9 **Front Panel**
- 9 **Rear Panel**
- 10 **Remote Control**
- 10     Tour of the Remote Control
- 11     Setting the Remote Control to Operate Your TV

## CONNECTIONS

- 12 **Connecting to a TV**
- 13 **Connecting to an Audio System**
- 13     **Method 1** Connecting to an HDMI supported AV receiver
- 13     **Method 2** Connecting to an AV receiver with Dolby Digital or DTS decoder
- 14 **Connecting to a Network Router**
- 14     Wired Network
- 14     Wireless Network

## SETTINGS

- 15 **The Initial Settings Procedure**
- 15 **The Home Screen**
- 16 **Accessing the Settings Screen**
- 16     Buttons on the Remote Control Used for the Settings Menu

- 17 **Settings Menu Functions**
- 17     Picture
- 18     Sound
- 18     Network
- 19     Smart Hub
- 19     System
- 21     Support
- 21 **Networks and the Internet**
- 21     Configuring Your Network Connection
- 24     Wi-Fi Direct
- 24 **Upgrading Software**
- 25     Update Now
- 25     Auto Update

## MEDIA PLAY

- 27 **Playing Commercial Discs**
- 27     Disc Storage & Management
- 27 **Playing Photos, Videos, and Music (Multimedia)**
- 27     Playing Media Content Saved on a USB Device
- 28     Playing Media Content Saved in a Computer/Mobile Device
- 28 **Playing a Disc with User Recorded Content**
- 29 **Playing Media Content Saved in a Cloud Service**
- 29 **Samsung Link**
- 30 **Controlling Video Playback**
- 30     Buttons on the Remote Control used for Video Playback
- 30     Using the Settings Menu (During the Playback)
- 32     Using the View & Options Menus



32	<b>Controlling Music Playback</b>
32	Buttons on the Remote Control used for Music Playback
33	Using the Options Menu (During the Playback)
33	Using the View & Options Menus (On a file screen)
34	Repeating Tracks on an Audio CD
34	Shuffling Tracks on an Audio CD
34	Creating a Playlist from an Audio CD
34	Ripping
35	<b>Playing Photo Contents</b>
35	Using the Tools Menu (During Playback)
36	Using the View & Options Menus
37	<b>Send files</b>
37	Copying Videos, Music or Photos
37	Using the Send Function

## NETWORK SERVICES

38	<b>Creating a Samsung Account</b>
38	<b>Before Using Apps</b>
39	<b>Using Movies &amp; TV Shows</b>
40	<b>Using Apps</b>
40	The Apps Screen at a Glance
41	Starting an Application
42	<b>Screen mirroring</b>
42	<b>Using the Web Browser</b>
43	Link Browsing and Pointer Browsing
43	The Control Panel at a Glance
44	Using the Setting Menu
46	<b>Linking Your Internet Service Accounts to the Product</b>
46	<b>BD-LIVE™</b>

## APPENDIX

47	<b>Additional Information</b>
47	Notes
49	Resolution according to the contents type
50	Digital Output Selection
51	<b>Troubleshooting</b>
53	Repairs
54	<b>Disc and Format Compatibility</b>
54	Disc types and contents your product can play
54	Disc types your product cannot play
55	Region Code
55	<b>Logos of Discs the product can play</b>
56	Supported Formats
59	<b>Compliance and Compatibility Notice</b>
60	<b>Copy Protection</b>
60	<b>Network Service Disclaimer</b>
61	Licenses
62	Specifications

 
# Getting Started

## Accessories


Check for the supplied accessories shown below.



Batteries for Remote Control (AAA Size)  
(4301-000115)



User Manual  
(AK68-02465A)

 


Quick Setup Guide  
(AK68-02464A)




Remote Control  
(AK59-00177B)


## Front Panel

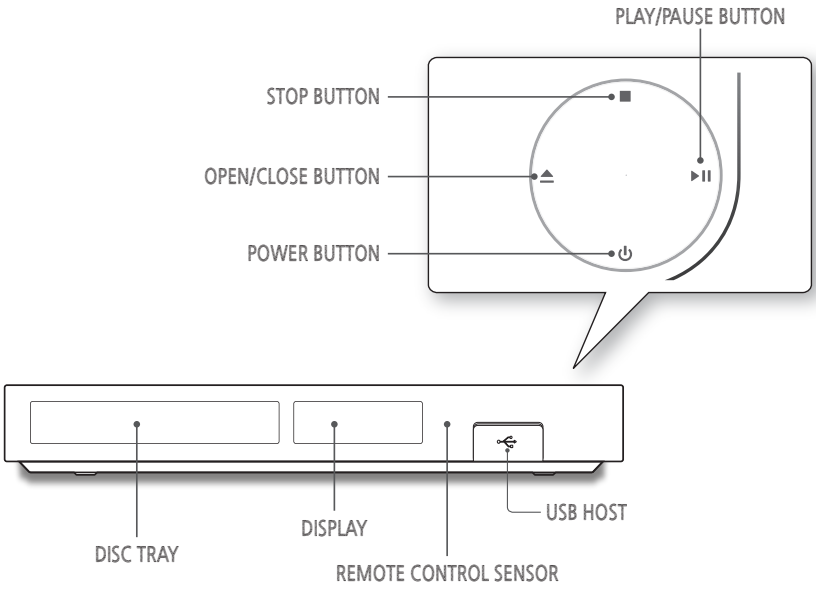

### NOTE

- ▶ To upgrade the product's software through the USB Host jack, you must use a USB memory stick.
- ▶ When the product displays the Blu-ray Disc's menu, you cannot start the movie by pressing the Play button on the product or the remote control. To play the movie, you must select Play Movie or Start in the disc's menu, and then press the  button on the remote control.


## Rear Panel

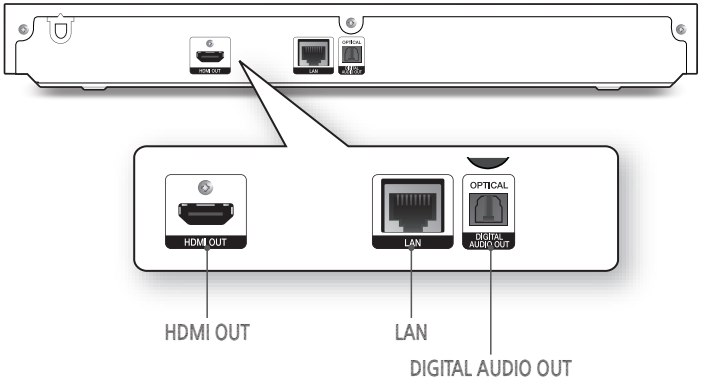


# Getting Started

## Remote Control

### Tour of the Remote Control

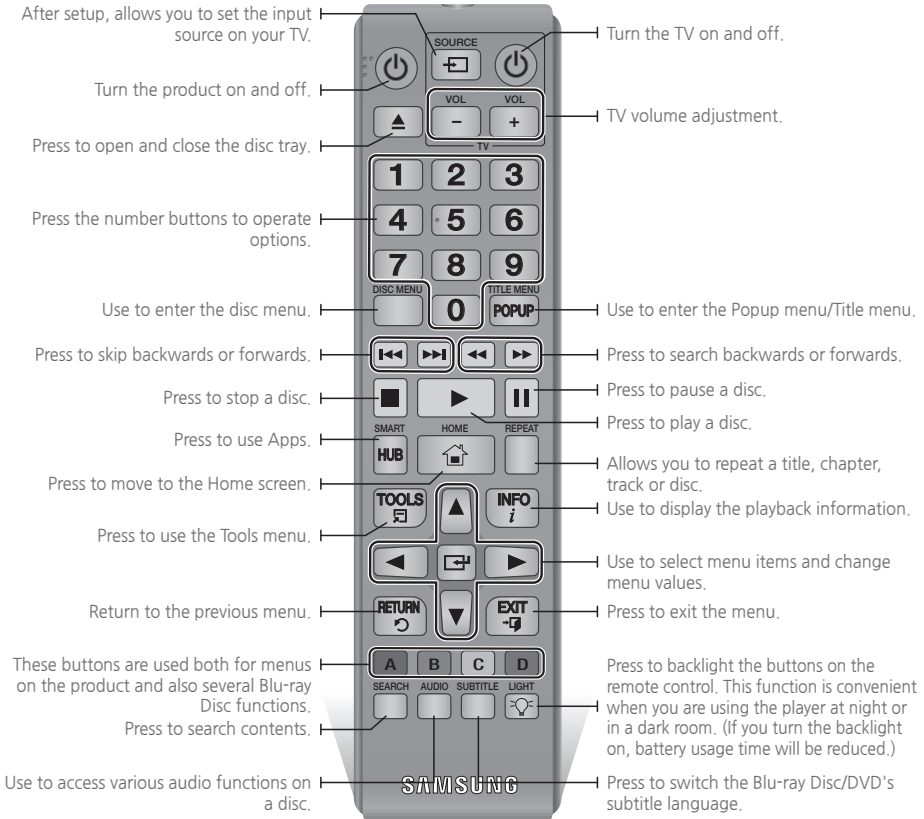

### Installing batteries

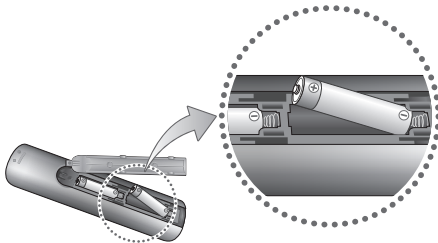

#### NOTE

- ▶ If the remote control does not operate properly:
  - Check the polarity +/- of the batteries.
  - Check if the batteries are drained.
  - Check if the remote sensor is blocked by obstacles.
  - Check if there is any fluorescent lighting nearby.

#### CAUTION

- ▶ Dispose of batteries according to local environmental regulations. Do not put them in the household trash.

## Setting the Remote Control to Operate Your TV

You can control certain functions of your TV with this remote control.

Button	Function
TV POWER	Used to switch the television on and off.
TV SOURCE	Used to select an external source connected to the TV.
TV VOL (+/-)	Used to adjust the volume of the television.
TV CH (▲/▼)	Used to select the desired channel.

### NOTE I

- ▶ The functions listed above will not necessarily work on all televisions. If you encounter problems, use the TV remote control.

To determine whether your television is compatible, follow the instructions below.

1. Switch your television on.
2. Point the remote control towards the television.
3. Press and hold the **TV POWER** button. Then, using the number buttons, enter the two-figure code in the table to the right that corresponds to the brand of your television.  
If your television is compatible with the remote control, it will switch off.  
The remote is now programmed to operate the TV.

### NOTE I

- ▶ If several codes are listed for your television brand, try each one in turn until you find one that works.
- ▶ If you replace the remote control's batteries, you must set the brand code again.

## TV Control Codes


Brand	Code	Brand	Code
SAMSUNG	TV POWER+01, +02, +03, +04, +05, +06, +07, +08, +09	NOBLEX	TV POWER+66
AIWA	TV POWER+82	NOKIA	TV POWER+74
ANAM	TV POWER+10, +11, +12, +13, +14, +15, +16, +17, +18	NORDMENDE	TV POWER+72, +73, +75
BANG & OLUFSEN	TV POWER+57	PANASONIC	TV POWER+13, +53, +54, +74, +75
BLAUPUNKT	TV POWER+71	PHILIPS	TV POWER+06, +55, +56, +57
BRANDT	TV POWER+73	PHONOLA	TV POWER+06, +56, +57
BRIONVEGA	TV POWER+57	PIONEER	TV POWER+58, +59, +73, +74
CGE	TV POWER+52	RADIOLA	TV POWER+06, +56
CONTINENTAL EDISON	TV POWER+75	RADIOMARELLI	TV POWER+57
DAEWOO	TV POWER+19, +20, +23, +24, +25, +26, +27, +28, +29, +30, +31, +32, +33, +34	RCA	TV POWER+45, +46
EMERSON	TV POWER+64	REX	TV POWER+74
FERGUSON	TV POWER+73	SABA	TV POWER+57, +72, +73, +74, +75
FINLUX	TV POWER+06, +49, +57	SALORA	TV POWER+74
FORMENTI	TV POWER+57	SANYO	TV POWER+41, +42, +43, +44, +48
FUJITSU	TV POWER+84	SCHNEIDER	TV POWER+06
GRADIENTE	TV POWER+70	SELECO	TV POWER+74
GRUNDIG	TV POWER+49, +52, +71	SHARP	TV POWER+36, +37, +38, +39, +48
HITACHI	TV POWER+60, +72, +73, +75	SIEMENS	TV POWER+71
IMPERIAL	TV POWER+52	SINGER	TV POWER+57
JVC	TV POWER+61, +79	SINUDYNE	TV POWER+57
LG	TV POWER+06, +19, +20, +21, +22, +78	SONY	TV POWER+35, +48
LOEWE	TV POWER+06, +69	TELEAVA	TV POWER+73
LOEWE OPTA	TV POWER+06, +57	TELEFUNKEN	TV POWER+67, +73, +75, +76
MAGNAVOX	TV POWER+40	THOMSON	TV POWER+72, +73, +75
METZ	TV POWER+57	THOMSON ASIA	TV POWER+80, +81
MITSUBISHI	TV POWER+06, +48, +62, +65	TOSHIBA	TV POWER+47, +48, +49, +50, +51, +52
MIVAR	TV POWER+52, +77	WEGA	TV POWER+57
NEC	TV POWER+83	YOKO	TV POWER+06
NEWSAN	TV POWER+68	ZENITH	TV POWER+63

# Connections

## Connecting to a TV

Connect an HDMI cable (not supplied) from the **HDMI OUT** jack on the back of the product to the **HDMI IN** jack on your TV.

- Do not connect the power cord to the wall outlet until you have made all the other connections.
- When you change the connections, turn off all devices before you start.

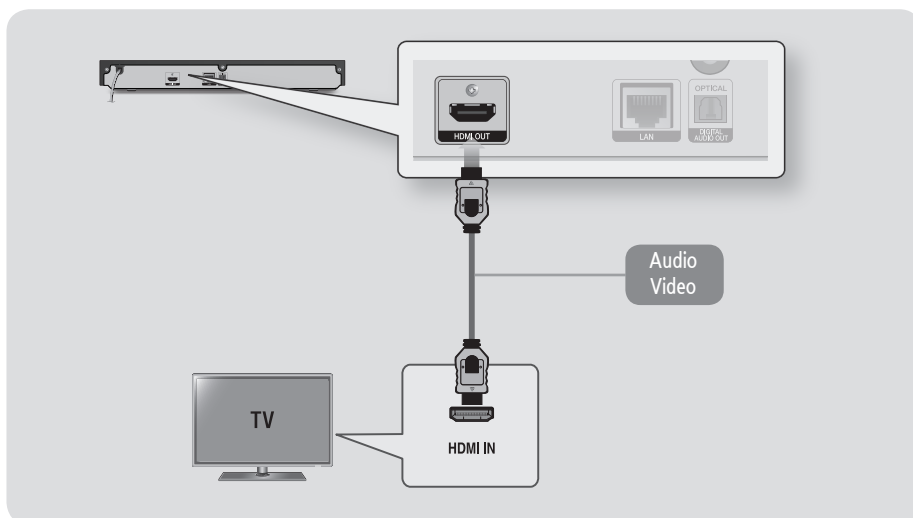

### NOTE

- ▶ If you use an HDMI-to-DVI cable to connect to your display device, you must also connect the **DIGITAL AUDIO OUT** on the product to an audio system to hear audio.
- ▶ An HDMI cable outputs digital video and audio, so you don't need to connect an audio cable.
- ▶ Depending on your TV, certain HDMI output resolutions may not work. Please refer to the user manual of your TV.
- ▶ When you connect the product to your TV using the HDMI cable or to a new TV, and then turn it on for the first time, the product automatically sets the HDMI output resolution to the highest supported by the TV.
- ▶ A long HDMI cable may cause screen noise. If this occurs, set **HDMI Deep Color** to **Off** in the menu.
- ▶ To view video in the HDMI 720p, 1080i, 1080p or 2160p output mode, you must use a High speed (category 2) HDMI cable.
- ▶ HDMI outputs only a pure digital signal to the TV. If your TV does not support HDCP (High-bandwidth Digital Content Protection), random noise appears on the screen.

## Connecting to an Audio System

You can connect this product to the audio system using the methods illustrated below.


- Do not connect the power cord to the wall outlet until you have made all the other connections.
- When you change the connections, turn off all devices before you start.

### Method 1 Connecting to an HDMI supported AV receiver

- Connect an HDMI cable (not supplied) from the **HDMI OUT** jack on the back of the product to the **HDMI IN** jack on your receiver.
- Best quality (Recommended)

### Method 2 Connecting to an AV receiver with Dolby Digital or DTS decoder

- Using a digital Optical cable (not supplied), connect the **OPTICAL DIGITAL AUDIO OUT** jack on the product to the **DIGITAL OPTICAL IN** jack of the receiver.
- Good quality
- You will hear sound only through the front two speakers with **Digital Output** set to **PCM**.

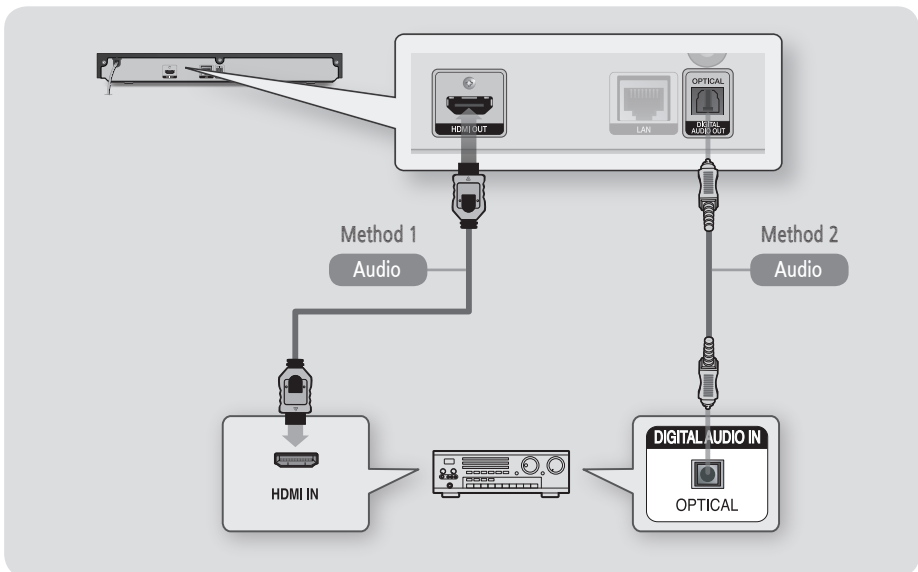

# Connections


## Connecting to a Network Router

You can connect your product to your network router using one of the methods illustrated below.

To use the AllShare network functionality, you must connect your PC to your network as shown in the illustrations.

The connection can be wired or wireless.


### Wired Network

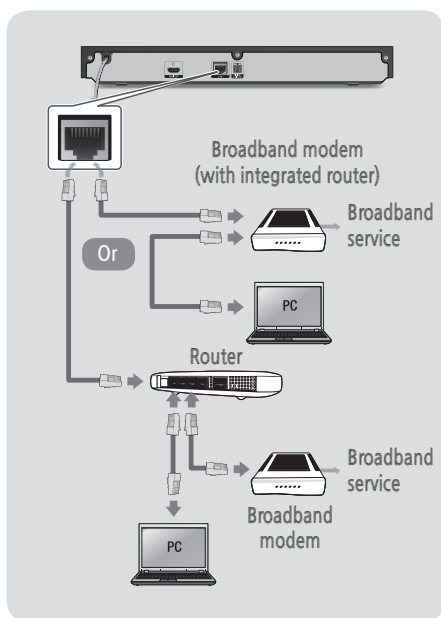

#### NOTE 1

- ▶ Your router or your Internet Service Provider's policies may prevent the product from accessing Samsung's software update server. If this occurs, contact your Internet Service Provider (ISP) for more information.
- ▶ DSL users, please use a router to make a network connection.

### Wireless Network

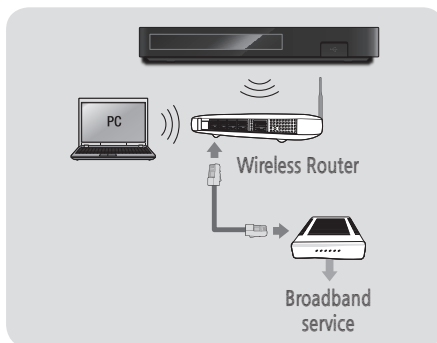

#### NOTE 1

- ▶ If your wireless router supports DHCP, this product can use a DHCP or static IP address to connect to the wireless network.
- ▶ Set your wireless router to Infrastructure mode. Ad-hoc mode is not supported.
- ▶ The product supports only the following wireless security key protocols:
  - WEP (OPEN/SHARED), WPA-PSK (TKIP/AES), WPA2-PSK (TKIP/AES)
- ▶ Select a channel on the wireless router that is not currently being used. If the channel set for the wireless router is currently being used by another device nearby, it will result in interference and communication failure.
- ▶ If you select the Pure High-throughput (Greenfield) 802.11n mode and set the Encryption type on your router to WEP, TKIP or TKIP-AES (WPS2Mixed), the product will not support a connection in compliance with new Wi-Fi certification specifications.
- ▶ Wireless LAN, by its nature, may cause interference, depending on the operating conditions (router performance, distance, obstacles, interference by other radio devices, etc).



## The Initial Settings Procedure


- The Home screen will not appear if you do not configure the initial settings.
- The OSD (On Screen Display) may change in this product after you upgrade the software version.
- The access steps may differ depending on the menu you selected.

After you have connected the product to your TV, turn on the TV and product. When you turn on the product the first time, the product's Initial Settings screen appears on the TV. The Initial Settings procedure lets you set the On Screen Display (OSD) and menu languages, the aspect ratio (screen size), and network configuration, and connect the player to the Internet. For complete Initial Settings instructions, see the Quick Setup Guide.

### I NOTE I

- ▶ If you skip Network Setup during the Initial Settings procedure, you can configure your network settings later. See "Configuring Your Network Connection" on pages 21~24 for instructions.
- ▶ If you want to display the Initial Settings screen again and make changes, select **Settings > System > Setup** in the Home screen or select the Reset option. (See pages 19 or 21)
- ▶ If you want to use an **Anynet+(HDMI-CEC)** function, please follow the instructions below.
  - 1) Connect the product to an **Anynet+(HDMI-CEC)**-compliant Samsung TV using HDMI Cable.
  - 2) Set the **Anynet+(HDMI-CEC)** feature to On in both the TV and the product.
  - 3) Set the TV to the Initial Settings Procedure.

## The Home Screen

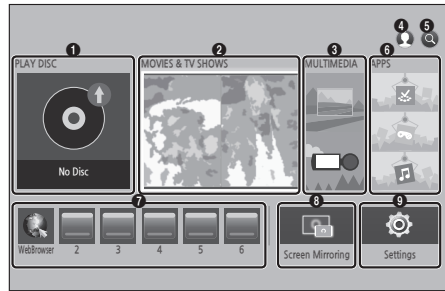


1	<b>PLAY DISC</b> : Lets you play photos, videos, or music content from Disc.
2	<b>MOVIES &amp; TV SHOWS</b> : Lets you view Movies and TV Shows from the Internet. <b>I NOTE I</b> ▶ Depending on your country, this menu function may not be supported.
3	<b>MULTIMEDIA</b> : Lets you play photos, videos, or music content from USB or mobile devices, or PCs.
4	<b>Sign In</b> : Lets you log in with your Samsung account.
5	<b>Search</b> : Lets you search for contents in Movies and TV Shows, Apps and YouTube by entering corresponding search words.
6	<b>APPS</b> : Gives you access to various applications you can download.
7	<b>My Apps</b> : Apps downloaded from My Apps are displayed.
8	<b>Screen Mirroring</b> : Lets you view the screen of your smart phone or android tablet on a TV you have connected to this product.
9	<b>Settings</b> : Opens the product's menu. In the menu can set various functions to suit your personal preferences.


### I NOTE I

- ▶ If you leave the product in the stop mode for more than 5 minutes without using it, a screen saver will appear on your TV. If the product is left in the screen saver mode for more than 20 minutes, the power will automatically turn off.

# Settings


## Accessing the Settings Screen



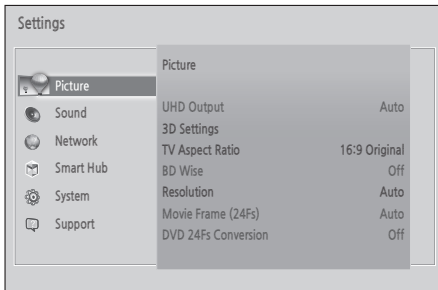



1. Select **Settings** on the Home screen, and then press  button. The **Settings** screen appears.

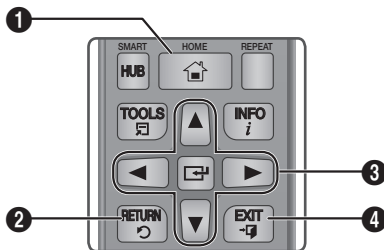





2. To access the menus, sub-menus, and options on the **Settings** screen, please refer to the remote control illustration below.

## Buttons on the Remote Control Used for the Settings Menu



1	<b>HOME</b> button : Press to move to the Home screen.
2	<b>RETURN</b> button : Press to return to the previous menu.
3	 ( <b>Enter</b> ) / <b>DIRECTION</b> buttons : <ul style="list-style-type: none"><li>• Press     to move the cursor or select an item.</li><li>• Press the  button to activate the currently selected item or confirm a setting.</li></ul>
4	<b>EXIT</b> button : Press to exit the current menu.

## Detailed Function Information

Each Settings function, menu item, and individual option is explained in detail on-screen. To view an explanation, use the     buttons to select the function, menu item, or option. The explanation will usually appear on the right side of the screen. A short description of each Settings function starts on the next page. Additional information on some of the functions is also in the Appendix of this manual.

## Settings Menu Functions

### Picture

#### UHD Output

This option outputs HDMI video at UHD (Ultra High Definition) resolution. This is only available when **Movie Frame** is set to **Auto**.

#### NOTE

- ▶ To use this feature, you must connect the product to a device that supports UHD resolution and you must have content that plays at 24Fs (film speed).
- ▶ This device cannot play UHD contents However contents with resolution lower than Full HD can be up-scaled to UHD.
- ▶ For UHD resolution output, only 2160\*3840 24 frame rate output is available.

#### 3D Settings

Select whether to play a Blu-ray Disc with 3D contents in 3D Mode.

- ✓ If you move to the Home or Apps screen while in 3D mode, the product will switch to 2D mode automatically.

#### TV Aspect Ratio

Lets you adjust the output of the product to the screen size and screen format of your TV.

#### BD Wise

BD Wise is Samsung's latest inter-connectivity feature.

When you connect a Samsung product and a Samsung TV with **BD Wise** to each other via HDMI, and **BD Wise** is on in both the product and TV, the product outputs video at the video resolution and frame rate of the Blu-ray Disc/DVD.

#### Resolution

Set the output resolution of the HDMI video signal to **BD Wise**, **Auto**, **1080p**, **1080i**, **720p** or **480p**.

The number indicates the number of lines of video per frame.

The i and p indicate interlaced and progressive scan, respectively. Generally, the more lines, the higher quality.

#### Movie Frame (24Fs)

If the product is connected to a 24Fs compatible TV, setting the **Movie Frame (24Fs)** feature to **Auto** lets the product adjust its HDMI output to 24 frames per second automatically for improved picture quality.

- You can enjoy the **Movie Frame (24Fs)** feature only on a TV supporting this frame rate.
- Movie Frame is only available when the product is in the HDMI 1080i or 1080p output resolution modes.

#### DVD 24Fs Conversion

Converts DVD playback to 24 frames per second and outputs it via HDMI. This option is only available when **Movie Frame (24Fs)** is set to on.

#### Fit Screen Size

Set the screen to the optimal size. (Apply Smart Hub, Screen Mirroring only)

#### HDMI Color Format

Lets you set the color space format for the HDMI output so that it matches the capabilities of the connected device (TV, monitor, etc). The screen goes black momentarily after you have selected a format.

#### HDMI Deep Color

Lets you set the product to output HDMI video with Deep Color. Deep Color provides more accurate color reproduction with greater color depth.

#### Progressive Mode

Lets you improve picture quality when viewing DVDs.

# Settings

## Sound

### Digital Output

Lets you select the digital audio output format that is suitable for your TV or AV Receiver. For more details, see the digital output selection table on page 50.

### PCM Downsampling

Lets you choose to have 96Khz PCM signals downsampled to 48Khz before they are outputted to an amplifier. Choose On if your amplifier or receiver is not compatible with a 96Khz signal.

### Dynamic Range Control

Lets you apply dynamic range control to Dolby Digital, Dolby Digital Plus, and Dolby TrueHD audio.

- ✓ **Auto** : Automatically controls the dynamic range of Dolby TrueHD audio, based on information in the Dolby TrueHD soundtrack. Also turns dynamic range control on for Dolby Digital and Dolby Digital Plus.
- ✓ **Off** : Leaves the dynamic range uncompressed, letting you hear the original sound.
- ✓ **On** : Turns dynamic range control on for all three Dolby formats. Quieter sounds are made louder and the volume of loud sounds is reduced.

### Downmixing Mode

Lets you select the multi-channel downmix method that is compatible with your stereo system. You can choose to have the product downmix to normal stereo or to surround compatible stereo.

### DTS Neo:6 Mode

You can enjoy multichannel sound via HDMI output from a 2 channel audio source.

## Audio Sync

In some cases when the product is connected to a digital TV, the audio signal may not synchronize with the video signal. If this occurs, adjust the audio delay time to match the video signal.

- You can set the audio delay time between 0 msec and 250 msec. Adjust it to the optimal setting.

### NOTE

- ▶ The audio delay time you specify may not be exact depending on the played content.

## Network

### Network Status

Lets you check the current network and Internet status.

### Network Settings

Configure the network connection so you can enjoy various features such as Internet services or AllShare functionality, and perform Software Updates.

### Wi-Fi Direct

Lets you connect a Wi-Fi Direct device to the product using a peer-to-peer network, without the need for a wireless router.

Note that if the product is connected to a wireless network, it may be disconnected when you use Wi-Fi Direct.

### NOTE

- ▶ Text files, such as files with a .TXT or .DOC extension, will not display when you are using the **Wi-Fi Direct** function.

### Multimedia Device Settings

Lets you control which devices on your network, such as smart phones and tablets, can share content with your product.

### Device Name

Lets you input a name for the product that will identify it on your networks.

### BD-Live Settings

Set various BD-Live functions. BD-Live allows you to access extra features available on some Blu-ray Discs if you are connected to the Internet.

- ✓ **BD-Live Internet Connection** : Lets you fully allow, partly allow, or prohibit a BD-Live Internet connection.
- ✓ **BD Data Management** : Manage BD data downloaded from a BD-Live service or Blu-ray Disc.

## Smart Hub

### Apps Settings

Lets you configure App notification settings and view basic info about your Apps.

- ✓ **Push Notification Settings** : Receive notifications from selected services.
- ✓ **Properties** : See basic info about Apps.

### VOD Rating Lock

Lets you lock access to Video on Demand (VOD) content based on its rating. To use, you must enter the security PIN.

#### I NOTE I

- ▶ Depending on your country, this menu function may not be supported.

### Caption

For use with VOD playback that supports closed captions. Lets you change the displayed caption's font color and size.

#### I NOTE I

- ▶ The Caption function does not work with VOD services that do not support closed captions.

### Terms & Policy

You must review and agree to both the App Terms & Conditions and the privacy policy to use App services.

### Samsung account Terms and Conditions, Privacy Policy

You can view and agree to the terms or privacy policy for your Samsung account and a variety of other services.

### Reset Smart Hub

Resets all Smart Hub settings to their default settings. To use, you must enter the security PIN.

## System

### Setup

Lets you re-run the Initial Settings procedure. See the Quick Setup Guide for details.

### Quick Start

Lets you set the product to turn on quickly by decreasing the boot time.

#### I NOTE I

- ▶ If this function is set to **On**, Standby power consumption will be increased.

# Settings

## Language

You can select the language you prefer for the On-screen menu, disc menu, audio, subtitles, etc.

- The language you select for the disc menu, disc audio, or subtitles will only appear if it is supported on the disc.

## Device Manager

You can connect a wireless USB keyboard or mouse to the USB port on the front of the product.

- ✓ **Keyboard Settings** : Lets you configure a wireless USB keyboard connected to the product.

### NOTE

- ▶ You can use the keyboard only when a **QWERTY** keyboard screen or window appears in the Web Browser.
- ✓ **Mouse Settings** : Lets you configure a wireless USB mouse connected to the product. You can use the mouse in the product's menu and the Web Browser in the same way you use a mouse on your PC.

### ■ To use a mouse with the product's menu:

1. Connect the USB mouse to the product.
2. Click the primary button you selected in **Mouse Settings**. The Simple Menu appears.
3. Click the menu options you want.

### NOTE

- ▶ Some USB HID keyboards and mice may not be compatible with your product.
- ▶ Some HID keyboard keys may not work.
- ▶ Wired USB keyboards are not supported.
- ▶ Some applications may not be supported.
- ▶ If a wireless HID Keyboard does not operate because of interference, move the keyboard closer to the product.

## Security

The default security PIN is 0000. Enter the default PIN to access the security function if you haven't created your own PIN. After you have accessed the security function for the first time, change the PIN using the Change PIN function.

- ✓ **BD Parental Rating** : Prevents playback of Blu-ray Discs with a rating equal to or above a specific age rating you have set unless you enter the PIN.
- ✓ **DVD Parental Rating** : Prevents playback of DVDs with a rating above a specific numerical rating you have set unless you enter the PIN.
- ✓ **Change PIN** : Change the 4-digit PIN used to access security functions.

### ■ If you forget your PIN:

1. Remove any disc or USB storage device.
2. Press and hold the **■** button on the top panel for 5 seconds or more. The initialization message appears on the screen, and the power will turn off automatically. When you turn your product on again, all the settings will be reset.

## General

You can change the options listed below to match your preferences.

- ✓ **Front Display** : Change the brightness of the front panel.
- ✓ **Time Zone** : Select the time zone in which you live.
- ✓ **Menu Transparency** : Lets you adjust the transparency of the menu box.

## Anynet+ (HDMI-CEC)

Anynet+ is a convenient function that offers linked operations with other Samsung product that have the Anynet+ feature and lets you control those products with one Samsung TV remote. To operate this function, you must connect this product to an Anynet+ Samsung TV using an HDMI cable.

## Support

### Remote Management

When activated, lets Samsung Call Center agents diagnose and fix problems with your player remotely. Requires an active Internet connection.

#### NOTE

- ▶ Remote Management service might not be available in some countries.
- ▶ To use Remote Management:
  - 1) Call the Samsung Contact Center and ask for remote support.
  - 2) Open the player's menu on your TV and go to the Support section.
  - 3) Select Remote Management, and then read and agree to the service agreements. When the PIN screen appears, provide the PIN number to the agent.
  - 4) The agent accesses your player.

### Software Update

The Software Update menu allows you to upgrade the product's software for performance improvements or additional services.

### Contact Samsung

Provides contact information for assistance with your product.

### Reset

Resets all settings to their default settings except for the network and Smart Hub settings, and then starts the Setup function. To use, you must enter the security PIN. The default security PIN is 0000.

## Networks and the Internet

When you connect this product to a network, you can use network based applications and functions such as Smart Hub and BD-LIVE, and upgrade the product's software through the network connection. For more information about accessing and using Internet services, see the Network Services chapter of this manual on pages 38~46. Instructions for configuring the network connection start below.

### Configuring Your Network Connection

Before you begin, contact your ISP to find out if your IP address is static or dynamic. If it is dynamic, and you have a wired or wireless network, we recommend using the Automatic configuration procedures described below.






If you are connecting to a wired network, connect the product to your router using a LAN cable before you start the configuration procedure.

If you are connecting to a wireless network, disconnect any wired network connection before you begin.

To begin configuring your network connection, follow these steps:

### Wired Network

#### □ Wired - Automatic

1. In the Home screen, select **Settings**, and then press the  button.
2. Select **Network**, and then press the  button.
3. Select **Network Settings**, and then press the  button.
4. Select **Wired** in the **Network Settings** screen, and then press the  button.
5. Select the **Connect** button, and then press the  button. The product detects the wired connection, verifies the network connection and then connects to the network.

# Settings

## □ Wired - Manual

If you have a static IP address or the Automatic procedure does not work, you'll need to set the **Network Settings** values manually.

Follow Steps 1 and 2 in Wired - Automatic, and then follow these steps:

1. Select **Network Status**. The product searches for a network, and then displays the connection failed message.
2. On the bottom of the screen, select **IP Settings**, and then press the **OK** button. The **IP Settings** screen appears.
3. Select the IP Setting field, and then press the **OK** button.
4. Select **Enter manually** in the IP Setting field, and then press the **OK** button.
5. Select a value to enter (**IP Address**, for example), and then press the **OK** button. Use the number keypad on your remote control to enter the numbers for the value. You can also enter numbers using the **▲▼** buttons. Use the **◀▶** buttons on the remote control to move from entry field to entry field within a value. When done with one value, press the **OK** button.
6. Press the **▲** or **▼** button to move to another value, and then enter the numbers for that value following the instructions in Step 5.
7. Repeat Steps 5 and 6 until you have filled in all values.

## I NOTE I

- ▶ You can get the Network values from your Internet provider.
8. When finished entering all the values, select **OK**, and then press the **OK** button. The product verifies the network connection and then connects to the network.

## Wireless Network


You can set up a wireless network connection in four ways:

- Wireless Automatic
- Wireless Manual
- WPS(PBC)
- WPS(PIN)

When you configure the wireless network connection, any wireless network devices currently connected through the product or, if applicable, the product's current wired connection, will be disconnected.

## □ Wireless - Automatic

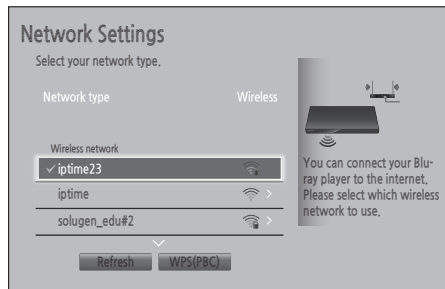


1. In the Home screen, select **Settings**, and then press the **OK** button.
2. Select **Network**, and then press the **OK** button.
3. Select **Network Settings**, and then press the **OK** button.
4. Select **Wireless** in the **Network Settings** screen, and then press the **OK** button. The product searches for and then displays a list of the available networks.



5. Select the desired network, and then press the **OK** button.
6. On the Security screen, enter your network's Security Code or Pass Phrase. Enter numbers directly using the number buttons on your remote control. Enter letters by selecting a letter with an arrow button, and then pressing the **OK** button.



## | NOTE |







 




- ▶ To view the password as you enter it, use the arrow buttons to select **Show Password** on the right side, and then press  button.
- 7. When finished, select **Done** and then press the  button. The product verifies the network connection and then connects to the network.
- 8. When verification is complete, select **OK**, and then press the  button.

## | NOTE |

- ▶ You should be able to find the Security Code or Pass Phrase on one of the set up screens you used to set up your router or modem.









□ **Wireless - Manual**

If you have a static IP address or the Automatic procedure does not work, you'll need to set the **Network Settings** values manually.








1. Follow the directions in **Wireless - Automatic** through Step 5.
2. The product searches for a network, and then displays the connection failed message.
3. On the bottom of the screen, select **IP Settings**, and then press the  button. The **IP Settings** screen appears.
4. Select the IP Setting field, and then press the  button.
5. Select **Enter manually** in the IP Setting field, and then press the  button.
6. Select a value to enter (**IP Address**, for example), and then press  button. Use the number keypad on your remote control to enter the numbers for the value. You can also enter numbers using the   buttons. Use the   buttons on the remote control to move from entry field to entry field within a value. When done with one value, press the  button.
7. Press the  or  button to move to another value, and then enter the numbers for that value following the instructions in Step 6.
8. Repeat Steps 6 and 7 until you have filled in all values.

## | NOTE |

- ▶ You can get the Network values from your Internet provider.

9. When finished, select **OK**, and then press the  button. The Security Screen appears.
10. On the Security screen, enter your network's Security Code or Pass Phrase. Enter numbers directly using the number buttons on your remote control. Enter letters by selecting a letter with the     buttons, and then pressing the  button.
11. When finished, select **Done** at the right of the screen, and then press the  button. The product verifies the network connection and then connects to the network.
12. After the product verifies the network, select **OK**, and then press the  button.







□ **WPS(PBC)**

1. In the Home screen, select **Settings**, and then press the  button.
2. Select **Network**, and then press the  button.
3. Select **Network Settings**, and then press the  button.
4. Select **Wireless** in the **Network Settings** screen, and then press the  button.
5. Press the  button on your remote, and then press the  button to select the **WPS(PBC)**.
6. Press the  button on your remote. The "Press the PBC button on your wireless router within the next two minutes." message appears.
7. Press the WPS(PBC) button on your router within two minutes. Your product automatically acquires all the network settings values it needs and connects to your network. The **Network Status** screen appears. The product connects to the network after the network connection is verified.

# Settings

## □ WPS(PIN)

Before you begin, open the router's setup menu on your PC and access the screen with the WPS PIN entry field.

1. In the Home screen, select **Settings**, and then press the  button.
2. Select **Network**, and then press the  button.
3. Select **Network Settings**, and then press the  button.
4. Select **Wireless** in the **Network Settings** screen, and then press the  button. The product searches for and then displays a list of the available networks.
5. Select the desired network, and then press the  button.
6. Select the **WPS(PIN)**, and then press the  button. The PIN pop-up appears.
7. Enter the PIN into the WPS PIN entry field in the router's Set Up screen and then save the screen.

### | NOTE |




- ▶ Contact the manufacturer of the router for instructions explaining how to access the route's Set Up screens or refer to the router's user's manual.
- ▶ For a WPS connection, set your wireless router's security encryption method to AES. WPS connections do not support WEP security encryption.

## Wi-Fi Direct

The Wi-Fi Direct function allows you to connect Wi-Fi Direct devices to the product and each other using a peer-to-peer network, without a wireless router.

### | NOTE |

- ▶ Bluetooth transmissions can interfere with the Wi-Fi Direct signal. Before you use the **Wi-Fi Direct** function, we strongly recommend that you turn off the Bluetooth function of any active mobile device.

1. Turn on the Wi-Fi direct device and activate its **Wi-Fi Direct** function.
2. In the Home screen, select **Settings**, and then press the  button.
3. Select **Network**, and then press the  button.
4. Select **Wi-Fi Direct**, and then press the  button. The Wi-Fi Direct devices that you can connect appear.






### | NOTE |

- ▶ The current wired or wireless network connection will be disconnected when you use the **Wi-Fi Direct** function.
- ▶ Text files, such as files with a .TXT or .DOC extension, will not display when you are using the **Wi-Fi Direct** function.


## Upgrading Software

The **Software Update** menu allows you to upgrade the product's software for performance improvements or additional services.

- Never turn the product off or back on manually during the update process.


1. In the Home screen, select the **Settings**, and then press the  button.
2. Select **Support**, and then press the  button.
3. Select **Software Update**, and then press the  button.
4. To download update software and update now, select **Update Now**, and then press the  button.
5. To let the product download update software automatically when available, select **Auto Update**, and then press the  button. See "Auto Update" on page 25 for details.

**I NOTE |**

- ▶ The upgrade is complete when the product turns off, and then turns on again by itself.
- ▶ Samsung Electronics shall takes no legal responsibility for product malfunction caused by an unstable Internet connection or consumer negligence during a software Update.
- ▶ If you want to cancel the upgrade while the upgrade software is downloading, press the  button.
- ▶ When a system upgrade is in progress, "UPDATE" is displayed on the front panel.

**Update Now**

You can use **Update Now** to update the software through your network connection or by using a USB flash drive. The network instructions are below. The USB flash drive instructions are on the next page.

1. Select **Update Now**, and then press the  button.  
The Update now pop-up appears.
2. The product searches on line for the latest software version.
3. If it finds a new version, the Update Request pop-up appears.
4. Select **OK**. The product upgrades the software, turns off, and then turns on automatically.
5. If you do not select **OK** or **Cancel** in one minute, the product stores the new upgrade software. You can upgrade the software later using **Auto Update**.
6. If you select **Cancel**, the product cancels the upgrade.



**I NOTE |**

- ▶ When the system upgrade is done, check the software details in the Product Information section of the Contact Samsung screen.
- ▶ Do not turn off the product during the Software Update. It may cause the product to malfunction.

**Auto Update**

You can set the **Auto Update** function so that the product downloads new upgrade software when it is in Auto Update mode.

In Auto Update mode, the product is off, but its Internet connection is active. This allows the product to download upgrade software automatically, when you are not using it.

1. Press the  buttons to select **Auto Update**, and then press the  button.
2. Select **On**. Then the product will be updated automatically after power off. If it downloads new upgrade software, the product will ask you if you want to install it when you turn the product on.

**I NOTE |**

- ▶ To use the Auto Update Mode Upgrade function, your product must be connected to the Internet.

**Update by USB**

To upgrade by USB, follow these steps:

1. Visit [www.samsung.com](http://www.samsung.com).
2. Click **SUPPORT** on the top right of the page.
3. Enter the product's model number into the search field. As you enter the model number, a drop down will display products that match the model number.
4. Left click your product's model number in the drop down list.
5. On the page that appears, scroll down to and then click **Firmware Manuals & Downloads**.
6. Click **Firmware** in the center of the page.
7. Click the **ZIP** button in the File column on the right side of the page.
8. Click **Send** in the first pop-up that appears. Click **OK** in the second pop-up to download and save the firmware file to your PC.

# Settings

9. Unzip the zip archive to your computer. You should have a single folder with the same name as the zip file.
10. Copy the folder to a USB flash drive.
11. Make sure no disc is inserted in the product, and then insert the USB flash drive into the USB port of the product.
12. In the product's menu, go to **Settings > Support > Software Update**.
13. Select **Update Now**.
14. The product searches for the software on the USB drive. When it finds the software, the Update Request pop-up appears.
15. Select **OK**. The product upgrades the software, turns off, and then turns on automatically.

## | NOTE |

- ▶ There should be no disc in the product when you upgrade the software using the USB jack.
- ▶ When the system upgrade is done, check the software details in the Product Information section of the Contact Samsung screen.
- ▶ Do not turn off the product during the Software Update. It may cause the product to malfunction.
- ▶ Software Updates using the USB jack must be performed with a USB flash memory stick only.


# Media Play


Your product can play content located on Blu-ray/DVD/CD discs, USB devices, and PCs. To play content located on your PC, you must connect your PC and the product to your network and visit the <http://link.samsung.com> site to download and install the Samsung-link program.



## NOTE

- ▶ You can play contents on your PC using other programs compatible with Allshare network software, however, we recommend that you use Allshare network software.

## Playing Commercial Discs

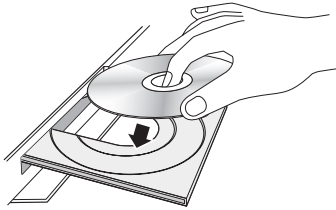1. Press the  button to open the disc tray.
2. Place a disc gently into the disc tray with the disc's label facing up.



3. Press the  button to close the disc tray. Playback starts automatically.
4. If playback does not start automatically, press the  button on the remote control.

## Disc Storage & Management

### • Holding Discs

- Fingerprints or scratches on a disc may reduce sound and picture quality or cause skipping.
- Avoid touching the surface of a disc where data has been recorded.
- Hold the disc by the edges so that fingerprints will not get on the surface.
- Do not stick paper or tape on the disc.



### • Cleaning Discs

- If you get fingerprints or dirt on a disc, clean it with a mild detergent diluted in water and wipe with a soft cloth.
- When cleaning, wipe gently from the inside to the outside of the disc.



### • Disc Storage

- Do not keep in direct sunlight.
- Keep in a cool ventilated area.
- Keep in a clean protection jacket and store vertically.

## Playing Photos, Videos, and Music (Multimedia)

You can play media content saved on a USB device, smartphone, camera, computer, or cloud service on the product.


## NOTE

- ▶ However, you cannot play media content if the content or the storage device are not supported by the product.
- ▶ Backup important files before connecting a USB device. Samsung shall not be held responsible for damaged or lost files.

## Playing Media Content Saved on a USB Device

1. Connect your USB device to the product.
2. Press the **HOME** button and select **Storage** in the **Multimedia** panel. The USB devices connected to the product are listed.
3. Select the device you wish to connect to. The folders and files in the selected USB are listed.
4. Select the media content you wish to play from the list. The media content plays.

## NOTE

- ▶ Alternatively, move to the media content to play and press the  button to play the content.

# Media Play

5. To exit, press the **□** button or **RETURN** button.

## NOTE

- ▶ If you connect a USB device to the product while watching the product, a popup window appears on the screen so that you can easily navigate the folders and files of the USB device.

## Playing Media Content Saved in a Computer/Mobile Device

You can play media content on the product with a computer or mobile device connected to the same network as the product.

## NOTE

- ▶ Only available with Samsung phones supporting DLNA functionality.
  - ▶ Samsung Link software should have been installed on the computer. The mobile device should support Samsung Link. For more information, visit Samsung's content and service portal at <http://link.samsung.com>.
  - ▶ You may experience compatibility issues when attempting to play media files via a third-party DLNA server.
  - ▶ However, the content shared by a computer or a mobile device may not play depending on the encoding type and file format of the content. In addition, some functions may not be available.
  - ▶ The media content may not smoothly play depending on the network status. If this is the case, use a USB storage device.
1. Connect the smart device and product.
  2. Press the **HOME** button and select **Network Device** in the **Multimedia** panel. Storage devices connected to the same network of the product are listed.
  3. Select a desired storage device. The folders and files shared by the selected storage device are listed.
  4. Select the media content you wish to play from the list. The media content plays.

## NOTE

- ▶ Alternatively, move to the media content to play and press the **▶** button to play the content.
5. To exit, press the **□** button or **RETURN** button.

## Allowing Connection with a Mobile Device

(HOME → Settings → Network → Multimedia Device Settings)

To play the media content stored on a mobile device, you must allow the connection between the mobile device and the product.

## NOTE

- ▶ You can connect to a mobile device on any DLNA DMC device. DLNA DMC function enables users to connect a mobile device to the product, search for media content, and control play operations on the product.
1. Navigate to **Settings > Network** and select **Multimedia Device Settings**. The mobile devices connected to the same network as the product are listed.
  2. Allow connection with the device you wish to connect to the product. You can only play media files from devices that have been allowed to connect to the product.

## NOTE

- ▶ If a mobile device requests the media content to play, the connection confirmation window appears on the product so that you can easily connect a mobile device.

## Playing a Disc with User Recorded Content

You can play multimedia files you have recorded on Blu-ray, DVD, or CD discs.

1. Place a user recorded disc into the disc tray with the disc's label facing up, and then close the tray. The Device Connected pop-up appears.
2. Use the **▲▼** buttons to select the type of content you want to view or play - **All Content**, **Photos**, **Videos** or **Music** - and then press the **☑** button.

**I NOTE I**

- ▶ Even though the product will display folders for all content types, it will only display files of the Content Type you selected in Step 2. For example, if you selected music, you will only be able to see music files. You can change this selection by returning to the **MULTIMEDIA** screen and repeating Step 2.
3. A screen appears listing the contents of the disc. Depending on how the contents are arranged, you will see either folders, individual files, or both.
  4. If necessary, use the **▲▼◀▶** buttons to select a folder, and then press the **☑** button.
  5. Use the **▲▼◀▶** buttons to select a file to view or play, and then press the **☑** button.
  6. Press the **RETURN** button one or more times to exit a current screen, exit a folder, or to return to the Home screen. Press the **EXIT** button to return directly to the Home Screen.
  7. Go to pages 27~36 for instructions that explain how to control playback of videos, music, and pictures on a disc.

### Playing Media Content Saved in a Cloud Service

Cloud service saves user content such as photos, videos, and music files on a server so that it can be played on the product connected to the network. You can view the media content saved in a cloud service such as Dropbox and SkyDrive on the product.

**I NOTE I**

- ▶ To play the content in a cloud service, you must log into your Samsung account and link the Samsung account to the cloud service account. For the information about linking your Samsung account to a cloud service account, see page 46.
1. Press the **HOME** button and select **Cloud Service** in the **MULTIMEDIA** panel. The cloud services linked with your Samsung account appears.

2. Select a desired cloud service. The folders and files in the selected cloud service are listed.
3. Select media content you wish to play from the list. The media content plays.

**I NOTE I**

- ▶ Alternatively, move to the media content to play and press the **▶** button to play the content.
4. To exit, press the **■** button or **RETURN** button.

**I NOTE I**

- ▶ A Samsung smart device or a PC installed with the Samsung Link app can be connected to the Blu-ray product through a remote network.
- ▶ To connect devices through a remote network, the same Samsung Account should be used to log in for both this Blu-ray product and the device running the Samsung Link app.
- ▶ For more information, visit the Samsung Content & Service portal (<http://link.samsung.com>).

### Samsung Link

For more information, visit the Samsung Content & Service portal (<http://link.samsung.com>).


**I NOTE I**

- ▶ You may experience compatibility issues when attempting to play media files via a third-party DLNA server.

## Controlling Video Playback

You can control the playback of video content located on a Disc, USB, mobile device or PC. Depending on the disc or contents, some of the functions described in this manual may not be available.

### Buttons on the Remote Control used for Video Playback

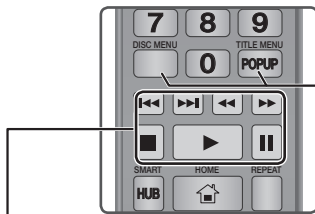

#### ■ Playback related buttons

The product does not play sound in Search, Slow or Step mode.

- To return to normal speed playback, press the button.

button	Starts playback.
button	Stops playback.
button	Pauses playback.
Fast Motion Play	During playback, press the  or  button. Each time you press the  or  button, the playback speed will change.
Slow Motion Play	In pause mode, press the  button. Each time you press the  button, the playback speed will change.
Step Motion Play	In pause mode, press the  button. Each time you press the  button, a new frame appears.
Skip Motion Play	During playback, press the  or  button. Each time you press  or  button, the disc moves to the previous or next chapter or file.

- Using the disc menu, title menu, popup menu, and title list

DISC MENU button	During playback, press this button to display the Disc menu.
TITLE MENU button	During playback, press this button to display the Title menu. <ul style="list-style-type: none"> <li>• If your disc has a playlist, press the <b>View</b> to go to the playlist.</li> </ul>
POPUP MENU button	During playback, press this button to display the Popup menu.





### Using the Settings Menu (During the Playback)

During playback or in pause mode, press the **TOOLS** button.

Use the buttons to select the button, and then press the button.

Play from the Beginning	Select to return to the beginning of the movie, and then press the  button.
Select Scene	<ul style="list-style-type: none"> <li>- <b>Search Titles</b> : If there is more than one movie on the disc or device, select to start a different title. <ol style="list-style-type: none"> <li>1. Select <b>Search Titles</b>, and then press the  button.</li> <li>2. Use the   buttons to select a title, and then press the  button.</li> </ol> </li> <li>- <b>Chapter Search</b> : Select to play the chapter of your choice. <ol style="list-style-type: none"> <li>1. Select <b>Chapter Search</b>, and then press the  button.</li> <li>2. Use the   buttons to select a chapter, and then press the  button.</li> </ol> </li> </ul>



Select Scene	<ul style="list-style-type: none"> <li>- <b>Search Time Bar</b> : Select to play the movie from a selected time point.</li> </ul> <ol style="list-style-type: none"> <li>1. Select <b>Search Time Bar</b>, and then press the  button.</li> <li>2. Using the number buttons, enter the time point you want to go to, and then press the  button.</li> </ol> <p><b>I NOTE I</b></p> <ul style="list-style-type: none"> <li>▶ You can also use the  buttons to advance or rewind the movie. The movie advances or rewinds one minute each time you press the  buttons.</li> <li>▶ If the index information in the file is damaged or the file does not support indexing, you will not be able to use the Select Scene function.</li> <li>▶ If you run files on network device after you have connected the player to a computer on your network, Select Scene may not work.</li> </ul>
3D	<p>Use the 3D menu when playing a 3D file.</p> <p><b>I NOTE I</b></p> <ul style="list-style-type: none"> <li>▶ The 3D menu becomes available only when you are playing a 3D video file.</li> <li>▶ When playing a 3D video, set the player to Side by Side or Top and Bottom in 3D Settings so that the player's settings match the 3D content format.</li> <li>▶ If you move to the Home or Smart Hub Home screen while in 3D mode, the product will switch to 2D automatically.</li> </ul>

Search	<ul style="list-style-type: none"> <li>- <b>Search Scene</b> : You can use the Search Scene function during playback to view or start a movie from the scene of your choice.</li> <li>- <b>Search Titles</b> : If there is more than one movie on the disc or device, select to start a different title.</li> <li>- <b>Search Time Bar</b> : Select to play the movie from a selected time point.</li> </ul>
Subtitle Settings	Lets you set the desired subtitle options.
Repeat mode	Lets you repeat a title, chapter, or specific section.
Rotate	Lets you rotate the picture.
Full Screen	Lets you set the size of the video image.
Picture Mode	<p>Lets you set the picture mode.</p> <ul style="list-style-type: none"> <li>- <b>Dynamic</b> : Increases sharpness and brightness.</li> <li>- <b>Standard</b> : Choose this setting for most viewing applications.</li> <li>- <b>Movie</b> : The best setting for watching movies.</li> <li>- <b>User</b> : Lets you adjust the sharpness and noise reduction function respectively.</li> </ul> <p><b>I NOTE I</b></p> <ul style="list-style-type: none"> <li>▶ When you use the BD wise function, this menu will not appear.</li> </ul>
Audio	Use to set the desired audio language.
Audio Sync	Select to set the audio sync.
Subtitle	Use to set the desired subtitle language.
Angle	Lets you view a scene from another angle. The Angle option displays the number of angles available to view. When a Blu-ray Disc/DVD contains multiple angles of a particular scene, you can change angle.
Information	Lets you view video file information.

# Media Play

BONUSVIEW Video	Use to set the desired bonusview option.
BONUSVIEW Audio	

## NOTE

- ▶ Depending on the disc or storage device, the Settings menu may differ.
- ▶ Video files with high bitrates of 20Mbps or more strain the product's capabilities and may stop playing during playback.

## Using the View & Options Menus

### Using the View Menu

On a file screen containing video files, select  and then press the  button.

Date	Groups all the the photo files on the media or storage device by date. Click a group to see the videos in that group.
Title	Displays all the video files on the media or storage device by title.
Folder	Displays all the folders on the media or storage device in alphabetical order.

## NOTE

- ▶ Depending on the disc or storage device, the View menu may differ or not appear.

### Using the Options Menu


On a file screen containing video files, select  and then press the  button.







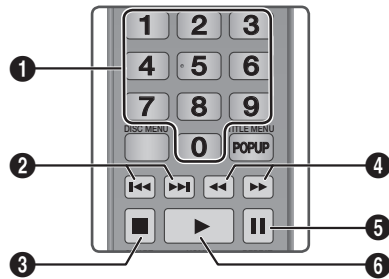

Play Selected	Play Selected lets you select specific file to play. It works essentially the same for all media.
Send	Select Send to upload selected files to a web site (Picasa, Facebook etc) or device. To use Send, you need to establish an account with the on-line site, and then log in using the Log In function. See "Using the Send Function" on page 37.

## Controlling Music Playback

You can control the playback of music content located on a Disc, USB, mobile device or PC. Depending on the disc or contents, some of the functions described in this manual may not be available.

### Buttons on the Remote Control used for Music Playback





1	NUMBER buttons : Press the number of a track. The selected track is played.
2	 button : Moves to the previous/next track.
3	 button : Stops a track.
4	Fast Play (Audio CD (CD-DA) only) During playback, press the  or  button. Each time you press the  or  button, the playback speed will change.
5	 button : Pauses a track.
6	 button : Plays the currently selected track.

## NOTE

- ▶ If you don't press a button within five seconds of inserting an Audio CD, the screen is displayed in Full Screen mode.  
To go back to the Play List screen, press the RETURN button on the remote control.

## Using the Options Menu (During the Playback)

On the music file playback screen, use the ▲▼◀▶ buttons to select the  button, and then press the  button.

Save as Playlist	Select to save as playlist.
Play Selected	Lets you create a playlist by selecting specific tracks to play. It works essentially the same way for all media. See "Creating a Playlist on an Audio CD" on page 34.
Ripping	The Ripping function converts CD audio to the mp3 format and saves the converted files on a USB device or a mobile device connected to the product. See "Ripping" on pages 34~35.
Information	Select to see the (Contents) information.

### NOTE 1

- ▶ Depending on the disc or storage device, the Settings menu may differ or not appear.

## Using the View & Options Menus (On a file screen)

### Using the View Menu



On the playback screen, select the  button and then press the  button.

Track	Displays all the music tracks on the media or storage device in alphabetical order.
Album	Displays all music on the media or storage device by album
Artist	Displays all the the music files on the media or storage device by artis
Genre	Displays all the music on the media or storage device by genre.
Folder	Displays all the folders on the media or storage device.

### NOTE 1

- ▶ Depending on the disc or storage device, the View menu may differ or not appear.

### Using the Options Menu

On playback screen or a file screen containing music files, select  and then press the  button.

Play Selected	Play Selected lets you select specific tract to play. It works essentially the same for all media. See the "Repeating tracks on an Audio CD" on page 34.
Send	Select to send selected files to other devices. See "Using the Send Function" on page 37.
Encoding	Select to manage the text encoding options.




### NOTE 1

- ▶ Depending on the disc or storage device, the Options menu may differ or not appear.

# Media Play

## Repeating Tracks on an Audio CD




You can set the product to repeat tracks on an audio CD (CD-DA/MP3).

1. On the Playback screen, use the ▲▼◀▶ buttons to select  in the lower left corner of the screen, and then press the  button.
2. Use the ▲▼ to select the repeat mode you want - **Off**, **One Song**, or **All** - and then press the  button.









## Shuffling Tracks on an Audio CD

You can set the product to play tracks on an audio CD (CD-DA/MP3) at random.


1. On the Playback screen, use the ▲▼◀▶ buttons to select  in the lower left corner of the screen, and then press the  button.
2. Use the ▲▼ to set the Shuffle mode **On** or **Off**, and then press the  button.

## Creating a Playlist from an Audio CD




1. With the Playback screen displayed, select the  button, and then press the  button. The Settings menu appears.
2. Use the ▲▼ buttons to select **Play Selected**, and then press the  button. The Selection Play screen appears.
3. Use the ▲▼ buttons to select a track, and then press the  button. A check appears to the left of the track.





4. Repeat Step 3 to select and check additional tracks.
5. To remove a track from the list, move to the track, and then press the  button again. The check on the track is removed.
6. When done, press the ▲▼ button to select **Play**, and then press the  button. The Music Playback screen reappears listing only the tracks you checked. The selected tracks play automatically.

### NOTE




- ▶ You can create a playlist with up to 99 tracks on Audio CDs (CD-DA).
- ▶ If you have created a playlist, **Play Selected** is replaced by **Edit Playlist** on the Settings menu.
- ▶ On the Selection Play screen, you can also choose **Select All**, **Clear All**, and **Cancel**.
  - Use **Select All** to select all tracks. This cancels your individual track selections. When you press the **RETURN** button on your remote control or select the **Play** button, and then press the  button, all tracks will appear on the Music Playback screen, and the product will begin to play all tracks from Track 001.
  - Use **Clear All** to deselect all selected tracks at once. Then, select individual tracks or use **Select All** to select all the tracks, and then press the **RETURN** button on your remote control. If you do not use **Select All** or select individual tracks, the Playlist will not change.
  - **Cancel** cancels any changes you made on the Play Select screen. When you return to the Playback screen, the Playlist will be unchanged.

## Ripping


1. Insert a USB device into the USB jack on the front of the product.
2. With the Playback screen displayed, select the  button and then press the  button. The **Settings** menu appears.
3. Use the ▲▼ buttons to select **Ripping**, and then press the  button. The **Ripping** screen appears.

4. Use the ▲▼ buttons to select a track, and then press the  button. A check appears to the left of the track.
5. Repeat Step 3 to select and check additional tracks.
6. To remove a track from the list, move to the track, and then press the  button again.  
The check on the track is removed.
7. When done, select the **Rip** button using the ▲▼ buttons, and then press the  button. The **Rip** pop-up appears.
8. Use the ▲▼ buttons to select the device to store the ripped files to, and then press the  button.

#### I NOTE |

- ▶ Do not disconnect the device while ripping is in progress.
9. If you want to cancel ripping, press the  button and then select **Yes**. Select **No** to continue ripping.
  10. When ripping is complete, the "Successfully Ripped." message appears. Press the  button.
  11. Press the **RETURN** button or select **Cancel**, and then press the  button to go back to the Playback screen.

#### I NOTE |

- ▶ This function does not work with DTS Audio CD.
- ▶ This function may not be supported by some discs.
- ▶ Ripping encodes music into the .mp3 format at 192kbps.
- ▶ On the **Ripping** screen, you can also choose **Select All** and **Clear All**.
- ▶ Use **Select All** to select all tracks and press the  button. This cancels your individual track selections.
- ▶ Use **Clear All** to deselect all selected tracks at once.

## Playing Photo Contents

You can play photo contents located on a DVD, USB, mobile device or PC.

### Using the Tools Menu (During Playback)

During playback or in pause mode, press the **TOOLS** button.

Use the ▲▼◀▶ buttons to select the  button, and then press the  button.

Slideshow Settings	Select to change the Slide Show settings. - <b>Speed</b> : Select to set the slide show speed. - <b>Effect</b> : Select to set the slide show effect.
Rotate	Select to rotate the picture. (This can rotate the picture either clockwise or counter clockwise.)
Zoom	Select to enlarge the current picture. (Enlarge up to 4 times)
Picture Mode	Select to set the picture mode. - <b>Dynamic</b> : Choose this setting to increase Sharpness. - <b>Standard</b> : Choose this setting for most viewing applications. - <b>Movie</b> : This is the best setting for watching movies. - <b>User</b> : Lets you adjust the sharpness and noise reduction function respectively.  I NOTE   ▶ This menu can not be displayed when you use the BD Wise function.
Background Music	Select to listen to music while viewing a slide show.
Send	Select to send the selected file to other devices.
Information	Select to see the (Contents) information.



# Media Play

## | NOTE |

- ▶ Depending on the disc or storage device, the Tools menu may differ. All options may not be displayed.
- ▶ To enable the background music function, the photo file must be in the same storage media as the music file.  
Note that the sound quality can be affected by the bitrate of the MP3 file, the size of the photo, and the encoding method.
- ▶ You can't enlarge the subtitle and PG graphic in the full screen mode.

## Using the View & Options Menus

### Using the View Menu

On a file screen containing photo files, select the  button and then press the  button.

Date	Groups all the the photo files on the media or storage device by date. Click a group to see the photos in that group.
Title	Displays all the photo files on the media or storage device by title.
Folder	Displays all the folders on the media or storage device.

## | NOTE |

- ▶ Depending on the disc or storage device, the View menu may differ or not appear.

## Using the Options Menu

On a file screen containing photo files, select the  and press the  button.

Slide show	Starts the slide show. Shows all the files in the current folder, one after another. If you want to create a slide show with a selected group of photos, see Play Selected below.
Play Selected	Play Selected lets you select specific photo to see. It works essentially the same for all media. See "Creating a Playlist from an Audio CD" on page 34 for instructions.
Send	Select <b>Send</b> to upload selected files to a web site (Picasa, Facebook etc) or device. To use Send, you need to establish an account with the on-line site, and then log in using the Log In function. See "Using the Send Function" on page 37.

## | NOTE |

- ▶ Depending on the disc or storage device, the Settings menu may differ or not appear.

## Send files









### Copying Videos, Music or Photos


Contents	DISC/ Network Device/ Cloud Service → USB	DISC/USB/ Cloud Service → Network Device	DISC/USB/ Network Device → Cloud Service
Music	Supported	Supported	Supported
Photos	Supported	Supported	Supported
Videos	Supported	Supported	Supported

- Disc (CD-DA/CD-R/CD-RW, DVD±R(Finalise)/DVD+RW/DVD-RW(Finalise)) → USB
- PTP USB is not available when you copy to USB.

### Using the Send Function

You can upload files to an Network Device, Cloud Service or a device.

1. With the Videos, Music or Photos file screen displayed, select the **TOOLS** button, and then press the  button. The Options menu appears.
2. Use the  buttons to select **Send**, and then press the  button. The Selection screen appears.
3. Use the  buttons to select a file, and then press the  button. A check appears to the left of the file.
4. Repeat Step 3 to select and check additional file.
5. To remove a file from the list, move to the file, and then press the  button again. The check on the picture is removed.
6. When done, press the  button to select **Send**, and then press the  button.  
The Send pop-up appears listing the on-line sites (Picassa, Facebook, etc.) or devices that you can send the photos to.

7. Select a destination, and then press the  button.
8. If you are sending the files to an on-line site, the site starts. Log in and follow the directions on the screen.

#### NOTE

- ▶ To send files to an on-line site you must have an account with that site.

# Network Services









You can enjoy various network services such as streaming video or on-line apps by connecting the product to your network.





To use network services, you must first:

1. Connect the product to a network.  
(See page 14)
2. Configure the network settings.  
(See pages 21~24)



## Creating a Samsung Account

Create a Samsung account so you can take advantage of all Samsung has to offer on line. Set up accounts for each household member so each member can access their own accounts on Facebook, Twitter, etc. You also need a Samsung account if you want to download for-pay apps and rent movies.

1. On the Home screen, press the  button. The Log In screen appears.
2. Select **Create Account** on the bottom right, and then press the  button. The Samsung account terms & conditions, privacy policy screen appears.
3. Press the  button to agree, press the  button, and then press the  button. The Create a Account screen appears.
4. Select the ID field, and then press the  button. The keyboard pop-up appears.
5. Enter your e-mail address using the keyboard. Use the arrow buttons to move from character to character. Press  to select a character. Select the **Caps** button on the left to enter capitals. Select the **123#&** button to select additional symbols.
6. When finished, select the **Done** button on the keyboard, and then press the  button. The Create screen reappears.



7. Enter a password, your first name, and last name in the same fashion.
8. Select the Date of Birth field, and then select numbers using the up and down arrow buttons or pressing numbers on your remote. Press the  button when done.
9. After you have finished with all the fields, press the  button, and then press the  button. Connecting appears, and then the account confirmation message.
10. Press the  button. The Set Profile Picture screen appears.

### NOTE


- ▶ Samsung sends a confirming e-mail to the address you entered. You must open the e-mail and respond as requested to finalize your account.
11. Select a picture to identify your account, and then press the  button. The Account Created screen appears.
  12. Press the  button. The Home screen appears.

## Before Using Apps



If you haven't set up Smart Hub, when you use Apps for the first time, the product will ask you to perform the Smart Hub set up procedure.

1. On the Home screen, select either **APPS**, and then press the  button. If you have selected **APPS**, go to Step 4.
2. If you selected **APPS**, the Smart Hub pop-up appears asking if you want to set up Smart Hub. Select **Yes**, and then press the  button. The Welcome screen appears.




3. Select **Start**, and then press the  button. The **Terms and Policy** screen appears.
4. On the Additional Services, Terms and Conditions and Choices screen, you must review and agree to both the Smart Hub Terms and Conditions and the Privacy Policy to use Smart Hub.
5. Scroll down, and then click the **View details** buttons to review the full documents.




#### I NOTE I





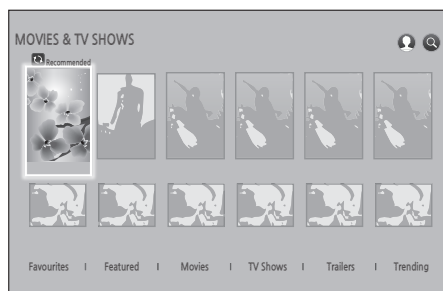












- ▶ You do not need to consent to the Supplemental Privacy Notice, but one or more Smart TV features or functionalities may not be available if you do not.
6. Select **I agree to all**, and then press the  button. The Setup Complete screen appears. Press the  button.

## Using Movies & TV Shows

 

If you haven't set up Smart Hub, when you use Movies & TV Shows for the first time, the product will ask you to perform the Smart Hub set up procedure. You can stream Movies & TV Shows and view them on your TV.




1. On the Home screen, select **MOVIES & TV SHOWS**, and then press the  button.
2. Select one of the Recommended Movies, and then press the  button. The page for that movie appears. Use the  button to go to the bottom of the screen.

- 2<sup>1</sup>. Alternately, select **Movies** or **TV Shows** and then press the  button. On the page that appears, use the     buttons to select a show or movie, and then press the  button. On the Movies or TV Shows screen, you can also select **What's New** or **Genres** to see more available shows or Films. On the Genres screen, use the     buttons to select a desired Genres, and then press the  button. To make a selection on a page displaying Movies and TV Shows, use the     buttons to make a selection, and then press the  button.
3. To watch a selection, select listed apps, and then press the  button.

#### I NOTE I

 - ▶ The listed apps appears if you have not installed any of the movie apps you could use to watch the movie or TV show you selected. If none of these apps are installed on your Blu-ray player, select one of the apps, and then press the  button. You will be asked if you want to install the app. Select **Install**, press the  button, and then follow the directions that appear on the screen to install the app.
4. Follow the directions on the screen to start the movie.

#### I NOTE I


- ▶ Contents items and the corresponding bottom menu in Movies and TV Shows differ between countries.
- ▶ When you activate Movies and TV Shows for the first time, the listed apps may not be displayed. The listed apps is displayed after you download a video contents App for use. If the listed apps button is not displayed, you cannot watch contents.
- ▶ Favorites will not appear unless you have tagged one or more films or TV shows as a favorite. To tag a movie or show as a favorite, select the show. The Detail screen appears. Select the heart symbol, and then press the  button.

# Network Services

## Using Apps

You can download applications from the Internet, and access various application and view them on your TV. To access some applications, you need to have a Samsung account.

### The Apps Screen at a Glance

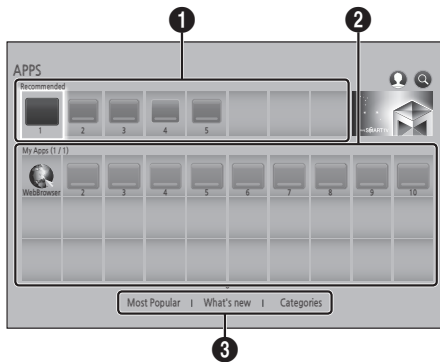

1	<b>Recommended</b> : Displays recommended contents managed by Samsung. You cannot delete Recommended Apps.
2	<b>My Apps</b> : Displays your personal gallery of applications modifiable on the <b>My Apps</b> screen.
3	<b>Most Popular, What's new and Categories</b> : Select to view and download additional apps.

The first time you open the Apps screen, the Blu-ray player automatically downloads a group of free apps. Once these apps have been downloaded, they appear on the Apps screen.

To see additional apps, select **Most Popular**, **What's new**, or **Categories** on the bottom of the screen, and then press the **[OK]** button.

**Most Popular** displays the most popular apps, **What's new** the newest. **Categories** displays a series of icons representing categories such as **Videos**, **Games**, and **Sports**. Select a category icon, and then press the **[OK]** button. The Blu-ray player displays the apps in that category.

### Downloading an App

1. Select **Most Popular**, **What's New**, or **Categories**, and then press the **[OK]** button.
2. If you selected **Categories**, select a category icon, and then press the **[OK]** button. Otherwise, go to Step 3.




#### NOTE

- ▶ On the **Most Popular**, **What's new**, and **Categories** screens, a green arrow is displayed on apps you have already downloaded.
3. Select an app you want to download, and then press the **[OK]** button. The Detail Information screen for the apps appears.
  4. Select the **Download** button on the screen, and then press the **[OK]** button. Download changes to **Cancel** and the app begins to download.
  5. If you want to cancel the download, select **Cancel**, and then press the **[OK]** button.
  6. When the download is complete, **Cancel** changes to **Play**. Select **Play**, and then press the **[OK]** button to start the application. Alternately, press the **RETURN** button until the Apps screen reappears. The app you downloaded will be displayed on the Apps screen under **My Apps**.

#### NOTE





- ▶ If the App cannot be downloaded due to insufficient remaining internal memory, connect a USB storage device and try again.

## Starting an Application





1. Select **APPS** on the Home screen, and then press the  button.
2. On the **APPS** screen, use the  buttons to select an app, and then press the  button. The app starts.

## The Option Menu





 

### Move

1. On the **My Apps** screen, select the app you want to move and then press the  button for 3 seconds. The Option menu appears.
2. Select **Move**, and then press the  button.
3. Use the  buttons to move the app.
4. When the app is where you want it, press the  or **EXIT** button.



### Delete

1. On the **My Apps** screen, select the app you want to delete and then press the  button for 3 seconds. The Option menu appears.
2. Select **Delete**, and then press the  button.
3. Use the  buttons to select **OK**, and then press the  button.





### Delete Multiple

1. On the **My Apps** screen, select an app you want to delete and then press the  button for 3 seconds. The Options menu appears.
2. Select **Delete Multiple**, and then press the  button.
3. Use the  buttons to select apps you want to delete, and then press the  button.
4. Use the  buttons to select **Delete**, and then press the  button.

## View Detail

1. On the **My Apps** screen, select the app you want to see detailed information for, and then press the  button for 3 seconds. The Option menu appears.
2. Select **View Detail**, and then press the  button.


## Update Apps

1. On the **My Apps** screen, select any app, and then press the  button for 3 seconds. The Option menu appears.
2. Select **Update Apps**, and then press the  button.
3. The Update Apps screens lists all the apps that have updates available. Select each app you want to update, and then press the  button. You can also choose **Select All** to update all the apps listed.
4. Select **Update**, and then press the  button.

# Network Services

## Screen mirroring

The **Screen mirroring** function lets you view the screen of your smart phone or android tablet on the TV you have connected to the product.

1. In the Home screen, select **Screen mirroring**, and then press the  button.
2. Launch **AllShare Cast** or **Screen mirroring** on your device.
3. On your device, find the name of the product in the list of available devices and then select it.
4. The TV displays a connecting message (for example, Connecting to Android\_92gb...) and then displays the connected message.
5. In a few moments, the screen of your device appears on the TV screen.
6. To stop Screen Mirroring, press the **EXIT** or **RETURN** button on the remote control, or exit the Screen Mirroring function on your smart phone.

### NOTE

- ▶ You can connect to a device that supports AllShare Cast. Note that all devices that have AllShare Cast may not be fully supported, depending on the manufacturer. For further information on mobile connection support, refer to the manufacturer's web site.
- ▶ When you are using the Screen Mirroring function, video stuttering or audio dropouts may occur, depending on your environment.
- ▶ Bluetooth transmissions can interfere with the Screen Mirroring signal. Before using the Screen Mirroring function, we strongly recommend that you turn off the Bluetooth function on your smart phone or smart device (tablet, etc.).

## Using the Web Browser

You can access the Internet using the Web Browser application.

Select **WebBrowser** on the Home screen, and then press the  button.




### NOTE

- ▶ When you run the Web Browser with the product connected by HDMI to a BD Wise compatible TV - and BD Wise is on - the browser is maximized to fill the screen and the TV's resolution is set to the optimal resolution automatically.
- ▶ The Web Browser is not compatible with Java applications.
- ▶ If you attempt to download a file, and the file cannot be saved, an error message will appear.
- ▶ E-commerce (purchasing products online) is not supported.
- ▶ ActiveX is not supported.
- ▶ Access may be blocked to some websites or to web browsers operated by certain businesses.

## Link Browsing and Pointer Browsing


The Web Browser provides two types of browsing, Pointer Browsing and Link Browsing. When you launch the browser for the first time, Pointer Browsing is active. If you are using a mouse to navigate in the Web Browser, we recommend leaving Pointer Browsing active. If you are using your remote to navigate in the Web Browser, we recommend that you replace Pointer Browsing with Link Browsing. Link Browsing moves a highlight from one link to the next in the Web Browser and is much faster than Pointer Browsing if you are using your remote.









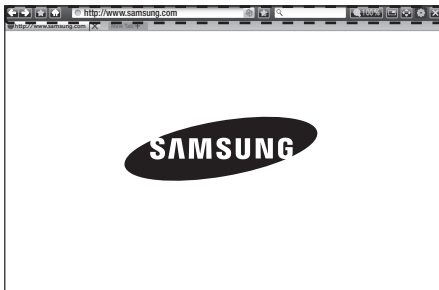


To activate Link Browsing, follow these steps:

1. Use the   buttons on your remote to move the pointer to the Link Browser icon on the top right of the screen. The Link Browser icon is the third icon from the right.  
The pointer will be in the correct position if the icon turns blue and the words "Link Browsing" appear on the screen.
2. Press the  button. Link Browsing is activated and will remain active whenever you bring up the Web Browser.

## The Control Panel at a Glance

The Control Panel, which runs across the top of the screen, has a series of icons which start a number of useful functions. The icons are described below, starting with the icon on the far left of the screen.




-  : Moves to the previous page.
-  : Moves to the next web page.
-  : Displays the Bookmarks and History screen. You can bookmark the current page, select an existing bookmark, and edit and delete bookmarks. You can also view your browsing history and select a page to revisit.
-  : Moves to the Home screen of the Web Browser.
- : Lets you enter a page address manually using the keyboard pop-up.
-  : Reloads the current page so that it is refreshed on the screen.
-  : Adds the current page to your bookmarks.
- : Lets you search for information by entering words or characters using the keyboard pop-up. See "Using the Keyboard Pop-up" on pages 43~44.
-  100% : Lets you enlarge or shrink the screen by various percentages.
-  : Lets you switch between Pointer Browsing and Link Browsing.
-  : Lets you configure the Browser's settings. See "Using the Settings Menu" on pages 44~45.
-  : Closes the Web Browser.
-  : Opens a new web browser tab.

## Using the Keyboard Pop-up

When you click the , the  or access a data or text entry field, and then press the  button, the keyboard pop-up appears.

To use the keyboard pop-up with your remote, follow these steps:

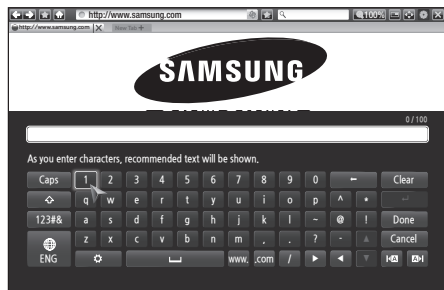

# Network Services

1. Use the ▲▼◀▶ buttons on your remote to move the highlight to a letter or number of your choice.
2. Press the **[Enter]** button to enter the letter or number into the entry field.
3. To access capital letters, move the highlight to the **Caps** key on the top left, and then press the **[Enter]** button. Press the **[Enter]** button again with the **Caps** key highlighted to access small letters again.
4. To access symbols and additional punctuation marks, highlight the **123#&** button on the left, and then press the **[Enter]** button.
5. To delete a character you entered, move the highlight to the **←** button, and then press the **[Enter]** button.
6. To delete all the characters you entered, move the highlight to the **Clear** button, and then press the **[Enter]** button.
7. When finished entering, move the highlight to the **Done** button, and then press the **[Enter]** button.

## NOTE

- ▶ If you have a wireless keyboard connected to your product, you can use the wireless keyboard to enter letters, numbers, symbols, and punctuation. Note that the wireless keyboard will work only when the keyboard popup appears and can only be used to enter letters, numbers, symbols, and punctuation.

## Options on the Keyboard Pop-Up

To access the keyboard pop-up options, highlight the **[Enter]** button on the bottom left of the keyboard, and then press the **[Enter]** button.

Language	Select the language for the keyboard. You can select English, French, Russian, etc.
Recommended Text	The keyboard suggests recommended words as you enter text. You can turn this function <b>On</b> or <b>Off</b> .

Reset recommended text data	Reset erases the Samsung Keyboard's memory. Select Reset to erase everything that the Samsung Keyboard has learned about your writing style, including any new words you have used.
Predict Next Letter	The keyboard predicts the next letter as you enter letters. The predictions appear in a ring around the letter you have just entered. You can select a predicted letter or move to another letter. You can turn this function <b>On</b> or <b>Off</b> .
Accented character preview	Select this if you want to type letters with accent marks.

## Using the Setting Menu

The Setting menu contains functions that control how the Browser operates and Browser security functions. To open the Setting menu, highlight the **[Settings]** icon in the Control Panel, and then press the **[Enter]** button. To select an option in the setting menu, highlight the option, and then press the **[Enter]** button.



Enable/Disable Grabbing	Turns the Grabber function on and off. When the Grabber function is on, you can move a web page up and down without dragging the scroll bar. The Grabber function is only available in Pointer Browsing.
-------------------------	---

Approved Sites	<p>Lets you restrict your children's access to inappropriate web pages by allowing access only to the web sites you have registered.</p> <p>Every time you access this function, the PIN screen appears. The first time you access this function, enter the default PIN, 0000 using the number buttons on your remote.</p> <p>You can change the PIN using the Reset password for the Approved Sites function. See below.</p> <p><b>Approved Sites Feature</b> : Turns the <b>Approved Sites</b> function on or off.</p> <p><b>Reset password for Approved Sites</b> : Change the Approved Sites password.</p> <p><b>Add current site</b> : Lets you add the currently displayed web site to the Approved Sites list.</p> <p><b>Manage Approved Sites</b> : Lets you key in URLs to add to the Approved Sites List and delete sites from the Approved Sites list.</p> <p>If you turn this function on and have not added any sites to the Approved Sites list, you will not be able to access any Internet sites.</p>
Private Browsing On/Off	<p>Enable or disable the Privacy mode. When the Privacy mode is enabled, the browser does not retain the URLs of sites you visit. If you want to enable Privacy mode, select <b>OK</b>.</p> <p>If the Privacy mode is running, the "Stop" icon appears in front of the URL at the top of the screen. To disable Privacy mode, select it again when Privacy mode is enabled.</p>
Set Search Engine	<p>You can set the desired Search Engine.</p>

Web Browser Setting	<p><b>Set as homepage</b> : You can set the Browser's home page.</p> <p><b>Pop-up Block</b> : Turns the Popup Block on and off.</p> <p><b>Page Block</b> : You can determine whether to block advertisements and select the URLs for which advertisements are blocked.</p> <p><b>General</b> : You can delete personal information such as website history and browsing data (cookies, etc.), and reset all web browser settings to their factory defaults. You can also set the Security Mode.</p> <p><b>I NOTE I</b></p> <ul style="list-style-type: none"> <li>▶ Set the <b>Security Mode to On</b> to avoid accessing malicious/phishing sites and prevent malicious code from running.</li> </ul> <p><b>Encoding</b> : You can set the Encoding setting for web pages to Automatic or select the encoding format manually from a list.</p> <p><b>Pointer</b> : You can set the speed of the cursor when the cursor is set to Pointer and turn <b>Smart Cursor On and Off</b>.</p> <p><b>Browser Information</b> : Displays the version number and copyright information for the Web Browser.</p>
Help	<p>Provides basic information about the operation of the Web Browser.</p>

**I NOTE I**

- ▶ Depending on the web site, some of the **Web Browser Setting** functions may not be activated. Functions that are not activated are greyed out and cannot be used.

# Network Services







## Linking Your Internet Service Accounts to the Product

The Link Service Accounts function lets you link your product to your accounts with Internet services such as Pandora so that the product can log you in to the service automatically when you start the app for that service.

Register your account by going to **HOME** → **Sign In** → **Create with Facebook**.

## BD-LIVE™

Once the product is connected to your network, you can enjoy various movie-related service contents available on BD-LIVE compliant discs.

1. Attach a USB flash memory drive to the USB jack on the front of the product, and then check its remaining memory. The memory device must have at least 1GB of free space to accommodate the BD-LIVE services.
2. Select **Settings** on the Home screen, and then press the  button.
3. Select **Network**, and then press the  button.
4. Select **BD-Live Settings**, and then press the  button.
5. Select **BD Data Management**, and then press the  button.
6. Select **Select Device**, and then press the  button.
7. Select USB device, and then press the  button.
8. Insert a Blu-ray Disc that supports BD-LIVE.
9. Select an item from the list of BD-LIVE service contents provided by the disc manufacturer.

### NOTE

- ▶ The way you use BD-LIVE and the provided contents may differ, depending on the disc manufacturer.



## Additional Information

### Notes

Settings	<b>3D Settings</b>
	<ul style="list-style-type: none"> <li>For some 3D discs, to stop a movie during 3D playback, press the <b>■</b> (STOP) button once. The movie stops and the 3D mode option is de-activated. To change a 3D option selection when you are playing a 3D movie, press the <b>■</b> (STOP) button once. The Home Screen menu appears. Press the <b>■</b> (STOP) button again, then select 3D Settings in the Blu-ray menu.</li> <li>Depending on the content and the position of the picture on your TV screen, you may see vertical black bars on the left side, right side, or both sides.</li> </ul>
	<b>TV Aspect Ratio</b>
	<ul style="list-style-type: none"> <li>Depending on the disc type, some aspect ratios may not be available.</li> <li>If you select an aspect ratio and option that is different than the aspect ratio of your TV screen, the picture might appear to be distorted.</li> <li>If you select the 16:9 Original, your TV may display 4:3 Pillarbox (black bars on the sides of the picture).</li> </ul>
	<b>BD Wise (Samsung Products only)</b>
	<ul style="list-style-type: none"> <li>When BD Wise is on, the Resolution setting automatically defaults to BD Wise and BD Wise appears in the Resolution menu.</li> <li>If the product is connected to a device that does not support BD Wise, you cannot use the BD Wise function.</li> <li>For proper operation of BD Wise, set the BD Wise option of both the product and the TV to On.</li> </ul>
<b>Digital Output</b>	
<ul style="list-style-type: none"> <li>Be sure to select the correct Digital Output or you will hear no sound or just loud noise.</li> <li>If the HDMI device (AV receiver, TV) is not compatible with compressed formats (Dolby Digital, DTS), the audio signal outputs as PCM.</li> <li>Regular DVDs do not have BONUSVIEW audio and Navigation Sound Effects.</li> <li>Some Blu-ray Discs do not have BONUSVIEW audio and Navigation Sound Effects.</li> <li>This Digital Output setup does not affect the HDMI audio output to your TV. It affects the optical and HDMI audio output when your product is connected to an AV receiver.</li> <li>If you play MPEG audio soundtracks, the audio signal outputs as PCM regardless of your Digital Output selections (PCM or Bitstream).</li> </ul>	
<b>PCM Downsampling</b>	
<ul style="list-style-type: none"> <li>Even when <b>PCM Downsampling</b> is set to <b>Off</b>, some discs will only output downsampled audio through the optical digital output.</li> <li>HDMI             <ul style="list-style-type: none"> <li>If your TV is not compatible with compressed multi-channel formats (Dolby Digital, DTS), the product may output PCM 2ch downmixed audio even though you selected Bitstream (either Reencoded or Unprocessed) in the setup menu.</li> <li>If your TV is not compatible with PCM sampling rates over 48kHz, the product may output 48kHz.</li> </ul> </li> </ul>	

# Appendix

Settings	<b>BD-LIVE Internet Connection</b> <ul style="list-style-type: none"> <li>• What is a valid certificate? When the product uses BD-LIVE to send the disc data and a request to the server to certify the disc, the server uses the transmitted data to check if the disc is valid and sends the certificate back to the product.</li> <li>• The Internet connection may be restricted while you are using BD-LIVE contents.</li> </ul>
	<b>BD Data Management</b> <ul style="list-style-type: none"> <li>• In the external memory mode, disc playback may be stopped if you disconnect the USB device in the middle of playback.</li> <li>• Only those USB devices formatted in the FAT file system (DOS 8.3 volume label) are supported. We recommend you use USB devices that support USB 2.0 protocol with 4 MB/sec or faster read/write speed.</li> <li>• The Resume Play function may not work after you format the storage device.</li> <li>• The total memory available to BD Data Management may differ, depending on conditions.</li> </ul>
	<b>Anynet+ (HDMI-CEC)</b> <ul style="list-style-type: none"> <li>• Depending on your TV, certain HDMI output resolutions may not work. Please refer to the user manual of your TV.</li> <li>• This function is not available if the HDMI cable does not support CEC.</li> <li>• If your Samsung TV has an Anynet+ logo, then it supports the Anynet+ function.</li> </ul>
	<b>Selecting the Audio Language</b> <ul style="list-style-type: none"> <li>• The ◀▶ indicator will not appear on the screen if the BONUSVIEW section does not contain any BONUSVIEW audio settings.</li> <li>• The languages available through the Audio Language function depend on the languages that are encoded on the disc. This function or certain languages may not be available.</li> <li>• Some Blu-ray Discs may allow you to select either the PCM or Dolby Digital audio soundtrack in English.</li> </ul>
Media Play	<b>Selecting the Subtitle Language</b> <ul style="list-style-type: none"> <li>• Depending on the Blu-ray Disc / DVD, you may be able to change the subtitle language in the Disc Menu. Press the <b>DISC MENU</b> button.</li> <li>• This function depends on the selection of subtitles that are encoded on the disc and may not be available on all Blu-ray Discs/DVDs.</li> <li>• Information about the main feature BONUSVIEW mode will also appear if the Blu-ray Disc has a BONUSVIEW section.</li> <li>• This function changes both the primary and secondary subtitles at the same time.</li> <li>• The total number of primary and secondary subtitles, respectively, is displayed.</li> <li>• If you press the <b>SUBTITLE</b> button on the remote control, the subtitle bar appears. Press the <b>RETURN</b> button to remove the subtitle bar.</li> </ul>

## Resolution according to the contents type

Setup		Contents Type	Blu-ray Disc	E-contents/ Digital contents
		BD Wise	Resolution of Blu-ray Disc	1080p@60F
Auto	Movie Frame : Auto	UHD Output : Auto	2160p@24F	2160p@24F
		UHD Output : Off	1080p@24F	1080p@24F
	Movie Frame : Off		Max. Resolution of TV input	Max. Resolution of TV input
		Movie Frame : Auto (24Fs) ※ 1080p & 1080i only	1080p@24F	1080p@24F
		1080p	1080p@60F	1080p@60F
		1080i	1080i	1080i
		720p	720p	720p
		480p	480p	480p

Setup			Contents Type	DVD
			BD Wise	480i
Auto	Movie Frame : Auto	DVD 24Fs Conversion : Auto	UHD Output : Auto	2160p@24F
			UHD Output : Off	1080p@24F
	DVD 24Fs Conversion : Off		Max. Resolution of TV input	
Movie Frame : Off			Max. Resolution of TV input	
Movie Frame : Auto (DVD 24Fs Conversion : Auto) ※ 1080p & 1080i only			1080p@24F	
1080p			1080i	1080p@60F
1080i				1080i
720p			720p	720p
480p			480p	480p

### NOTE |

- ▶ If the TV you connected to the product does not support Movie Frame or the resolution you selected, the message "If no pictures are shown after selecting 'Yes', please wait for 15 seconds to return to the previous resolution. Do you want to change the resolution?" appears. If you select **Yes**, the TV's screen will go blank for 15 seconds, and then the resolution will revert to the previous resolution automatically.
- ▶ If the screen stays blank after you have changed the resolution, remove all discs, and then press and hold the **■** button on the top of the product for more than 5 seconds. The initialization message appears on the screen, the player turns off automatically. When you turn your product on again, all the settings will be reset. Run the Initial Settings procedure again. Then, go to **Settings > Picture > Resolution** in the Menu, and select the correct resolution for your TV.
- ▶ When you run the Initial Settings procedure, re-select the language and aspect ratio (screen size and format) only. Resetting does not affect your network settings, so you should be able to skip Network Setup and Software Update.
- ▶ When the factory default settings are restored, all stored user BD data is deleted.
- ▶ A Blu-ray Disc must have the 24 frame feature for the product to use the Movie Frame (24Fs) mode.

# Appendix

## Digital Output Selection

Setup		PCM		Bitstream (Unprocessed)		Bitstream (Re-encoded DTS)	Bitstream (Re-encoded Dolby D)
		HDMI supported AV receiver	Optical	HDMI supported AV receiver	Optical	HDMI supported AV receiver or Optical	HDMI supported AV receiver or Optical
Connection							
Audio Stream on Blu-ray Disc	PCM	Up to PCM 7.1ch	PCM 2ch	PCM	PCM 2ch	DTS re-encoded	Re-encoded Dolby Digital *
	Dolby Digital	Up to PCM 7.1ch	PCM 2ch	Dolby Digital	Dolby Digital	DTS re-encoded	Re-encoded Dolby Digital *
	Dolby Digital Plus	Up to PCM 7.1ch	PCM 2ch	Dolby Digital Plus	Dolby Digital	DTS re-encoded	Re-encoded Dolby Digital *
	Dolby TrueHD	Up to PCM 7.1ch	PCM 2ch	Dolby TrueHD	Dolby Digital	DTS re-encoded	Re-encoded Dolby Digital *
	DTS	Up to PCM 6.1ch	PCM 2ch	DTS	DTS	DTS re-encoded	Re-encoded Dolby Digital *
	DTS-HD High Resolution Audio	Up to PCM 7.1ch	PCM 2ch	DTS-HD High Resolution Audio	DTS	DTS re-encoded	Re-encoded Dolby Digital *
	DTS-HD Master Audio	Up to PCM 7.1ch	PCM 2ch	DTS-HD Master Audio	DTS	DTS re-encoded	Re-encoded Dolby Digital *
Audio Stream on DVD	PCM	PCM 2ch	PCM 2ch	PCM 2ch	PCM 2ch	PCM 2ch	PCM 2ch
	Dolby Digital	Up to PCM 5.1ch	PCM 2ch	Dolby Digital	Dolby Digital	Dolby Digital	Dolby Digital
	DTS	Up to PCM 6.1ch	PCM 2ch	DTS	DTS	DTS	DTS
Definition for Blu-ray Disc	Any	Decodes the main feature audio and BONUSVIEW audio stream together into PCM audio and adds Navigation Sound Effects.		Outputs only the main feature audio stream so that your AV receiver can decode the audio bitstream. You will not hear BONUSVIEW audio or Navigation Sound Effects.		Decodes the main feature audio and BONUSVIEW audio stream together into PCM audio and adds Navigation Sound Effects, then re-encodes the PCM audio into DTS bitstream.	Decodes the main feature audio and BONUSVIEW audio stream together into PCM audio and adds Navigation Sound Effects, then re-encodes the PCM audio into Dolby Digital bitstream or PCM.

\* If the Source Stream is 2ch or mono, "Re-encoded Dolby D" Settings are not applied. Output will be PCM 2ch.

Blu-ray Discs may include three audio streams :

- Main Feature Audio : The audio soundtrack of the main feature.
- BONUSVIEW audio : An additional soundtrack such as the director or actor's commentary.
- Navigation Sound Effects : When you choose some menu navigation, Navigation Sound Effects may sound. Navigation Sound Effects are different on each Blu-ray Disc.

## Troubleshooting

Before requesting service, please try the following solutions.

PROBLEM	SOLUTION
No operation can be performed with the remote control.	<ul style="list-style-type: none"> <li>• Check the batteries in the remote control. They may need replacing.</li> <li>• Operate the remote control at a distance of no more than 20 feet from the product.</li> <li>• Remove the batteries and hold down one or more buttons for several minutes to drain the microprocessor inside the remote control to reset it. Reinstall the batteries and try to operate the remote control again.</li> </ul>
The disc does not play.	<ul style="list-style-type: none"> <li>• Ensure that the disc is installed with the label side facing up.</li> <li>• Check the region number of the Blu-ray Disc/DVD.</li> </ul>
The disc Menu does not appear.	<ul style="list-style-type: none"> <li>• Ensure that the disc has disc menus.</li> </ul>
The prohibition message appears on the screen.	<ul style="list-style-type: none"> <li>• This message appears when an invalid button is pressed.</li> <li>• The Blu-ray Disc/DVD's software doesn't support the feature (e.g., angles).</li> <li>• You've requested a title or chapter number or search time that is out of range.</li> </ul>
Play mode differs from the Setup Menu selection.	<ul style="list-style-type: none"> <li>• Some of the functions selected in the Setup Menu may not work properly if the disc is not encoded with the corresponding function.</li> </ul>
The screen ratio cannot be changed.	<ul style="list-style-type: none"> <li>• The Screen Ratio is fixed on your Blu-ray Disc/DVD.</li> <li>• This is not a problem with the product.</li> </ul>
No audio.	<ul style="list-style-type: none"> <li>• Make sure you have selected the correct Digital Output in the Audio Options Menu.</li> </ul>
The screen is blank.	<ul style="list-style-type: none"> <li>• If the HDMI output is set to a resolution your TV cannot support (for example, 1080p), you may not see a picture on your TV.</li> <li>• Press the <b>■</b> button (on top panel) for more than 5 seconds with no disc inside. The initialization message appears on the screen, and the player turns off automatically. When you turn your product on again, all the settings will be reset.</li> <li>• When the factory default settings are restored, all stored user BD data will be deleted.</li> </ul>
Forgot password.	<ul style="list-style-type: none"> <li>• Press the <b>■</b> button (on top panel) for more than 5 seconds with no disc inside. The initialization message appears on the screen, and the player turns off automatically. When you turn your product on again, all the settings will be reset. Don't use this unless absolutely necessary.</li> <li>• When the factory default settings are restored, all stored user BD data will be deleted.</li> </ul>

# Appendix

PROBLEM	SOLUTION
The picture is noisy or distorted.	<ul style="list-style-type: none"> <li>• Make sure that the disc is not dirty or scratched.</li> <li>• Clean the disc.</li> </ul>
No HDMI output.	<ul style="list-style-type: none"> <li>• Check the connection between the TV and the HDMI jack of the product.</li> <li>• Check if your TV supports the 480p, 720p, 1080i or 1080p HDMI input resolution.</li> </ul>
Abnormal HDMI output appears on the screen.	<ul style="list-style-type: none"> <li>• If random noise appears on the screen, it means that TV does not support HDCP (High-bandwidth Digital Content Protection).</li> </ul>
If you experience other problems.	<ul style="list-style-type: none"> <li>• Go to the table of contents and find the section of the user manual that contains information about the feature you are having the problem with, and then follow the procedure again.</li> <li>• If you still cannot resolve the problem, please contact your nearest Samsung authorized service center.</li> </ul>
<b>Play Multimedia on network devices</b>	
You can see folders shared on network devices, but cannot see the files.	<ul style="list-style-type: none"> <li>• Multimedia list only shows Video, Photo, and Music files. Other types of files are not displayed.</li> </ul>
Video plays intermittently.	<ul style="list-style-type: none"> <li>• Check if the network is stable.</li> <li>• Check if the network cable is properly connected and if the network is not overloaded.</li> <li>• The wireless connection between the AllShare compatible device and the product is unstable. Check the connection.</li> </ul>
The Network connection between the product and the PC is unstable.	<ul style="list-style-type: none"> <li>• IP addresses within the same subnetwork should be unique. If they are not, IP interference can cause this phenomenon.</li> <li>• Check if you have a firewall enabled. If so, disable the firewall function.</li> </ul>

PROBLEM	SOLUTION
BD-LIVE	
This product cannot connect to the BD-LIVE server.	<ul style="list-style-type: none"> <li>• Test whether the network connection is working using the <b>Network Status</b> function. (See page 18)</li> <li>• Check whether a USB memory device is connected to the product.</li> <li>• The memory device must have at least 1GB of free space to accommodate the BD-LIVE service. You can check the available size in BD Data Management. (See page 19)</li> <li>• See if the BD-LIVE Internet Connection option is set to Allow(All).</li> <li>• If all above fails, contact the contents provider or update to the product to the latest firmware.</li> </ul>
When using the BD-LIVE service, an error occurs.	<ul style="list-style-type: none"> <li>• The memory device must have at least 1GB of free space to accommodate the BD-LIVE service. You can check the available size in BD Data Management. (See page 19)</li> </ul>

#### I NOTE |

- ▶ When the factory default settings are restored, all stored user BD data will be deleted.

## Repairs

If you contact us to repair your product, an administration fee may be charged if either:

1. An engineer is called out to your home at your request and there is no defect in the product.
2. You bring the unit to a repair center and there is no defect in the product.

We will provide you with the amount of the administration fee before we make a home visit or begin any work on your product.

We recommend you read this manually thoroughly, search for a solution on line at [www.samsung.com](http://www.samsung.com), or contact Samsung Customer Care at 1-800-SAMSUNG (726-7864) before seeking to repair your product.

# Appendix

## Disc and Format Compatibility

### Disc types and contents your product can play

Media	Disc Type	Details
VIDEO	Blu-ray Disc 3D Blu-ray Disc	BD-ROM or BD-RE/-R recorded in the BD-RE format.
	DVD-VIDEO DVD-RW DVD-R DVD+RW DVD+R	DVD-VIDEO, recorded DVD+RW/DVD-RW(V)/DVD-R/+R that have been recorded and finalized, or a USB storage media containing MKV, MP4 contents.
MUSIC	CD-RW/-R, DVD-RW/-R, BD-RE/-R	Music recorded on CD-RW/-R, DVD-RW/-R, BD-RE/-R or a USB storage media containing MP3 or WMA contents.
PHOTO	CD-RW/-R, DVD-RW/-R, BD-RE/-R	Photos recorded on CD-RW/-R, DVD-RW/-R, BD-RE/-R or a USB storage media containing JPEG contents.

#### NOTE

- ▶ The product may not play certain CD-RW/-R and DVD-R because of the disc type or recording conditions.
- ▶ If a DVD-RW/-R has not been recorded properly in DVD video format, it will not be playable.
- ▶ Your product will not play content that has been recorded on a DVD-R at a bit-rate that exceeds 10 Mbps.
- ▶ Your product will not play content that has been recorded on a BD-R or USB device at a bitrate that exceeds 25 Mbps.
- ▶ Playback may not work for some types of discs, or when you use specific functions, such as angle change and aspect ratio adjustment. Information about the discs is written in detail on the disc box. Please refer to this if necessary.
- ▶ When you play a BD-J title, loading may take longer than a normal title or some functions may perform slowly.

### Disc types your product cannot play










- HD DVD
- DVD-ROM/PD/MV, etc
- DVD-RAM
- Super Audio CD (except CD layer)
- DVD-RW (VR mode)
- CVD/CD-ROM/CDV/CD-G/CD-I/LD (CD-Gs play audio only, not graphics.)
- 3.9 GB DVD-R for Authoring.







## Region Code

Both products and discs are coded by region. These regional codes must match for a disc to play. If the codes do not match, the disc will not play.

The Region Number for this product is displayed on the rear panel of the product.

Disc Type	Region Code	Area
Blu-ray Disc		North America, Central America, South America, Korea, Japan, Taiwan, Hong Kong and South East Asia.
		Europe, Greenland, French territories, Middle East, Africa, Australia and New Zealand.
		India, China, Russia, Central and South Asia.
DVD-VIDEO		The U.S., U.S. territories and Canada
		Europe, Japan, the Middle East, Egypt, Africa, Greenland
		Taiwan, Korea, the Philippines, Indonesia, Hong Kong
		Mexico, South America, Central America, Australia, New Zealand, Pacific Islands, Caribbean
		Russia, Eastern Europe, India, North Korea, Mongolia
		China

## Logos of Discs the product can play

	
Blu-ray Disc	3D Blu-ray Disc
	
BD-LIVE	NTSC broadcast system in U.S.A, Canada, Korea, Japan

# Appendix

## Supported Formats

### Video File Support

File Extension	Container	Video Codec	Resolution	Frame rate (fps)	Bit rate (Mbps)	Audio Codec
*.avi *.mkv *.asf *.wmv *.mp4 *.mov *.3gp *.vro *.mpg *.mpeg *.ts *.tp *.trp *.mov *.flv *.vob *.svi *.m2ts *.mts *.ps	AVI MKV ASF MP4 3GP MOV FLV VRO VOB PS TS SVAF	MVC	1920x1080             1280x720    640x480	24/25/30	60	AC3 LPCM ADPCM(IMA, MS) AAC HE-AAC WMA Dolby Digital Plus MPEG(MP3) DTS
		Motion JPEG		FHD: MAX 30 HD: MAX 60	30	
		H.264 BP/MP/HP				
		MPEG4 SP/ASP				
		Window Media Video v9(VC1)				
		AVS				
		MPEG2				
		MPEG1				
		Microsoft MPEG-4 v1, v2, v3				
		H.263 Sorrenson				
		Window Media Video v7(WMV1), v8(WMV2)				
		VP6				
		VP8				
*.webm	WebM	VP8	1920x1080	6~30	20	Vorbis

#### ■ Limitations

- Even when a file is encoded by a supported codec listed in the Video File Support table, the file might not play if its content has a problem.
- Normal playback is not guaranteed if the file's container information is wrong or the file itself is corrupted.
- Files having a higher Bit rate/frame rate than indicated in the Video File Support table may stutter when played back.
- Seek (Jump) function is not available if the file's index table is damaged.
- When you playback a file remotely through a network connection, video playback may stutter depending on the network speed.
- Some USB/Digital camera devices may not be compatible with the product.
- The AVS codec is supported only by models made for China.
- The \*.ps file extension is supported only by models made for China.
- If the original content of a file was recorded in UHD, it cannot be played.

### ■ Video decoder

- Supports up to H.264 Level 4.1. (Does not support FMO/ASO/RS)
- Does not support VC1/AP/L4.
- CODECs except for WMVv7, v8, MSMPEG4 v3, MVC, VP6
  - 1) Below 1280 x 720 : 60 frames max.
  - 2) Above 1280 x 720 : 30 frames max.
- Does not support GMC 2 or higher.
- Supports SVAF Top/Bottom, Side by Side , Left/Right view sequence type(2 ES)
- Supports BD MVC Spec.

### ■ Audio decoder

- Supports WMA 10 PRO (Up to 5.1).
- Does not support WMA lossless audio.
- Also supports the M2 profile.
- The RealAudio 10 lossless format is not supported by models made for China and Hong Kong.
- Does not support QCELP/AMR NB/WB.
- Supports vorbis (Up to 2ch).
- Supports DD+ (Up to 5.1ch)
- The DTS LBR codec is supported only for MKV / MP4 / TS containers.

#### I NOTE I

- ▶ Some MKV and MP4 format discs may not play, depending on their video resolution and frame rate.

### Supported Subtitle File Formats

	Name	File Extension
External	MPEG-4 Timed text	.txt
	SAMI	.smi
	SubRip	.srt
	SubViewer	.sub
	Micro DVD	.sub or.txt
	SubStation Alpha	.ssa
	Advanced SubStation Alpha	.ass
	Powerdivx	.psb
	SMPTTE-TT Text	.xml

	Name	File Extension
Internal	Xsub	AVI
	SubStation Alpha	MKV
	Advanced SubStation Alpha	MKV
	SubRip	MKV
	VobSub	MKV
	MPEG-4 Timed text	MP4
	TTML in smooth streaming	MP4
	SMPTTE-TT TEXT	MP4
	SMPTTE-TT PNG	MP4

### Music File Support

File Extension	Type	Codec	Support Range
*.mp3	MPEG	MPEG1 Audio Layer 3	-
*.m4a *.mpa *.aac	MPEG4	AAC	-
*.flac	FLAC	FLAC	Supports up to two channels.
*.ogg	OGG	Vorbis	Supports up to two channels.
*.wma	WMA	WMA	For WMA, Supports up to 10 Pro 5.1 channels. WMA lossless audio is not supported.
*.wav	wav	wav	-
*.mid *.midi	midi	midi	Type 0, type 1 and Seek is not supported. Only available with USB.

# Appendix

File Extension	Type	Codec	Support Range
*.ape	ape	ape	NVT and X13 is not supported.
*.aif *.aiff	AIFF	AIFF	-
*.m4a	ALAC	ALAC	-

## Picture File Support

File Extension	Type	Resolution
*.jpg *.jpeg	JPEG	15360x8640
*.png	PNG	4096x4096
*.bmp	BMP	4096x4096
*.mpo	MPO	15360x8640

## Notes on the USB connection

- Your player supports USB storage media, MP3 players, digital cameras, and USB card readers.
- Some USB/digital camera devices may not be compatible with the player.
- Your player supports the FAT16, FAT32, and NTFS file systems.
- Connect USB devices directly to the player's USB port. Connecting through a USB cable may cause compatibility problems.
- Inserting more than one memory device into a multi-card reader may cause the reader to operate improperly.
- The player does not support the PTP (Peer to Peer) protocol.
- Do not disconnect a USB device while it is transferring or recording data.
- The bigger the image resolution, the longer the image takes to display.
- This player cannot play MP3 files with DRM (Digital Rights Management) downloaded from commercial sites.
- Your player only supports video that is under 30fps (frame rate).

- Your player only supports USB Mass Storage Class (MSC) devices such as thumb drives and USB HDD. (HUB is not supported.)
- Certain USB HDD Devices, multi-card readers and thumb drives may not be compatible with this player.
- If some USB devices require excessive power, they may be limited by the circuit safety device.
- If playback from a USB HDD is unstable, provide additional power by plugging the HDD into a wall socket. If the problem continues, contact the USB HDD manufacturer.
- SAMSUNG is not responsible for any data file damage or data loss.
- Your player does not support NTFS compressed, sparse, or encrypted files.
  - You can repair or format a USB device on your Desktop PC. (MS-Windows OS only)

## AVCHD (Advanced Video Codec High Definition)

- This player can play back AVCHD format discs. These discs are normally recorded and used in camcorders.
- The AVCHD format is a high definition digital video camera format.
- The MPEG-4 AVC/H.264 format compresses images with greater efficiency than the conventional image compressing format.
- Some AVCHD discs use the "x.v.Color" format. This player can play back AVCHD discs that use "x.v.Color" format.
- "x.v.Color" is a trademark of Sony Corporation.
- "AVCHD" and the AVCHD logo are trademarks of Matsushita Electronic Industrial Co., Ltd. and Sony Corporation.

### NOTE

- Some AVCHD format discs may not play, depending on the recording conditions. AVCHD format discs need to be finalized.
- "x.v.Color" offers a wider color range than normal DVD camcorder discs.

## Compliance and Compatibility Notice

NOT ALL discs are compatible

- Subject to the restrictions described below and those noted throughout this Manual, including the Disc Type and Characteristics section of this user manual, disc types that can be played are: pre-recorded commercial BD-ROM, DVD-VIDEO, and Audio CD (CD-DA); BD-RE/-R, DVD-RW/-R; and CD-RW/-R.
- Discs other than the above cannot and/or are not intended to be played by this player. And some of the above discs may not play due to one or more reasons provided below.
- Samsung cannot assure that this player will play every disc bearing the BD-ROM, BD-RE/-R, DVD-VIDEO, DVD-RW/-R, DVD+RW/+R and CD-RW/-R logos, and this player may not respond to all operating commands or operate all features of every disc. These and other disc compatibility and player operation issues with new and existing format discs are possible because:
  - Blu-ray is a new and evolving format and this player may not operate all features of Blu-ray Discs because some features may be optional, additional features may have been added to the Blu-ray Disc format after the production of this player, and certain available features may be subject to delayed availability;
  - not all new and existing disc format versions are supported by this player;
  - new and existing disc formats may be revised, changed, updated, improved and/or supplemented;
  - some discs are produced in a manner that allows specific or limited operation and feature during playback;
  - some features may be optional, additional features may have been added after the production of this player or certain available features may be subject to delayed availability;
  - some discs bearing the BD-ROM, BD-RE/-R, DVD-VIDEO, DVD-RW/-R, DVD+RW/+R and CD-RW/-R logos may still be non-standardized discs;
  - some discs may not be played depending on their physical state or recording conditions;
  - problems and errors can occur during the creation of Blu-ray Disc, DVD software and/or the manufacture of discs;
  - this player operates differently than a standard DVD player or other AV equipment; and/or
  - for reasons noted throughout this user manual and for other reason(s) discovered and posted by SAMSUNG customer care center.
- If you encounter disc compatibility or player operation problems, please contact SAMSUNG customer care center.  
You may also contact SAMSUNG customer care center for possible updates on this player.
- For additional information on playback restrictions and disc compatibility, refer to the Precautions, Before Reading the user manual, Disc Types and Characteristics, and Before Playing sections of this user manual.
- **For product progressive scan output** : CONSUMERS SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED IN THE PICTURE. IN CASE OF PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT THE USER SWITCH THE CONNECTION TO THE 'STANDARD DEFINITION' OUTPUT. IF THERE ARE QUESTIONS REGARDING OUR TV SET COMPATIBILITY WITH THIS PRODUCT, PLEASE CONTACT OUR CUSTOMER SERVICE CENTER.

# Appendix

## Copy Protection

- Because AACS (Advanced Access Content System) is approved as content protection system for Blu-ray Disc format, similar to use of CSS (Content Scramble System) for DVD format, certain restrictions are imposed on playback, analog signal output, etc., of AACS protected contents. The operation of this product and restrictions on this product may vary depending on your time of purchase as those restrictions may be adopted and/or changed by AACS after the production of this product. Furthermore, BD-ROM Mark and BD+ are additionally used as content protection system for Blu-ray Disc format, which imposes certain restrictions including playback restrictions for BD-ROM Mark and/or BD+ protected contents. To obtain additional information on AACS, BD-ROM Mark, BD+, or this product, please contact SAMSUNG customer care center.
- Many Blu-ray Disc/DVDs are encoded with copy protection. Because of this, you should only connect your Player directly to your TV, not to a VCR. Connecting to a VCR results in a distorted picture from copy-protected Blu-ray Disc/DVDs.
- Under the U.S. Copyright laws and Copyright laws of other countries, unauthorized recording, use, display, distribution, or revision of television programs, videotapes, Blu-ray Discs, DVDs, and other materials may subject you to civil and/or criminal liability.
- **Cinavia Notice** : This product uses Cinavia technology to limit the use of unauthorized copies of some commercially-produced film and videos and their soundtracks. When a prohibited use of an unauthorized copy is detected, a message will be displayed and playback or copying will be interrupted.

More information about Cinavia technology is provided at the Cinavia Online Consumer Information Center at <http://www.cinavia.com>. To request additional information about Cinavia by mail, send a postcard with your mailing address to: Cinavia Consumer Information Center, P.O. Box 86851, San Diego, CA, 92138, USA.

This product incorporates proprietary technology under license from Verance Corporation and is protected by U.S. Patent 7,369,677 and other U.S. and worldwide patents issued and pending as well as copyright and trade secret protection for certain aspects of such technology. Cinavia is a trademark of Verance Corporation. Copyright 2004-2010 Verance Corporation. All rights reserved by Verance. Reverse engineering or disassembly is prohibited.

## Network Service Disclaimer

All content and services accessible through this device belong to third parties and are protected by copyright, patent, trademark and/or other intellectual property laws. Such content and services are provided solely for your personal noncommercial use. You may not use any content or services in a manner that has not been authorized by the content owner or service provider. Without limiting the foregoing, unless expressly authorized by the applicable content owner or service provider, you may not modify, copy, republish, upload, post, transmit, translate, sell, create derivative works, exploit, or distribute in any manner or medium any content or services displayed through this device.

THIRD PARTY CONTENT AND SERVICES ARE PROVIDED "AS IS." SAMSUNG DOES NOT WARRANT CONTENT OR SERVICES SO PROVIDED, EITHER EXPRESSLY OR IMPLIEDLY, FOR ANY PURPOSE. SAMSUNG EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. SAMSUNG DOES NOT GUARANTEE THE ACCURACY, VALIDITY, TIMELINESS, LEGALITY, OR COMPLETENESS OF ANY CONTENT OR SERVICE MADE AVAILABLE THROUGH THIS DEVICE AND UNDER NO CIRCUMSTANCES, INCLUDING NEGLIGENCE, SHALL SAMSUNG BE LIABLE, WHETHER IN CONTRACT OR TORT, FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, ATTORNEY FEES, EXPENSES, OR ANY OTHER DAMAGES ARISING OUT OF, OR IN CONNECTION WITH, ANY INFORMATION CONTAINED IN, OR AS A RESULT OF THE USE OF ANY CONTENT OR SERVICE BY YOU OR ANY THIRD PARTY, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Third party services may be terminated or interrupted at any time, and Samsung makes no representation or warranty that any content or service will remain available for any period of time. Content and services are transmitted by third parties by means of networks and transmission facilities over which Samsung has no control. Without limiting the generality of this disclaimer, Samsung expressly disclaims any responsibility or liability for any interruption or suspension of any content or service made available through this device.

Samsung is neither responsible nor liable for customer service related to the content and services. Any question or request for service relating to the content or services should be made directly to the respective content and service providers.

## Licenses

- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are registered trademarks of Dolby Laboratories.



- For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, DTS-HD, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS-HD Master Audio is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.



- The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



- Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.



- Open Source License Notice
  - In the case of using open source software, Open Source Licenses are available on the product menu.
- Blu-ray Disc™, Blu-ray™ and the logos are trademarks of the Blu-ray Disc Association.

# Appendix

## Specifications

General	Power Requirements	AC110-120V 50/60Hz
	Power Consumption	18.5W
	Weight	2.6 lbs
	Dimensions	14.2 (W) X 7.7 (D) X 1.6 (H) inches
	Operating Temperature Range	+41 °F to +95 °F
	Operating Humidity Range	10 % to 75 %
USB	Type A	USB 2.0
	DC output	5V 500mA Max.
HDMI	Video	2D : 2160p, 1080p, 1080i, 720p, 480p 3D : 1080p, 720p
	Audio	PCM, Bitstream
Audio Output	Digital Audio Output	Optical
Network	Ethernet	100BASE - TX Terminal
	Wireless LAN	Built-in
	Security	WEP (OPEN/SHARED) WPA-PSK (TKIP/AES) WPA2-PSK (TKIP/AES)
	WPS(PBC)	Supported

- Network speeds equal to or below 10Mbps are not supported.
- Design and specifications are subject to change without prior notice.
- Weight and dimensions are approximate.
- Dispose unwanted electronics through an approved recycler.  
To find the nearest recycling location, go to our website: [www.samsung.com/recyclingdirect](http://www.samsung.com/recyclingdirect) or call, (877) 278 - 0799.



## LIMITED WARRANTY TO ORIGINAL PURCHASER

This SAMSUNG brand product, as supplied and distributed by SAMSUNG and delivered new, in the original carton to the original consumer purchaser, is warranted by SAMSUNG against manufacturing defects in materials and workmanship for a limited warranty period of:

### **One (1) Year Parts and Labor\* (\*90 Days Parts and Labor for Commercial Use)**

This limited warranty begins on the original date of purchase, and is valid only on products purchased and used in the United States. To receive warranty service, the purchaser must contact SAMSUNG for problem determination and service procedures. Warranty service can only be performed by a SAMSUNG authorized service center. The original dated bill of sale must be presented upon request as proof of purchase to SAMSUNG or SAMSUNG's authorized service center. Transportation of the product to and from the service center is the responsibility of the purchaser.

SAMSUNG will repair or replace this product, at our option and at no charge as stipulated herein, with new or reconditioned parts or products if found to be defective during the limited warranty period specified above. All replaced parts and products become the property of SAMSUNG and must be returned to SAMSUNG. Replacement parts and products assume the remaining original warranty, or ninety (90) days, whichever is longer.

SAMSUNG's obligations with respect to software products distributed by SAMSUNG under the SAMSUNG brand name are set forth in the applicable end user license agreement. Non-SAMSUNG hardware and software products, if provided, are on an "AS IS" basis.

Non-SAMSUNG manufacturers, suppliers, publishers, and service providers may provide their own warranties.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, and except to the extent otherwise expressly provided for in this statement, noncommercial use of this product, and shall not apply to the following, including, but not limited to: damage which occurs in shipment; delivery and installation; applications and uses for which this product was not intended; altered product or serial numbers; cosmetic damage or exterior finish; accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, parts, supplies, accessories, applications, installations, repairs, external wiring or connectors not supplied and authorized by SAMSUNG, or which damage this product or result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; product removal or reinstallation; reception problems and distortion related to noise, echo, interference or other signal transmission and delivery problems. SAMSUNG does not warrant uninterrupted or error-free operation of the product.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON SAMSUNG. SAMSUNG SHALL NOT BE LIABLE FOR LOSS OF REVENUE OR PROFITS, FAILURE TO REALIZE SAVINGS OR OTHER BENEFITS, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOR SHALL RECOVERY OF ANY KIND AGAINST SAMSUNG BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT SOLD BY SAMSUNG AND CAUSING THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, PURCHASER ASSUMES ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO PURCHASER AND PURCHASER'S PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT SOLD BY SAMSUNG NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF SAMSUNG. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

To obtain warranty service, please contact SAMSUNG customer care center.

The benefits of this Limited Warranty extend only to the original purchaser of Samsung products from an authorized Samsung reseller.

THIS LIMITED WARRANTY SHALL NOT APPLY TO ANY SAMSUNG PRODUCTS PURCHASED FROM UNAUTHORIZED RESELLERS OR RETAILERS, EXCEPT IN STATES WHERE SUCH RESTRICTION MAY BE PROHIBITED.

For a list of Samsung authorized retailers, please go to: [http://www.samsung.com/us/peaceofmind/authorized\\_resellers.html](http://www.samsung.com/us/peaceofmind/authorized_resellers.html).



## QUESTIONS OR COMMENTS?

COUNTRY	CALL	OR VISIT US ONLINE AT	WRITE
IN THE US	1-800-SAMSUNG (726-7864)	<a href="http://www.samsung.com/us">www.samsung.com/us</a>	Samsung Electronics America, Inc. 85 Challenger Road Ridgefield Park, NJ 07660

