


黑白印刷 尺寸: 130 X 180mm

DENVER®

Digital Set Top Box
Operating Manual

DMB-106HD

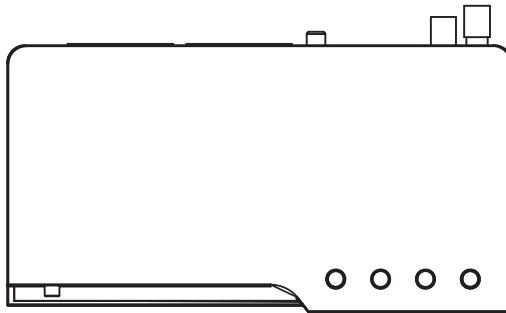

DVB-T PLAYER

DENVER DMB-106HD

• THANK YOU FOR BUYING THE DENVER DMB-106HD.

1. WHEN RECORDING TO USB STICK OR EXTERNAL HARDDISC ON THIS MODEL, YOU HAVE TO WAIT A FEW SECONDS BEFORE PUSHING REC. AFTER INSERTING THE MEDIA. OTHERWISE THE UNIT CAN FREEZE IN THE SIGNAL. IF THAT HAPPENS, THEN PLEASE TAKE OFF POWER AND CONNECT AGAIN TO FIX THIS.

2. WHEN DIGITAL AUDIO OUTPUT IS SET TO RAW IT IS FOR USING WITH SURROUND RECEIVER ONLY. YOU HAVE TO MUTE THE SOUND ON THE TV WHEN ON THIS MODE, OTHERWISE YOU CAN HAVE SOME NOISE IN THE TV SPEAKERS.
IF USING ONLY WITH TV, THEN PLEASE MAKE SURE THE AUDIO OUTPUT IS SET TO PCM.

3. AUTO STANDBY FUNCTION:
THIS FUNCTION SHUTS DOWN AUTOMATICALLY AFTER 3 HOURS IF NO USER INTERFERENCE HAS BEEN DONE DURING THESE HOURS. 2 MINUTES BEFORE SHUTDOWN A WARNING MESSAGE WILL BE SHOWN ON THE TV.
AUTO STANDBY FUNCTION ARE PRESET TO ON FROM FACTORY SIDE, BUT CAN BE TURNED OFF IN THE SYSTEM MENU.

4. WHEN USING AN EXTERNAL HARDDISC, PLEASE MAKE SURE YOU HAVE FORMATTED IT IN FAT OR FAT32 FILESYSTEM.. NTFS WON' T WORK.
AND THE HARDDISC NEED AN EXTERNAL POWER SUPPLY TO WORK, AS THE USB PORT WON' T GIVE ENOUGH POWER TO RUN IT PROPERLY.



Safety Instructions

- Always read the safety instructions carefully
- Keep this Instruction Manual for future reference
- Keep this device away from humidity
- Lay this device on a reliable flat surface before setting it up
- Do not stand it on soft furnishings
- The power cable/disconnect device shall remain easy to operate/disconnect.
- If any of the following situation arises, get the Set Top Box checked by a service technician:
 - ✎ It has been exposed to moisture
 - ✎ It has been dropped and damaged
 - ✎ It has obvious sign of breakage
 - ✎ It has not been working well or you cannot get it to work according to the Instruction Manual

Warning


- To prevent the risk of electric shock, do not open the cover or the back of the receiver.
- Do not block the ventilation holes of the device. Leave appropriate gap above and around it to allow for adequate ventilation.
- Do not place the device in an unventilated cabinet or on top of a unit which emits heat.

Copyright Statement

No part of this publication may be reproduced in any form by any means without the prior written permission. Other trademarks or brand names mentioned herein are trademarks or registered trademarks of their respective companies.

Disclaimer


Information in this document is subject to change without notice. The manufacturer does not make any representations or warranties (implied or otherwise) regarding the accuracy and completeness of this document and shall in no event be liable for any loss of profit or any commercial damage, including but not limited to special, incidental, consequential, or other damage.

 This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts. When servicing use only identical replacement parts.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or cords.




Front Panel

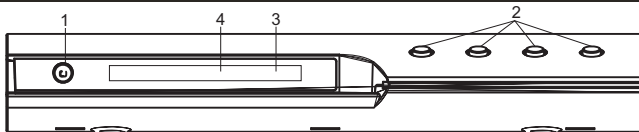

1. Power switch button.
2. PROG-/+, VOL-/+.
3. LED indicator lamp.
4. Remote receive sensor.

Rear Panel

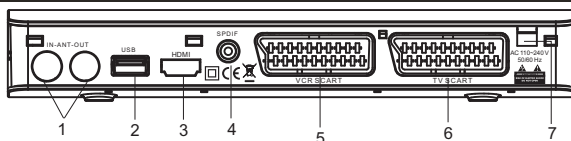

1. RF IN/RF LOOP THROUGH

TV RF IN socket connects to your external aerial.

LOOP THROUGH socket will bypass the input RF signal to another tuner.

2. USB

You can play media file and update software from USB terminal.

3. HDMI OUTPUT

High Definition Multimedia output, support up to 1080i format output.

4. SPDIF OUTPUT

Digital audio output.

5. TV SCART OUTPUT

This terminal output CVBS or RGB signal, you can switch it in menu, and the default setting is CVBS output.

6. VCR SCART OUTPUT/INPUT

In DVB work mode, this terminal output CVBS signal.


When press TV/VCR button in remote control, TV SCART outputs VCR signal;

7. POWER INPUT

Power cord input, and the power supply AC 110~240V


The unit will automatic power off at standby mode if no operation is performed after 3 hours, TV screen will display “power down after 120 seconds” before unit power off, select exit button by remote control to cancel standby mode.

Remote Control Unit

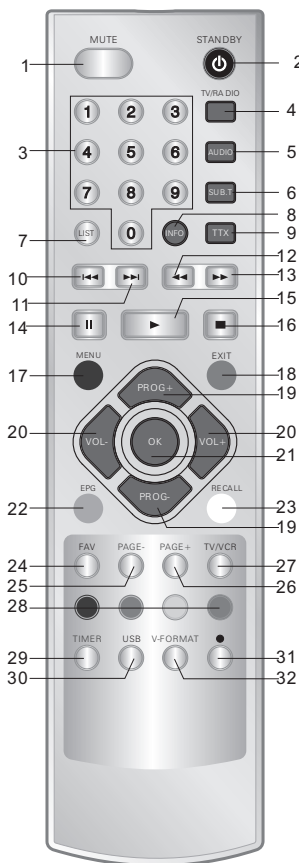

- 1) **MUTE**: Used to turn the sound on or off.
- 2) **STANDBY**: Used to switch the set top box to on and off.
- 3) **NUMBER KEYS**: Used to select channel numbers or input numbers in menus.
- 4) **TV/RADIO**: Used to switch between TV channels and Radio stations.
- 5) **AUDIO**: Used to set the sound output, the available settings are STEREO, LEFT, RIGHT, MONO.
- 6) **SUB.T**: Used to switch between different subtitles that are broadcasted.
- 7) **LIST**: To display the channel list.
- 8) **INFO**: Used to display information about the channel being viewed.
- 9) **TTX**: TELETEXT
- 10) **◀◀**: Skips to the previous track during playing media
- 11) **▶▶**: Skips to the next track during playing media
- 12) **◀◀**: Searches forwards during media play.
- 13) **▶▶**: Searches backwards during media play.
- 14) **PAUSE**: Press this button to pause playback.
- 15) **PLAY**: Press this button start to playback.


Remote Control Unit

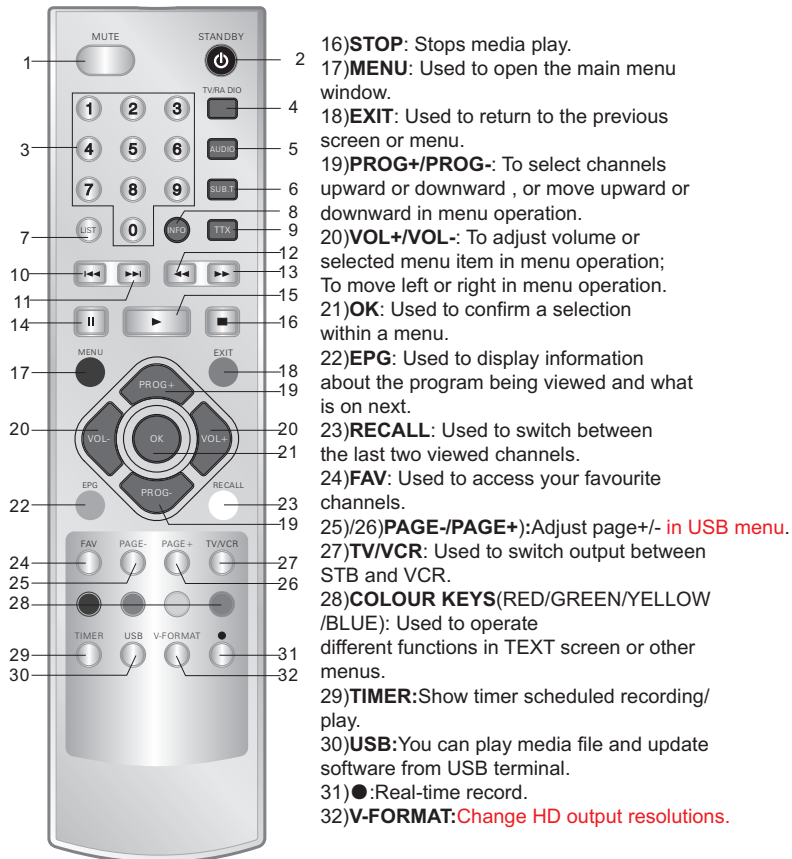

Installing the Batteries

Remove the battery cover from the Remote Control and put 2xAAA size batteries inside the compartment.

The diagram inside the Battery Compartment shows the correct way to install the batteries.

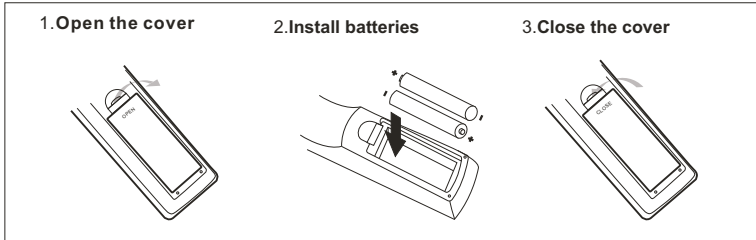

First Time Installation

After all connections have been made properly, switch on TV and make sure the receiver is connected to the Main Power. Press Power Button to switch receiver on. If you are using the receiver For the first time or restored to Factory Default, the Main Menu will appear on your TV screen.

FIRST INSTALLATION	
OSD LANGUAGE	ENGLISH ▶
COUNTRY	FRANCE ▶
TIME ZONE	GMT+1 ▶
LCN	ON ▶
START	

OSD LANGUAGE: Press OK key to select Osd language

COUNTRY: Press OK key to select Country.


TIME ZONE: Press OK key to select Time zone

LCN: Press OK key to select lcn ON or OFF

START: Press OK key to start first programs search.

Setup Installation

Press menu key to enter setup installation.

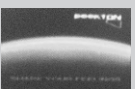	▶ OSD LANGUAGE
○ SYSTEM SETUP	▶ COUNTRY
○ VIDEO SETTINGS	▶ LCN
○ AUDIO SETTINGS	▶ TIME ZONE
○ INSTALLATION	▶ AUTO STANDBY
○ CHANNEL EDIT	▶ CHANGE PASSWORD
	▶ SYSTEM INFORMATION
	▶ FACTORY RESET

OSD LANGUAGE: Select an OSD LANGUAGE

COUNTRY: Select your country of residence.

LCN: Set LCN on or off

TIME ZONE: a. TIME ZONE : Select Time zone of the country.

b. SUMMER TIME: Select Summer timer on or off.

AUTO STANDBY: The unit will automatic power off at standby mode if no operation is performed after 3 hours, TV screen will display "power down after 120 seconds" before unit power off, select exit button by remote control to cancel standby mode on/off the function.


CHANGE PASSWORD: Set or change the password for Locked programs.

Enter your old Password or the default password '1234'. You will then be asked to enter your new password.

To confirm re-enter your new password.

SYSTEM INFORMATION: Show some information of the player.

FACTORY RESET: Reset the factory setting of player.

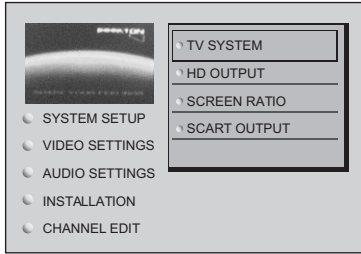


TV SYSTEM: Select tv color system pal or ntsc.

HD OUTPUT: HD TV programe display mode(1080i, 720p, 576p/480p, 576i/480i, auto).


SCREEN RATIO: You must set the display format to either 4:3 ,16:9 or Auto to get the maximum display when watching TV.

SCART OUTPUT : Select Scart output mode : CVBS or RGB

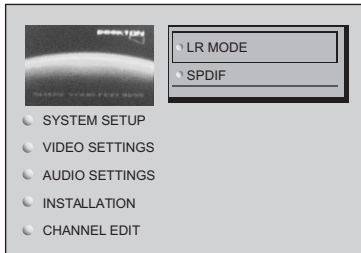

LR MODE: Select audio output mode : LEFT, RIGHT OR STEREO


SPDIF: Select digital audio output mode : PCM or RAW

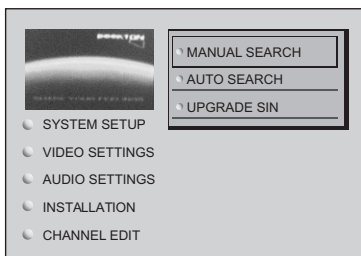

Manual search: Install new channels manually.


Auto search: Search and install all channels automatically.

Upgrade stb: Upgrade the player.

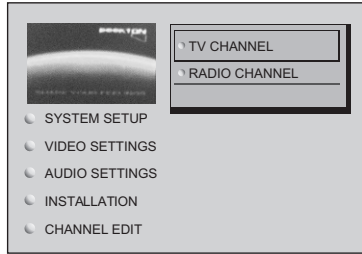

TV CHANNEL and RADIO CHANNEL:

To edit your programs preferences (favourite, lock, move or delete), as picture 6

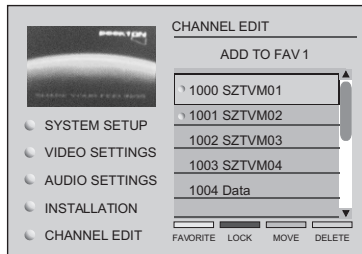

PVR (Personal video recorder)

1.USB PVR has the following features:

- Support one-channel TS recoding
- Support scheduled recording and real-time recording
- Support program playback
- Support playback modes include: pause, fast forward and fast rewind.

The storage media supported :

- USB adapted hard disk (500mA)
- USB disk (depending on the read-write speed, 500mA)
- In order to delete recorded files on a USB stick then please connect the USB stick to your computer and then delete the recorded files.

The TV program is recorded to file at .PVR format, which can be played back on this unit and PC using a suitable player, but can not be played back on DVD or PDVD.

The file system format support :

- FAT
- FAT 32

2.Before recording

Must plus USB disk or USB adapted hard disk (500mA). Press STOP key to stop recording.

3.Video recording.

- Real-time recording

In the normal play mode, Press ● to enter the recording status. Once video recording starts, the upper left crner will display the recording icon. Press STOP key to stop recording.

-Scheduled recording.

User may set up scheduled recording by setting the data, time and program. Once the scheduled recording time is reached, The player will switch to the scheduled program automatically for recording.

To scheduled recording , Press EPG key, to enter EPG page. select your need record program, press OK key to enter scheduled recording page as picture

New Reservation		10/3/2006 17:14	
Channel Name	Nederland 2		
DATE	YEAR	2006	MONTH 03 Day 10
START TIME	HOUR	16	MINUTE 25
End time	HOUR	17	MINUTE 20
Running Mode	ONE TIME ▶		
Reserve Type	Rec ▶		
Event Name	Top of the Pops		
OK SAVE Exit Back			
□ Switch □ Schedule □ Detail Descriptor OK New Reservation			

4.Recorder file play

-Enter USB mode and select video,then open file of USB and select torrget document which is recorder.

Troubleshooting

Problem	Potential Reasons	What to do
No picture	Power isn't connected	Connect the power
	The power switch is not on	Switch on the power
Screen shows "No Signal "	DVB-T cable not connected	Plug in the DVB-T cable
	Incorrect setting	Reset setting
No sound from speaker	No or incorrect connection with audio cable	Connect the audio cable correctly
	Sound on mute	Turn off mute function
	Incorrect sound track	Try another sound track
Only sound, no image on the screen	No or incorrect connection with AV cable	Make sure cables are connected correctly
	The program is a radio program	Press <TV/RADIO> key to shift into TV mode
Remote Control is not responding	The battery is exhausted	Change battery
	Remote Control is not facing or close enough to the Set Top Box	Adjust the position of the Remote Control and move closer to the unit
The image stopped suddenly or mosaic	The signal is too weak	Strengthen the signal

Technical Specifications

Item	Sub Item	Parameter
Tuner	Input Frequency	170~230MHz 470~860MHz
	RF Input level	-25~-82dBm
	IF Bandwidth	7MHz and 8MHz
	Modulation	QPSK, 16QAM, 64QAM
Video	Decoder Format	MPEG4 AVC/H.264 HP@L4 MPEG2 MP@ML.HL
	Output Format	576P , 720P, 1080i, 4:3 and 16:9
	Output Port	HDMI, 2XSCART
Audio	Decoder Format	MPEG-1 (layer1&2)
	Audio output	Digital audio: S/PDIF
Power	Voltage	AC 110-240V 50/60Hz
	Working Power	≤ 8W
	Standby power	≤ 0.5W

DENVER®

www.denver-electronics.com



Instructions on environment protection



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Please fill the blank with the model number of this player for future reference

Model no.: