

# USER GUIDE

## Speakeasy 200



Before operating this set,  
please read these instructions carefully.

## If you need help ...

The Binatone Help Line is available from 9.00am-5.00 pm, Monday to Friday, on **0845 345 9677** (BT Local Call rate)

Or visit our website: <http://www.binatoneonline.com/>

### Unpacking your Speakeasy GSM Mobile

In the box are:

- the mobile handset
- a mains power adaptor
- the handset back cover and card
- a rechargeable battery pack
- this user guide
- a charger pod (optional extra not always supplied)

Keep the packing materials for future use.

**Keep your sales receipt - it is your guarantee.**


**IMPORTANT** – Your handset is **not** supplied with a SIM card. The Speakeasy GSM will work on all UK GSM mobile networks except “3”, and you will need to insert a SIM card for the handset to work correctly.

**Network Services** – The Speakeasy GSM is approved for use on the GSM900 and DCS1800 networks. Check with your mobile phone service provider to see if you can use the Dual-band feature or other Network Services described in this guide. Some networks may not support all language dependent characters and/or services.

## Contents

Where to find it.....	3
Symbols on the display .....	4
Menu Operation .....	5
Read these notes first.....	6
Installation and setup.....	6
Switching On and Off .....	10
Making & answering calls.....	11
Using the Phone Book & Fast keys (M1-M3).....	13
Call log.....	15
SMS text messaging.....	16
Settings.....	19
Phone (Language, Display, Security, Reset)...	19
Clock .....	19
Network .....	20
Call .....	20
Sound profiles.....	20
Alarm Clock.....	21
SOS Button.....	22
Troubleshooting.....	24
Guarantee and Service information.....	25
Battery Information.....	26
Additional Safety Information.....	27
Technical Data.....	29
Declaration of Conformity.....	30

## Where to find it

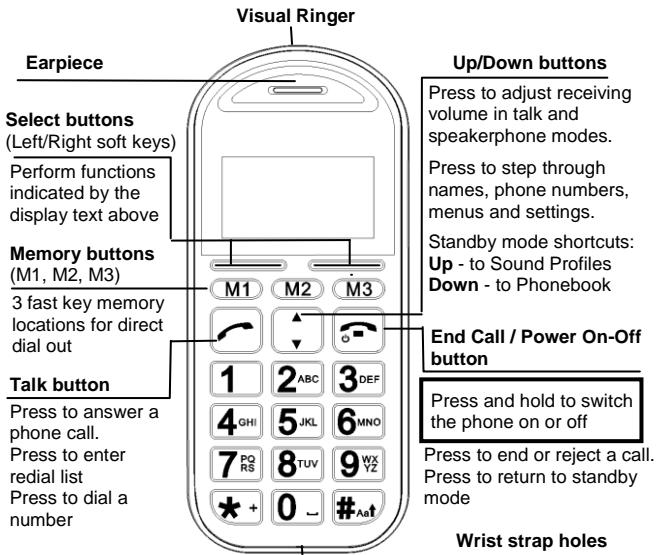


### Key Lock/Unlock button

Slide up to unlock and down to lock the keypad

### SOS button


Press and hold 3sec to start SOS call procedure

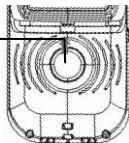

## Symbols on the display

---



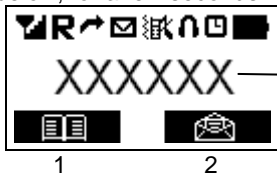




The default idle screen shows the clock. Press the End Call key to show the operator name idle screen, as below, for a few seconds.



The network name in service  
(If display option set)

- 1 - The left selection key in the idle mode is Menu.
  - 2 - The right selection key in the idle mode is SMS.
- The Soft keys change to different functions in other modes.

[Note: Symbols and positions on the display may vary.]

-  **Radio link/signal level** - On steady when linked and shows the signal strength.
-  **Battery charge level** - Charge handset as soon as possible if it shows nearly empty. While the batteries are being charged, this blinks.
-  **Roaming** - On if roaming to other mobile network.
-  **Call Divert** - On if call divert unconditional is set.
-  **Alarm** - On if an alarm is set.
-  **Ringer off & vibrator off** - On if handset's ringer and vibrator are both turned off.
-  **Ringer on & vibrator on** - On if handset's ringer and vibrator are both turned on.



**Ringer off & vibrator on** - On if handset's ringer is turned off and vibrator is turned on.



**Headset** - On when a headset is plugged in.



**New SMS** - Indicates you have new text messages.



**Lock** - On when the handset's keypad is locked.



**Missed Call** - On if you have new missed Call records.



**Call held** - On if a call is on hold.



**Mute** - On if the handset microphone is muted.







**New Voice Mail** - Indicates you have a new voice message. To listen to messages, dial your network provider's voicemail number.

## **Menu Operation**

---

Menu lists are used for set up and operation.


The left and right soft keys initially are **Menu** () and **SMS** (). (**Note:** symbols not displayed if the analogue style clock is set for idle mode.)

Press **Menu** and the display changes and the soft keys become **Select** () and **Back** ()

Use **Up** or **Down** to move up or down menu lists, and **Select** or **Back** for the next or previous display.

When writing text, use the **#** key to switch cases:

Upper case (ABC), Title case (Abc), Lower case (abc) or Numerals (123).

Use **Up** or **Down** to move the cursor, **Clear** () to delete letters and the \* key for symbols/punctuation.

## **Read these notes first**

---

Your phone is an electronic product and should be treated with care to meet any warranty and safety obligations.

- **SWITCH ON SAFELY** – Don't use if mobile phones are prohibited or may cause interference or danger.
- **HEARING AID COMPATIBILITY** – This phone is hearing aid compatible (M3) . Mobile phone may interfere with some hearing aids, please contact with your hearing aid provider
- **WATER-RESISTANCE** – Keep it dry. The phone is not water-resistant.
- **TEMPERATURE RANGE** – Operating 0°C to 40°C. Storage -20°C to 60°C.
- **CARE & CLEANING** - Do not drop or knock the phone excessively, and keep it clean using a damp cloth if necessary - do not use chemicals, cleaning solvents, or strong detergents.

## **Installation and setup**

---

Before operating the Speakeasy GSM a SIM card must be installed. Keep the SIM card out of reach of small children. The SIM card and its contacts can be damaged easily by scratches or bending, so handle the card carefully.


### **Install the SIM card and battery**

---


1. Switch off the phone, disconnect the power adaptor and remove the battery.



2. To remove the back cover push on the top of the back cover and slide the cover up.
3. Remove the battery by lifting the top edge.

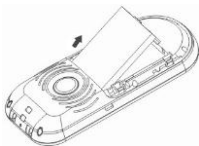

4. Carefully slide the SIM card into the holder with the gold connectors face down and angled corner lower left, as shown.

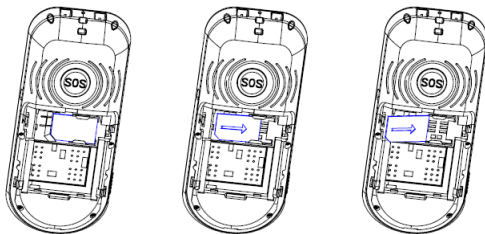

5. Replace the battery by aligning the gold connectors on the battery with those on the phone, and push the top of the battery down until it clicks into place.
6. Replace the back cover by placing it flat on the back of the handset and sliding down until it clicks into place.



## Insert the memo index card

1. Remove the handset back cover, as (2) above.
2. The index card slides between the clear lens and back cover. Ensure the card is pushed right in up to the end.
3. Replace the back cover, as (6) above.

## Charge the battery

**Warning!** Use only batteries and chargers supplied with or approved by Binatone for this model. Use of others will invalidate approvals or warranty and may be dangerous.


Do not charge the battery with the back cover removed.

1. Connect the charger lead firmly into the socket on the side of the handset. Or place the handset directly in the charger pod (if provided as an option).
2. Plug the charger into an AC mains socket. A large battery indicator bar scrolls on the display.
3. Charging the battery may take up to 5 hours.
4. If “charging...” is not displayed, disconnect the charger, and retry. If charging still fails, contact the helpline.
5. The battery is fully charged when “**Full Charged**” is displayed. Disconnect the charger from the phone and the AC outlet.


## **Connect an optional headset**

You can use a headset (not supplied) with the same micro-USB type as your charger, plugged into the Power/Headset socket on the left side of the handset.

When using headsets, including Binatone approved ones, pay attention to volume levels and read its user guide for safety instructions. Do not connect incompatible products.

When correctly inserted the  headset icon is shown.

### **Headset / Charging Connector**

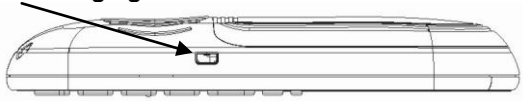

Plug in power adapter to charge battery.

Plug in headset accessory (not supplied) for headset use.

## **Switching On and Off**

---

### **To switch the phone on and off**






To switch off, press and hold **End Call** until the display clears.



To switch back on, press and hold **End Call** until the display turns on.

***Warning! Do not switch on when mobile phone use is prohibited or if it may cause interference or danger.***

### **To lock the handset keypad**

 


Push the slide switch at the right hand side down to the **LOCK**  position → the display shows  icon  
To unlock the keypad push the slide switch at the right hand side up to the **UNLOCK**  position.

**Note:** When the keypad is locked, you can answer, end or reject a call in the normal way, and use the emergency SOS button or dial the European emergency services number 112. During a call, you can operate the phone as usual.

## **Making & Answering calls**

---


 
 


### **To make a call**

- Ensure the phone is switched on and in service.
-  Key in the telephone number including area code.  
(To add prefix "+" press the "\*" key twice quickly)
-  Press **Talk** to dial the number on the display.
-  To end calls press the **End Call** button.




### **To make a call from fast key Memories (M1–M3)**

- M1** Press the Memory button to dial out the number.
- M2/M3** (For how to program a fast key, see page 13.)

### **Last Number Redial**

-  In idle mode, press **Talk** to see the last 10 numbers, dialed () , received () and missed calls () , and press **Up / Down** to go to the number you want.
-  Press **Talk** to dial the number.



### **To answer a call**

-  When the phone rings, press **Talk** to answer it.
- or**
-  Press the left soft key to silence the ringer for the rest of that call.
-  Press the right soft key to reject the call directly to your network voicemail service.

### **Earpiece volume**

-  During a call, press **Up / Down** to alter the volume. The volume level displays, & stays for future calls.


## To switch to speakerphone

During a call, press **Speakerphone On** (). The right soft key symbol will change to .



To end the call press **End Call**,

**Or**

To return to normal earpiece mode, press **Speakerphone Off** (.




## To mute the microphone


During a call, press **Options** () & **Down** to go to **Mute**, & then **Select** () → the display shows .

To unmute, press **Options** () and select **Unmute**.

## To make a conference call

Conference call is a **Network Service** that lets up to five parties talk together. (Check with your provider)

1. Make a call to the first person.
2. Press **Options** () & **Down** to go to **Hold**, & then **Select** () to put the call on hold, the display shows **||**.
3. Make a call to the second person.
4. When the new call answers, press **Options** () and select **Conference** to connect all parties.

(Note: Or press **Swap** () to switch between the two calls.)



Press the **End Call** button to end the call.



## Using the Phone Book

You can store names and phone numbers in the Internal phone book (up to 250) and in the SIM phone book (SIM dependant, but a maximum of 250).

### To access the phonebook

↳ In idle mode, press **Down**.

↳ In a call, select **Options** () , **Main Menu**, **Phonebook**.

**Note:**  Indicates entries in SIM phone book,  
 Indicates entries in the Internal phone book.


### To review the Used Space

To check how many names and numbers are saved:


↳ Select **Menu** () , **Phonebook**, **Used space** to show the phone and SIM memory being used.

### To add a new Phone Book entry

↳ Press **Down** to open the phonebook

↳ Select **Options** () , **New** & select **Save to SIM** or **Save to phone**, then enter the letters for the Name

↳ Press **Next** () & key in the digits for the Number

↳ Press **Save** () to save the new contact.

### To call a stored number

↳ Press **Down** to open the phonebook

Press **Up / Down** to find the name you want, or key the first letter of the name then **Up / Down**.

 Press **Talk** to dial the number.

### To edit (change) a Phone Book entry

- Find the entry to edit, select **Options** (⌘), **Edit** then modify the name, select **Next** (⏩) & modify the number.
- Press **Save** (💾) to save the change(s).

### To view the details of a stored number

- Find the entry to edit, select **Options** (⌘), **Details**

### To delete a Phone Book entry

- Find the entry to edit, select **Options** (⌘), **Delete**, **Select** (☑)

### To delete all entries from the phone or SIM card

- Select **Menu** (☰), **Phonebook**, **Del. all**
- Select **All in Phone** or **All in SIM** → **Del. all**
- Press **Select** (☑) again to confirm

### To copy all entries from the phone or SIM card




- Select **Menu** (☰), **Phonebook**, **Copy all**
- Select **SIM to Phone** or **Phone to SIM**
- Press **Select** (☑) to confirm the copying

### Store a Phone Book entry to a fast key (M1– M3)






- Press **Down** to open the phonebook
- Press **Up** or **Down** to find the entry to save
- Select **Options** (⌘), **Set to fast key**
- Press **Select** (☑) → the display shows **M1**, **M2**, **M3**
- Press **Up** or **Down** to choose the key to save to
- Press **Select** (☑) to confirm the memory entry.

## Call log



 

---


-  Indicates new missed entries in the Call Log. If a call is not answered, “1 ) (to view) or **Cancel** () (to clear) is pressed.

### To review the call log entries

-  Select **Menu** () , then **Down** to **Call log** & then **Select** ()
-  Press **Up / Down** to **Received, Dialed** or **Missed**, then press **Select** () to view that list, or select **Duration** to see the last call duration.

**Or:** (from idle mode)


 


-  Simply press **Talk** to show received calls ()  
dialed calls () & missed calls ()

**Note:** When in a list, press **Options** () to see **Details** for more details of the entry,  
**Call** to dial the number,  
**Edit & call** to edit and then call the number,  
**Message** to send an SMS to it,  
**Save** to save it to the phonebook,  
**Delete** to delete that entry,  
**Del. all** to delete all entries.




## **SMS text messaging**

Send & receive text messages. These are saved in the phone memory (up to 100) or on the SIM card (SIM dependant, but a maximum of 100).

Received SMS are stored in the **Inbox** and the  icon indicates new messages. Also “1 ” displays until **Select** () (to view) or **Cancel** () (to clear) is pressed.

### **To access the SMS Menu**

—: Press **SMS** () to display the options:

**New** – to write a new message

**Inbox** – to go to your inbox

**Outbox** – to go to your outbox


**Draftbox** – to go to your draft box

**Msg settings** – for the SMS settings


**Used space** – to see phone/SIM SMS space


**Del. all** – to delete all messages

### **To write and send a text message**

—: Press **SMS** () , select **New**, as above, to display a flashing cursor.

Write your message using the digit / letter keys.


—: To send, press **Options** () , Select **Send** to display the flashing cursor. Enter the full number, including area code.

—: Press **Select** () to display **Sending message...**

**Note:** This sends it without saving it, but you can also:


**Save to draft** - save in **draftbox** without sending


**Send & save** - send but also save in the **outbox**.

**Note:** For a number from the Phone Book you can also press **Contacts** () and Select the entry you want.

**Note:** If the message send fails, it returns to writing mode.

### To read your messages

Press **SMS** () , **Inbox** to display the message list, and use **Up / Down** to step through them.

Press **Select** () and **Up / Down** to display the full text and received date and time of the message.

Press **Options** () to display:


**Delete** – delete the message from the Inbox

**Reply** – reply to the sender of the message


**Forward** – send the message to another number

**Call Sender** – make a call to the sender

**Extract No.** – extract the phone number to save


**Select** () the option required and then follow the menus.

### To review the Draftbox, Outbox or Used Space


Press **SMS** () , and then follow the menus.

### To delete all Messages

Press **SMS** () , **Del. all** to display **Del. all, Del. inbox, Del. outbox, Del. draftbox**

**Select** () the option to delete the required messages.

## To change the SMS message centre settings

- Press **SMS** () , **Msg Settings** to display
  - Centre no.** – the SMS service number
  - Validity\*\*** – the SMS storage time
  - Report\*\*** – to request send delivery reports
  - Reply path\*\*** – to use own replay path
- Select** () the option required and then follow the menus.

**Centre no.** - Your Speakeasy GSM reads the service number from the SIM card. If it has been accidentally changed, you'll need to get the correct number and reprogram it.

(\*\* These **Network Service** features may not be available)

## **Settings**

---

Allows you to adjust various settings on the phone, and also to reset them to their factory default values.

Press **Menu** (☰), then press **Down** to go to **Settings**, and **Select** (☑) to display the list of settings available.

## **Phone**

**Language** – language used on the display

**Display settings** – display contrast, backlight, idle view

**Security settings** – to need a PIN before allowing use and you can change your current PIN1 to a new one (Note: some SIM cards don't allow it turned off)

**Warning: if you enter an incorrect PIN three times the SIM card is blocked, and you must enter the PUK number or contact your service provider, to unblock it and set a new PIN code.**

PIN and PUK numbers come with your SIM card.

**Spoken No.** – when set to ON the phone will speak out the digits pressed when pre-dialling. (When turned on, the volume is same as that of the keytone)

**Factory reset** – default values for phone settings. This requires a Password. (Default password = 1234)

## **Clock**

**Date & time** – the displayed date and time

**Date format** – European or USA format

**Time format** – 12 hour or 24 hour

**Clock type** - analogue or digital style

**World time** - a second time zone.

**Network** – check availability with your service provider.

**Call waiting** – press **Talk** to answer 2nd call / hold 1st

**Diverts** – to set different incoming call diverts

**Call barring** – to restrict making and receiving calls

**Network mode** – to select a different network

**Call** –check availability with your service provider.

**Auto redial** – auto-dial up to 10 redial attempts

**Anykey answer** – so any key press will answer a call

**Send own no.** – withhold your number when calling

### **Sound profiles**

Five sound profiles for quick changes to the phone sounds when in different places. The profile names **General**, **Meeting**, **Outdoor**, **Silent** and **Customise** can be changed and each profile can be personalised to give a different Ring tone, Message tone, Call alert, Ring volume, Keytone volume, Vibrator on/off and Alarm tone.

## **Alarm Clock**

---

You can set three alarms to alert once only or on selected days. When it sounds, press **Cancel** (✉) to stop it, or **Snooze** (⌚) to delay the alarm for another five minutes.

### **To set alarm**

- Press **Menu** (☰), then **Down** to select **Alarm clock**
- Select** (☑) from **Alarm 1, Alarm 2 or Alarm 3**
- Select** (☑) **On** or **Off** – the current selection is ticked

If **On** is selected, set the time & **One shot** or **Weekly** where each day can be selected using the **Talk** key.

The ☑ icon will appear on the display.

## SOS Button

---



During idle mode, press and hold the SOS button for 3 seconds to start the emergency call operation.

The phone will send an emergency SMS to any programmed emergency numbers 1 & 2 & 3, and it outputs an emergency ring (siren) from the speaker during the SMS sending.



The siren stops when SMS sending is completed.

The phone then makes a call to the first programmed emergency number SOS no.1. If SOS no.1 is busy or out of area or not answered within 1 minute, it will try SOS no.2 and then SOS no.3. If it still does not get through it will repeat the call steps up to 10 times. If the call is answered, the phone will be set in the speakerphone conversation mode.

If none of the SOS no.1/2/3 answers the call, the phone will automatically answer in speakerphone mode for any incoming call within 1 hour.

**Note:** You can use the emergency SOS button even if the key lock is turned on. If all SOS no.1/2/3 are empty, pressing this button will call to 112 directly.

### To turn on/off the SOS button function

Press **Menu** () , then **Down** to **SOS button** then press **Select** ()

Select **Activate** and then **On** or **Off** – the current selection is ticked.

When **On**, the SOS button function is activated.

When **Off**, pressing the SOS button has no function.

## To store a Phonebook entry to an SOS no.

You can store up to 3 emergency numbers.

- Press **Menu** (☰), then **Down** to **SOS button** and then press **Select** (✓)
- Select **SOS no.**
- Select **Add**
- Select **SOS no.1** or **SOS no.2** or **SOS no.3**
- ⌈ ⌋ Press **Up** or **Down** to find the entry to save
- Press **Select** (✓) to store the selected phonebook entry as an SOS number.

**Note:** Store complete “+ country / area code / numbers”, so the number works even during roaming periods. (e.g. +85212345678 instead of only 12345678).

## To delete an SOS no. entry

- Press **Menu** (☰), then **Down** to **SOS button** and then press **Select** (✓)
- Select **SOS no.**
- Select **Delete**
- ⌈ ⌋ Press **Up** or **Down** to select the entry
- Press **Select** (✓) and then **Yes** (✓) to confirm.

## To add a new contact to the Phonebook

You can add Phonebook entries while in the **SOS no.** sub-menu and then store them as emergency numbers.

- Select **New phonebook**, then **Save to SIM** or **Save to phone**. Enter the Name and Number and save it. The entry can then be added as an SOS number.

## To change the emergency SMS text


A default text message is pre-set in the phone, but can be changed if required.

- Select **SOS text** then modify and save the message as for normal SMS text messaging (see page 16).



# Troubleshooting

---

"Call failed" appears	Check dialled number is correct, with full area code
SIM card fitted – only makes emergency call	Some SIM cards are thinner than others. Lightly press the SIM card holder to ensure a proper contact is made.
The mobile phone display is blank (screen off)	The phone is switched off. Press Power On/Off for 3 seconds to switch it on again.
Calling outside your own country	If you are away from your network provider, your phone may link with another GSM network.  Contact your network provider for additional costs incurred using the phone abroad.
Can an emergency call be made without a signal or credit?	You cannot make a call if the phone has no signal.  If your display says Limited Service or SOS, the phone cannot receive a signal from your network, or has run out of credit, so can only call the emergency number 112 (or 999).  You can call 112 (or 999) if there is no credit on your phone.
How can reception be improved?	If the signal is weak, try another location to make or continue with a call, e.g. when indoors move towards a window.  Reception is often poor in elevators, tunnels or underground railways and car parks.
Can I suppress / withhold my telephone number?	If you want withhold your phone telephone number, use the main menu under Call settings/ Send own number. (This network service may not be available)
 displayed, unit does not respond.	Slide the switch on the right hand side of the phone upwards in the direction of the "open lock" symbol.
What is the SMS service centre number?	A number for the short message service usually stored on the SIM card by the operator and should not need to be entered or changed.
When do I start to incur call charges?	Charges start when a call connects to a person or an answering machine. There is no charge for writing or receiving an SMS, only when sending an SMS, and none for using phone features e.g. alarm clock.
Did I successfully send my SMS?	If your SMS is in the SMS Outbox then it was OK, or you can get confirmation after the SMS is delivered – contact your operator for details.

## **Guarantee and Service Information**

---

The Speakeasy GSM is guaranteed for **12 months** from the date of purchase on your sales receipt, but does not cover any faults or defects caused by accidents, misuse, fair wear and tear, neglect, lightning, tampering with the equipment, or any attempt at adjustment or repair other than through approved agents.

**Please keep your sales (till) receipt (this is your guarantee).** You should also keep the original packing material.

In the unlikely event that you need to return your Speakeasy GSM to our Repair Centre while it is under guarantee, there may be a handling charge.

### **While the unit is under Guarantee**

1. Pack up all of the Speakeasy GSM, using the original packing. Remember to include the power adaptor.
2. Return the unit to the shop where you bought it, making sure you take your sales receipt.

### **After the Guarantee has expired**

1. Follow step 1 as for repair under Guarantee. Then ...
2. Call your Help Line on **0845 345 9677** to ask for a quotation of the repair charge and where to send it for repair.
3. Make sure you include your name & address, and cheque or postal order for the repair charge, and a brief description of the fault, with the Speakeasy GSM.
4. Return your Speakeasy GSM to the address given.

This does not affect your statutory rights.

## **Battery information**

---

The rechargeable battery needs several charge and discharge cycles to reach full capacity! When the operating time becomes noticeably shorter than normal, it is time to buy a new battery.

Use only batteries & chargers approved by Binatone and unplug the charger when not in use. **(There is a risk of explosion if the lithium battery is replaced by an incorrect type or is not disposed of correctly.)** Don't leave the battery connected to a charger for more than 24hr - overcharging may shorten its life. If left unused a charged battery will discharge itself over time.

Temperature extremes affect the battery charge - try to keep the battery between 15°C and 25°C.

Use the battery only for its intended purpose.

Never use a damaged charger or battery.

Keep metal objects away from the battery terminals, as short-circuiting them may damage the battery or the connecting object.

Dispose of batteries according to local recycling regulations, not as household waste and not in a fire.

## **Additional safety Information**

### **Operating environment**

Follow regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger, e.g. when driving, on an aircraft, in a petrol station, in a hospital or any other area with warning signs.

### **Pacemakers**

Pacemaker manufacturers recommend keeping at least 20cm between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. This is consistent with independent research by and recommendations of Wireless Technology Research.

If you use a pacemaker, don't carry the phone in a breast pocket, use the ear opposite the pacemaker and if you suspect that interference is taking place, switch off your phone immediately.

### **Hearing aids**

Mobile phones may interfere with some hearing aids. In the event of interference, contact your hearing aid provider.

### **Other medical devices**

Any radio transmitting equipment, including mobile phones, may interfere with inadequately protected medical devices. Consult a physician or the medical device supplier to check if it is shielded adequately from external RF energy.

### **Placing the unit**

Do not place the handset in the area over an air bag or in the air bag deployment area.

Parts of the phone are magnetic and may attract small objects, so check there are no sharp items, particularly by the earpiece.

Do not place credit cards or other magnetic storage media near the phone, because information stored on them may be erased.

## **Emergency calls**

All mobile phones use radio signals and coverage in all areas cannot be guaranteed, so never rely solely upon your mobile phone for essential communications (e.g. medical emergencies). Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. You may need to turn those features off first before you can make an emergency call. Consult this guide and your network service provider.

### **To make an emergency call:**

Ensure the phone is switched on, is in idle mode and has a signal. Some networks require a valid SIM card is fitted. Dial the emergency number (e.g. 112, 999) and press **Talk**. When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your wireless phone may be the only means of communication at the scene of an accident - do not cut off the call until given permission to do so.

## Technical Data

---

<b>Standard:</b>	GSM Mobile
<b>Frequency Band:</b>	GSM900/DCS1800
<b>System:</b>	Phase 2+
<b>Operating Time:</b> <i>(with fully charged battery)</i>	Standby: approx.170 hours Talking: approx.4 hours
<b>Charging Time:</b>	<5 hours
<b>Temperature Range:</b>	Operating: 0 °C to 40 °C Storage: -20 °C to 60 °C
<b>Electrical Power Handset Battery:</b>	WiSEWOD- TJB-1 Li-ion 3.7V DC, 950mAh Battery Pack
<b>Travel Charger:</b>	Shenzhen Honor Electronic Co. Ltd. ADS-3V-06 05218GPG Input: 100-240V AC,50/60Hz, Max 0.3A Output: 5.2V DC, 350mA

*Binatone Telecom plc operates a policy of continuous product improvement, and so reserves the right to make changes to the product and functions without notice.*



Waste electrical products must not be disposed of with household waste. This equipment should be taken to your local recycling centre for safe treatment.

UK (BTP) Version 17, May. 2010

# Declaration of Conformity

BINATONE TELECOM PLC  
1 Apsley Way London NW2 7HF, United Kingdom.  
Tel: +44(0) 20 8955 2700 Fax: +44(0) 20 8344 8877  
e-mail: binatoneuk@binatone telecom .co.uk



## EC Declaration of Conformity

We the manufacturer / Importer : Binatone Telecom Plc  
1 Apsley Way London  
NW2 7HF, United Kingdom.

Declare under our sole responsibility that the following product

<u>Type of equipment:</u>	<u>GSM Mobile Phone</u>
<u>Model Name:</u>	<u>BB200</u>
<u>Country of Origin:</u>	<u>China</u>
<u>Brand:</u>	<u>Binatone</u>

complies with the essential protection requirements of R&TTE Directive 1999/5/EC on the approximation of the laws of the Member States relating to *Radio Spectrum Matters*, the Council Directive 2004/108/EC on the approximation of the laws of the Member States relating to *electromagnetic compatibility (EMC)* and the European Community Directive 2006/95/EC relating to *Electrical Safety*.

Assessment of compliance of the product with the requirements relating to the essential requirements according to Article 3 R&TTE was based on Annex III of the Directive 1999/5/EC and the following standard:

RF:	EN 301511 v9.0.2(2003-03)
EMC:	EN 301489-1: V1.8.1 2008 EN 301489-7: V1.3.1 2005
Health:	EN 50360:2001 EN 62209-1:2006
Electrical Safety:	EN 60950-1:2006+A11: 2009

All essential radio test suites have been carried out.

The declaration is under the responsibility of the manufacturer:

BEST SYSTEM (HK) LIMITED.

Chilling Industrial Zone, Houjie District, Dongguan, Guangdong, P.R.C.

The product is labelled with the European Approval Marking CE as show. Any Unauthorized modification of the product: voids this Declaration.

CE 0979

Manufacturer / Importer  
(Signature of authorized person)



London, 26 Apr 2010

Signature: (Paul Tsui, Product Operation Director)

Place & Date: