



5KSS1121



KitchenAid







English	5
Deutsch	00
Français	00
Italiano	00
Nederlands	00
Español	00
Português	00
Ελληνικά	00
Svenska	00
Norsk	00
Suomi	00
Dansk	00
Íslenska	00
Русский	00
Polski	00
Český	00
العربية	00







English

SPARKLING BEVERAGE MAKER INSTRUCTIONS

TABLE OF CONTENTS

SPARKLING BEVERAGE MAKER SAFETY

- Important safeguards 6
- Safe handling of your Sparkling Beverage Maker 7
- Machine rating specifications 8
- User licence for one SodaStream CO₂ Cylinder 8

PARTS AND FEATURES

- Parts and accessories 9

ASSEMBLING THE SPARKLING BEVERAGE MAKER

- Installing the SodaStream CO₂ Cylinder 10

USING THE SPARKLING BEVERAGE MAKER

- ~~Making sparkling beverages~~ 11
- ~~Making soda: adding flavouring (optional)~~ 12

CARE AND CLEANING

- Replacing the batteries 13
- Cleaning the Sparkling Beverage Maker 14
- Cleaning the bottles 14
- Replacing the SodaStream CO₂ Cylinder 15
- Removing the SodaStream CO₂ Cylinder 15

TROUBLESHOOTING 16

WARRANTY AND SERVICE 18



SPARKLING BEVERAGE MAKER SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

! DANGER

You can be killed or seriously injured if you don't immediately follow instructions.

! WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFEGUARDS

WARNING: When using this appliance, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. To reduce the risk of injury, close supervision is necessary when an appliance is used near children.
3. Use only attachments recommended or sold by the manufacturer.
4. Store Sparkling Beverage Maker indoors.
5. Do not use the CO₂ bottle if the bottle head valve assembly is damaged.

SAVE THESE INSTRUCTIONS

SPARKLING BEVERAGE MAKER SAFETY

Safe Handling of your Sparkling Beverage Maker

It is important that you read and understand all use and care instructions and the important safety information before operating this Sparkling Beverage Maker.

IMPORTANT SAFETY INFORMATION

CARBONATING BOTTLE:

- **▲ WARNING:** NEVER WASH THE CARBONATING BOTTLE IN THE DISHWASHER OR OTHERWISE EXPOSE IT TO HEAT ABOVE 49°C OR EXTREME COLD BELOW 1°C. DO NOT rinse the bottle in hot water. DO NOT place the bottle next to a heat source such as your kitchen stove. DO NOT leave the bottle in your car. DO NOT place the bottle in the freezer. Doing so will compromise the integrity of the carbonating bottle material and may result in serious personal injury.
- **▲ WARNING:** DO NOT use a carbonating bottle if changes in shape have occurred, as that indicates that the bottle is damaged. IF CARBONATING BOTTLES ARE MISTAKENLY WASHED IN THE DISHWASHER, DO NOT USE THEM. THROW THEM AWAY. USING BOTTLES THAT HAVE BEEN WASHED IN THE DISHWASHER OR BOTTLES THAT ARE SCRATCHED, WORN, DISCOLOURED, OR DAMAGED IN ANY WAY MAY RESULT IN SERIOUS PERSONAL INJURY.
- **▲ WARNING:** DO NOT USE THE SPARKLING BEVERAGE MAKER TO CARBONATE ANY LIQUIDS OTHER THAN PLAIN WATER. ADD FLAVOUR ONLY AFTER CARBONATION.
- **▲ WARNING:** DO NOT carbonate with any bottle not specifically designed to work with this Sparkling Beverage Maker.
- **▲ WARNING:** The carbonating bottle must be properly installed before operating the Sparkling Beverage Maker.
- **▲ WARNING:** DO NOT carbonate an empty carbonating bottle.
- **▲ WARNING:** Each carbonating bottle is clearly marked with an expiration date near the bottom of the bottle. DO NOT use bottles after their expiration date. Recycle and replace expired bottles in accordance with local recycling laws.

SODASTREAM CO₂ CYLINDER:

- **▲ DANGER:** A CO₂ leak can lead to carbon dioxide poisoning. In the event of a CO₂ leak, ventilate the area, breathe fresh air and if feeling unwell seek immediate medical attention.
- **▲ WARNING:** The SodaStream CO₂ Cylinder should be inspected prior to use for any dents, punctures, or other damage. If any are detected DO NOT use the cylinder and contact a SodaStream-authorized service representative.
- **▲ WARNING:** Mishandling the cylinder can result in serious personal injury.
- **▲ WARNING:** Use caution when removing the cylinder as it may be very cold immediately after use.
- **▲ WARNING:** Always keep the cylinder away from any heat source and out of direct sunlight.
- **▲ WARNING:** DO NOT transport the Sparkling Beverage Maker with the CO₂ cylinder in place.
- **▲ WARNING:** DO NOT tamper with the CO₂ cylinder in any way.
- **▲ WARNING:** DO NOT attempt to puncture or incinerate the CO₂ cylinder.
- **▲ WARNING:** DO NOT throw the CO₂ cylinder or cause it to fall.
- **▲ WARNING:** DO NOT handle a CO₂ cylinder while it is discharging CO₂.

GENERAL WARNINGS:

- **▲ DANGER:** Misuse of this Sparkling Beverage Maker may result in serious personal injury.
- **▲ WARNING:** Use the Sparkling Beverage Maker in an upright position on a flat, stable surface away from sources of heat. DO NOT place the Sparkling Beverage Maker on a hot surface (e.g. stove top).
- **▲ WARNING:** DO NOT move the Sparkling Beverage Maker during the carbonation process.



SPARKLING BEVERAGE MAKER SAFETY

Machine rating specifications

Maximum working pressure: 145 PSI / 10 Bar.

Maximum allowed operating temperature: 40°C.

Bottle capacity at fill line will be in the range of 400 ml / 1.0 litre

(varies by size and shape of carbonating bottle used).

Brimful bottle capacity will be in the range of 480 ml – 1.1 litre

(varies by size and shape of carbonating bottle used).

USER LICENCE FOR ONE SODASTREAM CO₂ CYLINDER

NOT FOR SALE PROPERTY OF SODA-CLUB (CO₂) SA - UNDER LICENCE

This is a legally binding document between Soda-Club (CO₂) SA of Switzerland or its affiliates and the consumer regarding the right to use a Soda-Club/SodaStream CO₂ Cylinder (the “CO₂ Cylinder”).

To protect users’ safety and health, various directives and regulations govern and regulate the use, refilling, maintenance, retesting, and repair of carbon dioxide pressure containers (CO₂ Cylinders).

SodaStream possesses the legally required knowledge and expertise to be responsible for strict legal compliance. This can only be guaranteed if the CO₂ Cylinders are **maintained**, examined, retested, and refilled by SodaStream. Thus, each CO₂ Cylinder **remains the property of Soda-Club (CO₂) SA, or its affiliates, and is provided under licence.**

1. When empty, please return the CO₂ Cylinder to either SodaStream or an authorised SodaStream retailer, either in exchange for a full CO₂ Cylinder, for the price of the CO₂ refill only, or for safe disposal. This Licence will continue to bind the use of each subsequent CO₂ Cylinder.
2. Refilling empty CO₂ Cylinders by third parties could be extremely risky. Unauthorised refilling might violate the law and SodaStream’s rights. SodaStream warrants the safety only of CO₂ Cylinders refilled by it, bearing a SodaStream safety seal on the valve.
3. If you return the CO₂ Cylinder to SodaStream or an authorised SodaStream retailer, in good condition, without exchanging it for a full one, a return fee will be payable to you. Contact your local SodaStream representative for details.
4. The CO₂ Cylinder, together with this User Licence, may be transferred to a third party provided the third party agrees to be obligated by the conditions and ownership rights expressed herein. Possession of the User Licence proves the right of its holder to use one CO₂ Cylinder under the terms herein.

The laws of the country in which the SodaStream CO₂ Cylinder was supplied will govern this licence.


For questions or comments, please contact SodaStream International BV, Provinciënbaan 16, 5121 DL Rijen (NL).



PARTS AND FEATURES

Parts and accessories

English

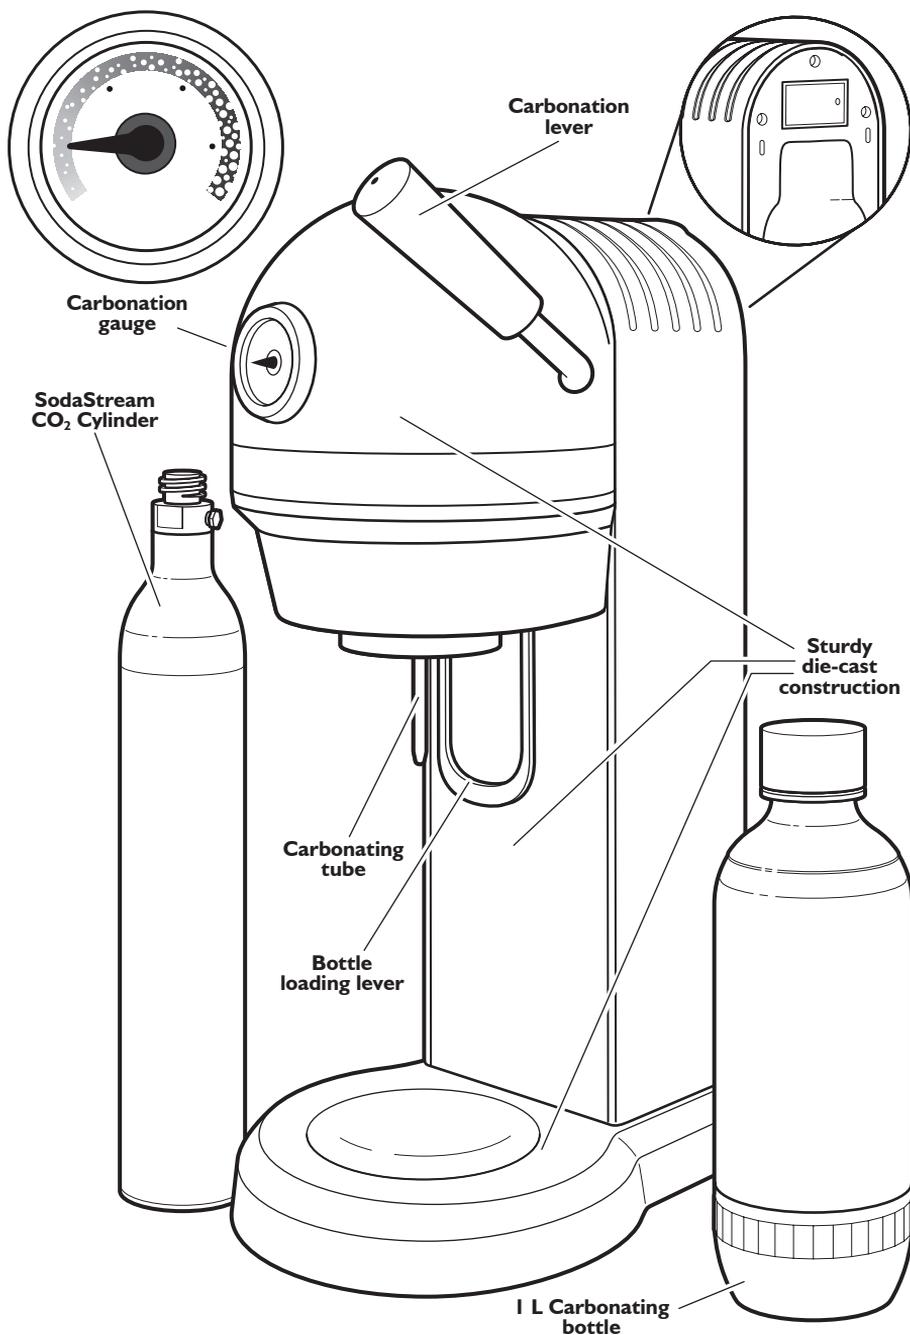

Carbonation gauge

Carbonation lever

SodaStream CO₂ Cylinder

Sturdy die-cast construction

Carbonating tube

Bottle loading lever

1 L Carbonating bottle






ASSEMBLING THE SPARKLING BEVERAGE MAKER

Installing the SodaStream CO₂ Cylinder

Before First Use

Place the Sparkling Beverage Maker on a flat, sturdy surface, in an upright position. Remove packaging materials.


The Sparkling Beverage Maker uses 3 AAA batteries. To replace batteries, see the "Care and Cleaning" section.

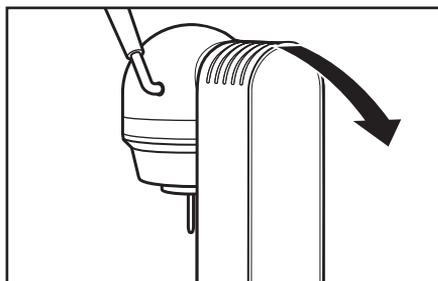


1 To remove back cover: Grasp back cover and pull away from unit. Set cover aside.



2 Remove seal and cap from SodaStream CO₂ Cylinder. Insert 60 L* SodaStream CO₂ Cylinder into the Sparkling Beverage Maker. First tip downward into the base and then push upward into the valve fitting.

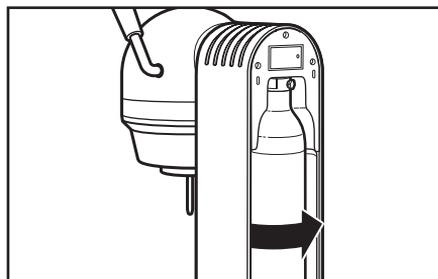

3 Turn the SodaStream CO₂ Cylinder counterclockwise until it stops. Hand-tighten only.

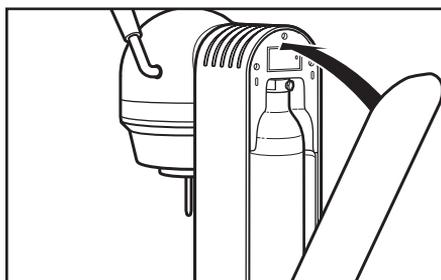

4 To reinstall back cover: tilt back cover toward you; insert bottom tab into slot and push cover into place.

* The 60 L SodaStream Cylinder produces up to 60 litres of sparkling water, depending on the level of carbonation.




USING THE SPARKLING BEVERAGE MAKER

Making sparkling water




- 1** Rinse the carbonating bottle before use. Prior to making sparkling water, fill bottle with water up to the fill line. For best results, carbonate chilled water. To avoid product damage, carbonate water only.

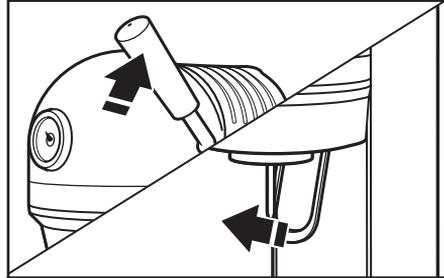


- 2** To insert bottle, make sure that the carbonation lever is in its fully upward position and the bottle loading lever is angled forward. If not angled forward, pull it toward you until it clicks. Do not pull carbonating tube.

⚠ WARNING: Do not carbonate an empty bottle.

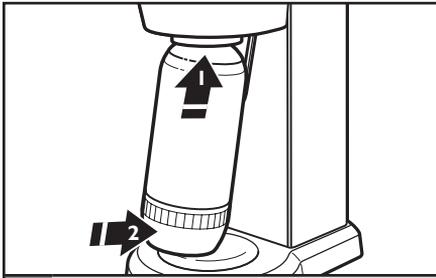

- 3** Insert bottle neck into the snap-lock. Firmly push bottle up and back. The snap-lock mechanism will catch the bottle firmly.

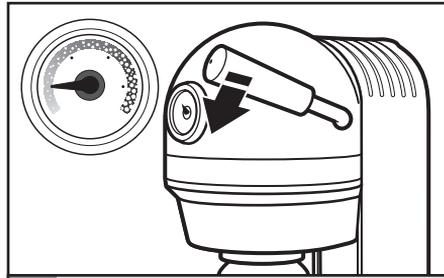


- 4** Carbonate in short pulses by pulling the carbonation lever down firmly and then allowing the lever to return to a middle rest position before repeating. Continue until the desired level of carbonation is achieved. Do not move the Sparkling Beverage Maker during the carbonation process.




English



USING THE SPARKLING BEVERAGE MAKER

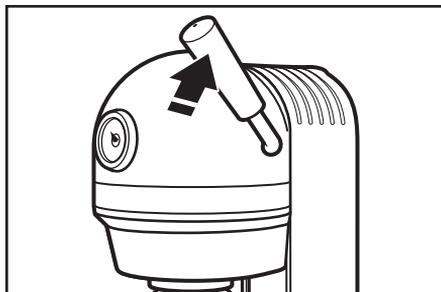

5 To release bottle, push Carbonation lever to its fully upward position. You will hear the sound of excess CO₂ discharge.

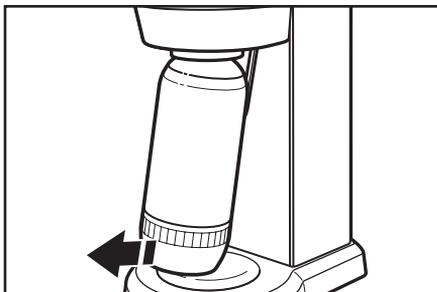


6 Pull bottle toward you to release bottle from snap-lock; the bottle will be released automatically.

▲ WARNING: Do not remove the bottle until after you hear the sound of excess CO₂ finish discharging.

Making sparkling beverages: adding flavouring (optional)*

All SodaStream flavours, including from SodaStream Caps* and Sodamix* can be added to the sparkling water in the carbonating bottles after using the Sparkling Beverage Maker.

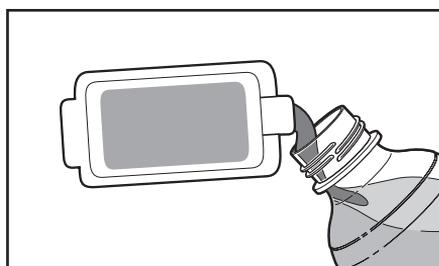

After carbonating, add your favourite flavour. See Sodamix package for instructions.


*Additional flavouring options sold separately.






CARE AND CLEANING


Replacing the batteries

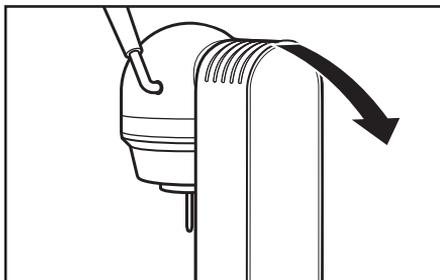

1 To remove back cover: Grasp back cover and pull away from unit. Set cover aside.

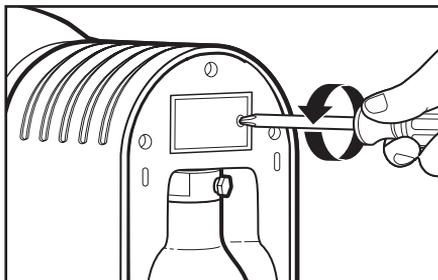

2 Use a Phillips screwdriver to loosen the screw holding the battery compartment cover plate in place.

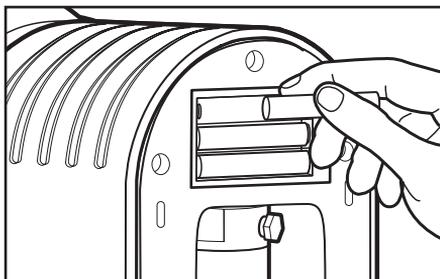


3 Replace three AAA batteries in the battery compartment, put the cover plate in place and secure with the screw.


English

CARE AND CLEANING

Cleaning the Sparkling Beverage Maker

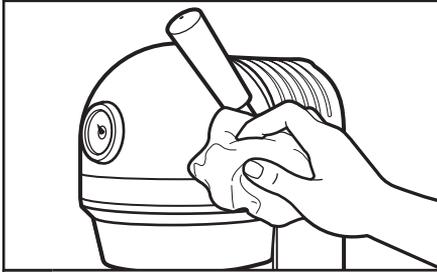

1 Never use abrasive cleaners or sharp tools to clean. If needed, use a mild hand dishwashing liquid and a soft, damp cloth to clean. Dry thoroughly.

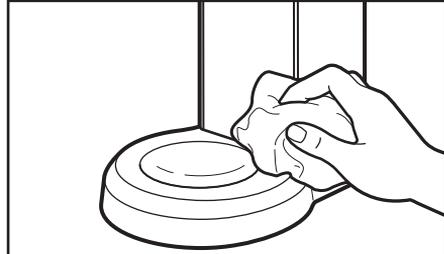


2 Wipe the exterior of the Sparkling Beverage Maker with a soft cloth. Wipe spills in base to keep base dry.

▲ WARNING: Do not place in water or in a dishwasher. Doing so will seriously damage your Sparkling Beverage Maker.

To avoid damaging the Sparkling Beverage Maker, do not place or store close to a heat source such as a stove top.

Cleaning the bottles

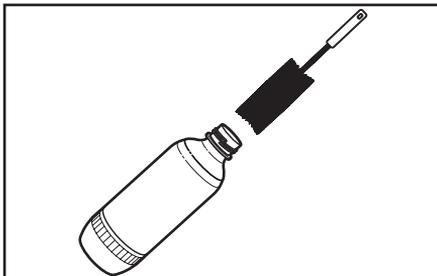

1 Do not wash carbonating bottles in the dishwasher. If desired, rinse carbonating bottles with cold or lukewarm water, but never rinse with hot water. If needed, use a mild hand dishwashing liquid and a soft-bristled brush to clean.

▲ WARNING

- Do not use bottle if damaged or deformed.
- Do not expose bottle to temperatures below 1°C or above 49°C.
- Do not wash bottle in dishwasher or hot water.
- Do not place bottles in the freezer.
- Do not use the carbonating bottle after the expiration date printed on the bottle.

See the “Sparkling Beverage Maker Safety” section for more information.




CARE AND CLEANING


Replacing the SodaStream CO₂ Cylinder

The SodaStream CO₂ Cylinder is provided to you under licence. See “User Licence for One SodaStream CO₂ Cylinder” section. The licence allows you to exchange your empty SodaStream CO₂ Cylinder for a full one at a participating SodaStream authorised retailer near you. For a list of SodaStream authorised retailers near you visit www.sodastream.com. See “Installing the SodaStream CO₂ Cylinder” section for instructions on how to install the new SodaStream CO₂ Cylinder.

Removing the SodaStream CO₂ Cylinder

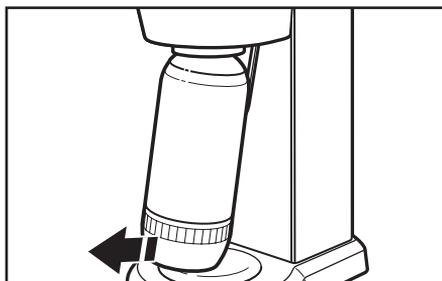

- 1 First remove the 1 L Carbonating bottle from the Sparkling Beverage Maker if you have already installed it.

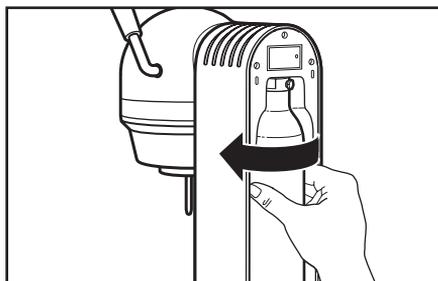

- 2 Detach the SodaStream CO₂ Cylinder from the Sparkling Beverage Maker by unscrewing towards the left.



TROUBLESHOOTING

IMPORTANT: Before you call for service, check the list of problems and solutions below:

1. Sparkling Beverage Maker does not work:

- You might be out of CO₂; replace your CO₂ Cylinder by exchanging it for a full SodaStream 60 L CO₂ Cylinder.
- Check that the carbonating bottle has been filled up with water to the fill line.
- Ensure that the Sparkling Beverage Maker is always in the upright position.
- CO₂ Cylinder may be loose. Do not use tools. Detach the bottle, open the rear cover, and retighten the CO₂ Cylinder. Apply firm pressure but do not over tighten. If the CO₂ Cylinder is already firmly in place, it may be empty. Replace with a full 60 L SodaStream CO₂ Cylinder.

▲ WARNING: Use caution when removing cylinder as it may be very cold.

2. Cannot pull bottle loader tab:

- Make sure Carbonation lever is in its fully upward position.
- Pull bottle loader tab firmly towards you.

3. Cannot install the carbonating bottle:

- Make sure the carbonating lever is in its fully upward position.
- Pull the bottle loader tab toward you until it clicks.
- Insert bottle into Snap-Lock
- Push bottle up and back until it locks.

4. You hear CO₂ escaping from the bottle during carbonation:

- Bottle may not be properly attached. Allow the Sparkling Beverage Maker to finish the carbonation process and then you can detach the bottle and reconnect it following the instructions in the “Making sparkling water” section.
- It is normal to hear a small amount of CO₂ discharge at the end of the carbonating process.

5. You want to re-carbonate a drink that was already carbonated:

▲ WARNING: Never carbonate again after you have added the flavour. You may recarbonate only unflavoured sparkling water.

6. If your Sparkling Beverage Maker continues to release CO₂ after carbonation is finished:

▲ WARNING: Do not remove the cylinder or the bottle. Leave the Sparkling Beverage Maker in an upright position. Do not touch it until you no longer hear CO₂ escaping.

When the Sparkling Beverage Maker is no longer releasing CO₂, remove the carbonating bottle, and call for service. See “Warranty and service” section for more information.



English

TROUBLESHOOTING

7. You hear CO₂ escaping from the Cylinder:

- There may be a pressure leak between the CO₂ Cylinder holder and the valve. Screw the CO₂ Cylinder tighter into its fitting. Do not use tools.

8. If you experience poor carbonation:

- If you have not yet added flavour, try to carbonate to a higher carbonation level.
- Check the CO₂ Cylinder. You might be out of CO₂.
- Make sure that you are carbonating chilled water.

9. Water overflows from the carbonating bottle during carbonation:

- Check that the carbonating bottle is filled just to the fill line.
- Verify that the carbonating bottle is firmly installed in the Snap-Lock. Check by gently pulling the bottom of the bottle. If it feels loose, then remove and reinsert.

10. If your sparkling drink is not flavourful enough:

- Just add more flavour to taste.
- Do not re-carbonate after adding the flavour.

11. Small pieces of ice appear in the water during carbonation:

- This might happen when carbonating very cold water. If this happens, shorten the time of each press until the ice stops appearing or it can affect the carbonation. Any ice created will simply melt.
- Ice can form and restrict the flow of CO₂ into the bottle during repeated heavy carbonation. Allow a few minutes between carbonating several bottles to maintain normal carbonation time.

▲ WARNING: If you suspect your Sparkling Beverage Maker is damaged, stop using it immediately and call for service. See “Warranty and service” section for more information.

12. The gauge is not working:

You may need to replace the batteries as shown in the “Care and cleaning” section.



WARRANTY AND SERVICE

KitchenAid Sparkling Beverage Maker warranty

Length of Warranty:	KitchenAid Will Pay For:	KitchenAid Will Not Pay For:
Europe, Middle East and Africa: Two years full warranty from date of purchase.	The replacement parts and repair labour costs to correct defects in materials or workmanship. Service must be provided by an Authorised KitchenAid Service Center .	A. Repairs when Sparkling Beverage Maker is used for operations other than normal household food preparation. B. Damage resulting from accident, alterations, misuse, abuse, or installation/operation not in accordance with local electrical codes.

KITCHENAID DOES NOT ASSUME ANY RESPONSIBILITY FOR INDIRECT DAMAGES.

Customer service

In U.K. and Ireland:

For any questions, or to find the nearest KitchenAid Authorised Service Center, please find our contact details below.

NOTE: All service should be handled locally by an Authorised KitchenAid Service Center.

Contact number for U.K. and Northern Ireland:

Freephone number 0800 988 1266 (calls from mobile phones are charged standard network rate) or call 01 942605504.

Contact number for Ireland:

Freephone number +44 (0) 20 8616 5148

E-mail contact for U.K. and Ireland:

Go to www.kitchenaid.co.uk, and click on the link "Contact Us" at the bottom of the page.

Address for U.K. and Ireland:

KitchenAid Europa, Inc.
PO BOX 19
B-2018 ANTWERP 11
BELGIUM

In other countries:

For all product related questions and after sales matters, please contact your dealer to obtain the name of the nearest Authorised KitchenAid Service/Customer Center.

www.KitchenAid.eu

© 2014. All rights reserved.
Specifications subject to change without notice.





KitchenAid

© 2014. All rights reserved.
Specifications subject to change without notice.

W10624164A

06/14

